



# Nikon Coolpix E5700 Rear LCD Replacement

Access and remove the LCD screen in the back of the camera.

Written By: Kyle Sitton



---

## INTRODUCTION

This guide will walk you through the necessary steps to access and remove the LCD screen in the Nikon Coolpix E5700.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Use your finger tip to slide the battery release tab toward the battery symbol on the E5700.
- Open the battery door.

## Step 2



- Pull the battery out of the E5700.
- i** It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.

## Step 3 — Rear LCD



- Remove two Phillips screws (3.4 mm) located on the left side of the screen.

## Step 4



- Remove two Phillips screws (3.4 mm) located on the right side of the screens.



## Step 5




- Remove back plastic monitor cover.

## Step 6




- Remove the Phillips screw on the top right side of the screen.

## Step 7

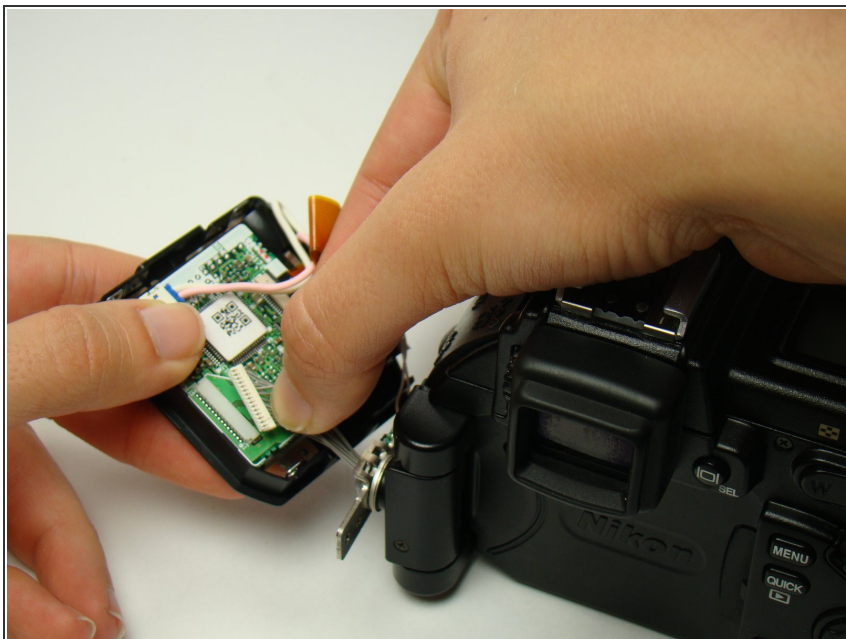


- Carefully unplug the grey bundle of wires in the white housing.

## Step 8

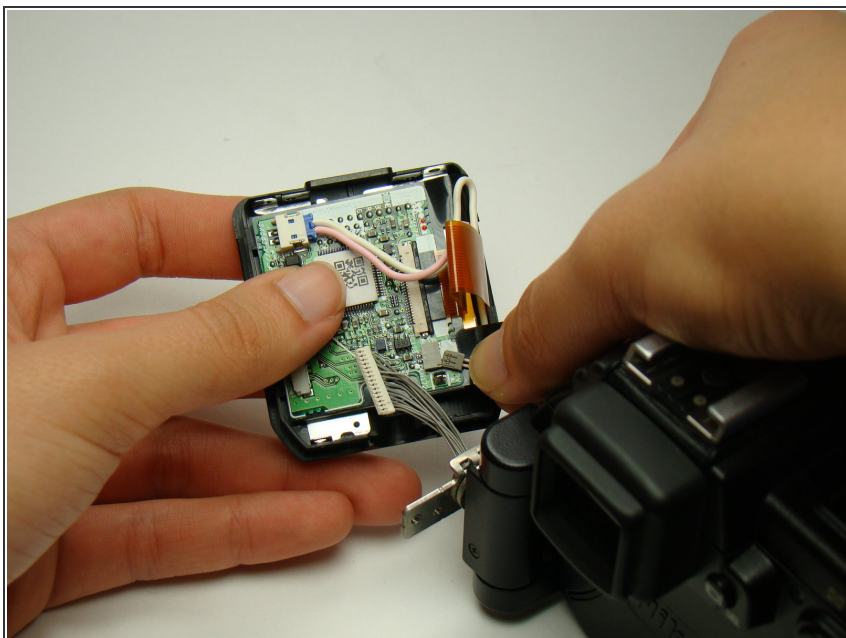

- Carefully unplug the small pink and wires in the grey housing.

## Step 9

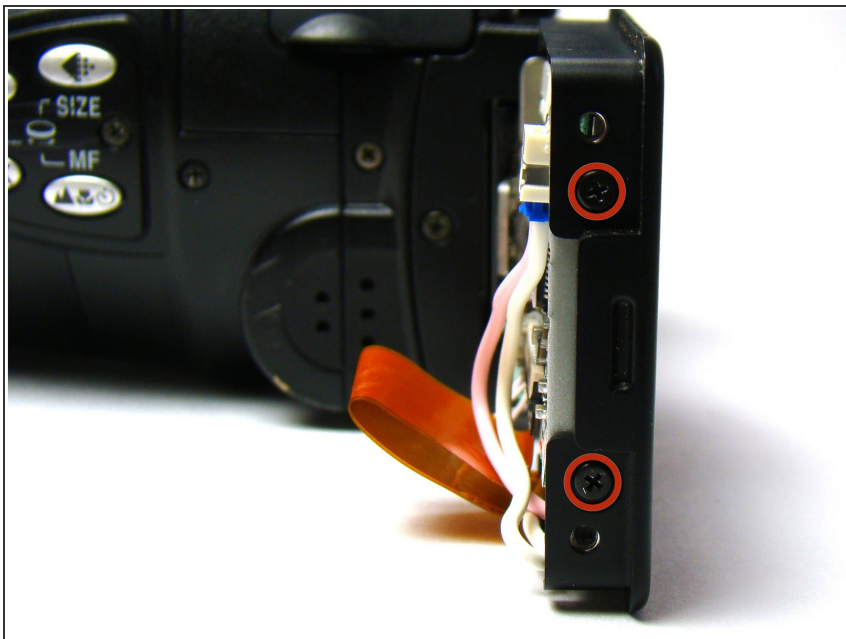

- Remove the two Phillips screws on the left side of the screen.

## Step 10



- Remove the metal bar on the left side of the screen.
- Remove the screen from the front plastic housing.

To reassemble your device, follow these instructions in reverse order.