



Acer Chromebook CB3-111-C670 Battery Replacement

Replace a faulty battery in the Acer Chromebook CB3-111-C670.

Written By: Tony



INTRODUCTION

Use this guide to replace the battery in your Acer Chromebook CB3-111-C670.

If your Acer Chromebook CB3-111-C670 is experiencing power issues, taking longer to charge, or overheating, it may be time to replace its battery.

1. Start by inspecting your charging cord. Wear and tear on your charging cord could mimic battery issues.
2. Inspect the screen of your device for damage. A broken screen could prevent the display from turning on.
3. Plug your charging cord into the device (and outlet). If the charging light does not come on, this may indicate a faulty battery.

This guide will walk you through each step to successfully replace the battery on your Acer Chromebook CB3-C670. Prior to starting this repair, make sure to back up any files, power off the device, and unplug from the power source.

Be sure to check the [troubleshooting page](#) prior to starting any repair.



TOOLS:

- [iFixit Opening Tool](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Acer AC14B18J Replacement Laptop Battery](#) (1)
- [Acer Chromebook CB3-111-C670 Battery](#) (1)
- [Acer Chromebook CB3-111-C670 Lower Case](#) (1)


Step 1 — Battery



⚠ Be sure to have completely shut down the device before attempting to open it.

- Remove the twelve Phillips #00 screws.

Step 2

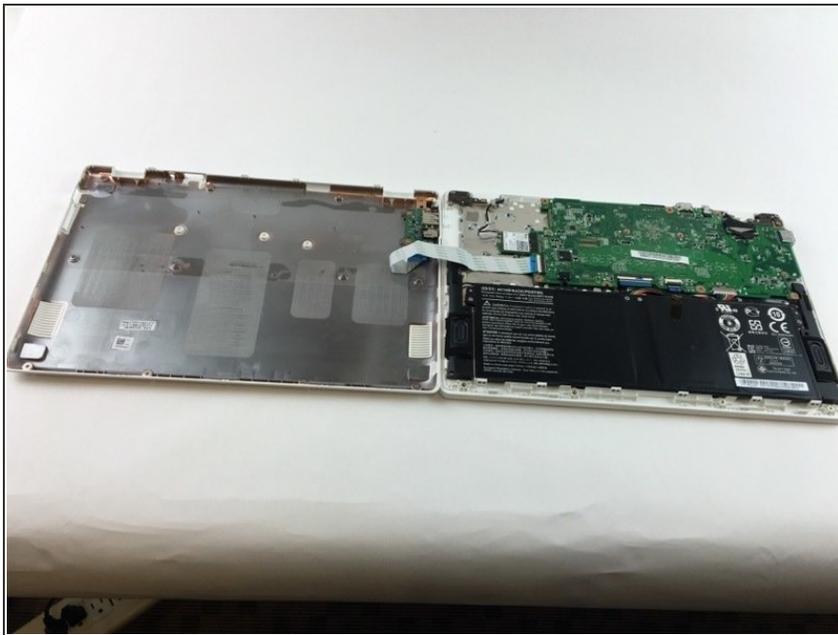


- Insert a prying tool in between the top and bottom pieces of the laptop case to pry them apart but *do not remove the lower case*.
- Carefully open the case to the left to avoid ripping the interior ribbon cable.

Step 3



- Pull the battery connector cable towards the battery to disconnect it.

Step 4

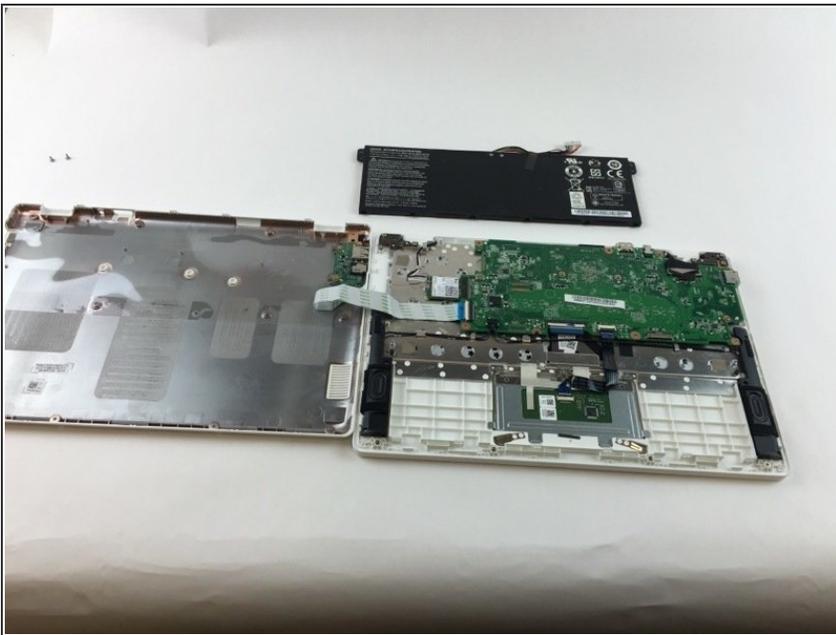

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.