



Nerf N-Strike Elite Retaliator Trigger Spring Replacement

This guide shows how to disassemble the blaster to replace this component.

Written By: ericharman



INTRODUCTION

A displaced or damaged firing spring could render your blaster futile in combat. Periodic replacement as a preventative maintenance strategy may allow you to avoid this unfortunate situation.

Modifying your blaster is not advised and may void the manufacturer's warranty in certain states.

This blaster is equipped with a rifled barrel for maximum performance.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Case Disassembly



- While holding the blaster, rotate the barrel assembly in the counter-clockwise direction and pull away from the blaster.

Step 2




- Remove the stock of the blaster by pushing the orange tabs downward while pulling the stock away from the blaster.

Step 3



- Remove the magazine from the blaster by forcing the sliding mechanism backwards, pushing the orange tabs downward, and pulling the magazine away.

Step 4

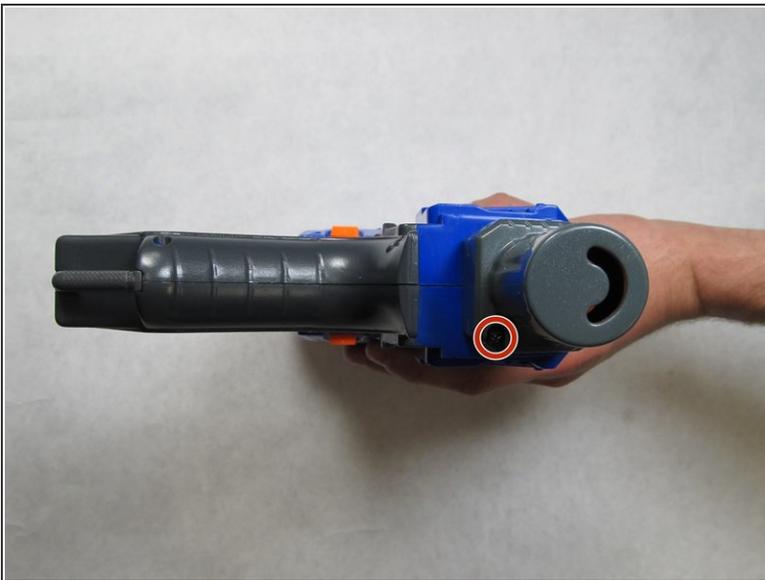

- Remove the stock attachment point by removing the two 8mm Phillips head screws.

Step 5



- Remove the eleven 8mm and two 10mm Phillips head screws from the left side of the blaster, and carefully remove the outer casing.
- ⓘ Two of the screws must be removed with the sliding mechanism in the forward position. Another two must be removed with the sliding mechanism in the back position.
- ⚠ There are several springs that may become displaced during this procedure. Proceed with the utmost caution.

Step 6 — Trigger Spring



- Carefully pull the orange trigger upward and backward to remove it from the blaster.
- ⚠ This component is under spring pressure. Wear appropriate personal protective equipment to shield your eyes.
- Remove the spring from the rear of the trigger.

To reassemble your device, follow these instructions in reverse order.