



Nerf N-Strike Elite Retaliator Spring Replacement

Replace the spring of the Nerf N-Strike Elite Retaliator.

Written By: ericharman



INTRODUCTION

A fatigued spring can be detrimental to your blaster's performance. This guide shows how to disassemble the blaster to replace this component. There many small components such as screws and springs that will be removed in this procedure. Be sure to record their locations for easy reassembly.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Case Disassembly



- While holding the blaster, rotate the barrel assembly in the counter-clockwise direction and pull away from the blaster.

Step 2




- Remove the stock of the blaster by pushing the orange tabs downward while pulling the stock away from the blaster.

Step 3



- Remove the magazine from the blaster by forcing the sliding mechanism backwards, pushing the orange tabs downward, and pulling the magazine away.

Step 4

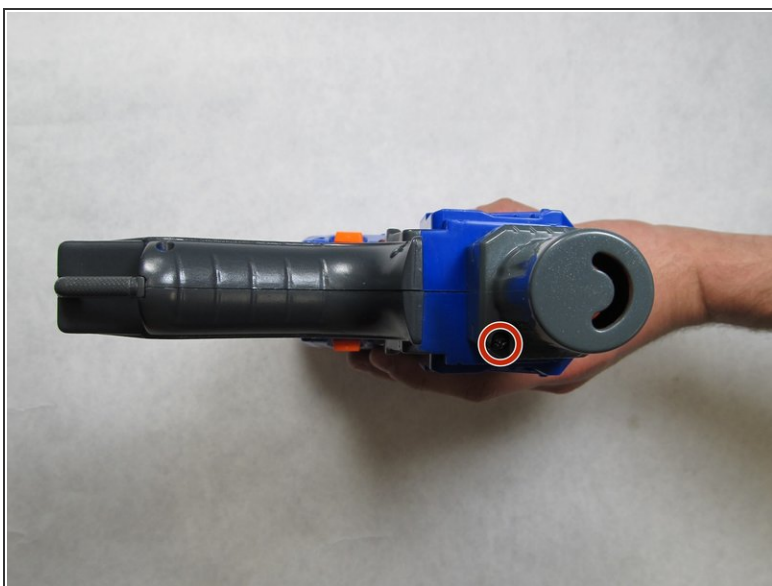


- Remove the stock attachment point by removing the two 8mm Phillips head screws.


Step 5



- Remove the eleven 8mm and two 10mm Phillips head screws from the left side of the blaster, and carefully remove the outer casing.
- ⓘ Two of the screws must be removed with the sliding mechanism in the forward position. Another two must be removed with the sliding mechanism in the back position.
- ⚠ There are several springs that may become displaced during this procedure. Proceed with the utmost caution.

Step 6 — Remove Old Firing Spring

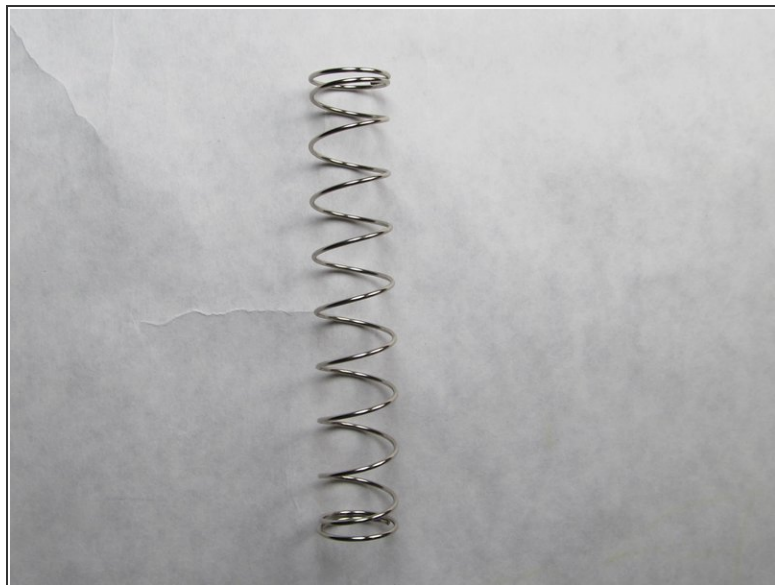

-  The spring may be compressed. If so, carefully release spring pressure before proceeding.
- While holding down the white Plunger tube, pull the spring backwards to remove it from the blaster.

To reassemble your device, follow these instructions in reverse order.