




Sonos Connect WIFI Card Replacement

This guide will show the necessary steps to replace the internal WIFI card in your Sonos Connect.

Written By: Clark Snyder

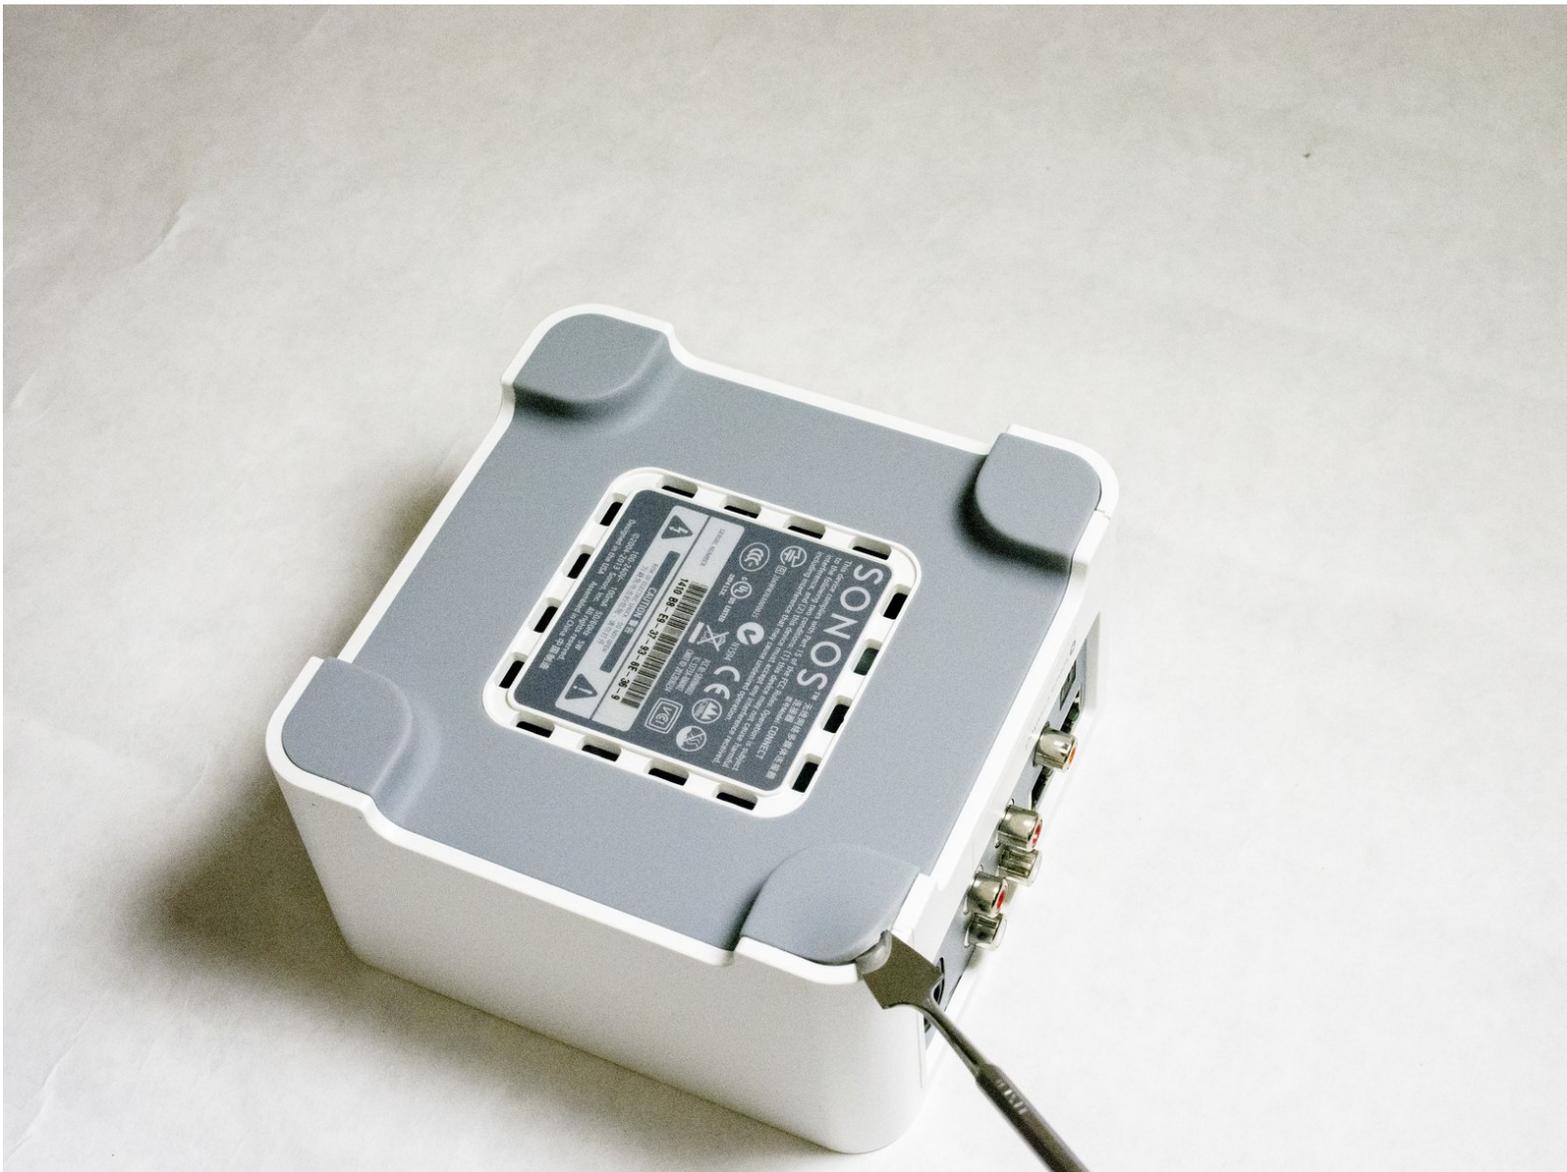

INTRODUCTION

If the troubleshooting guide for the WIFI problems hasn't fixed your issue, this guide is for replacing the WIFI card in your Sonos Connect.

TOOLS:

- [Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — WIFI Card



- Start by using a spudger or plastic opening tool to remove the bottom cover.

 When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.


- Once enough of the glue is removed, peel the cover off by hand,

Step 2



- Remove the four 7.5mm length Philips head screws under the rubber cover.

Step 3

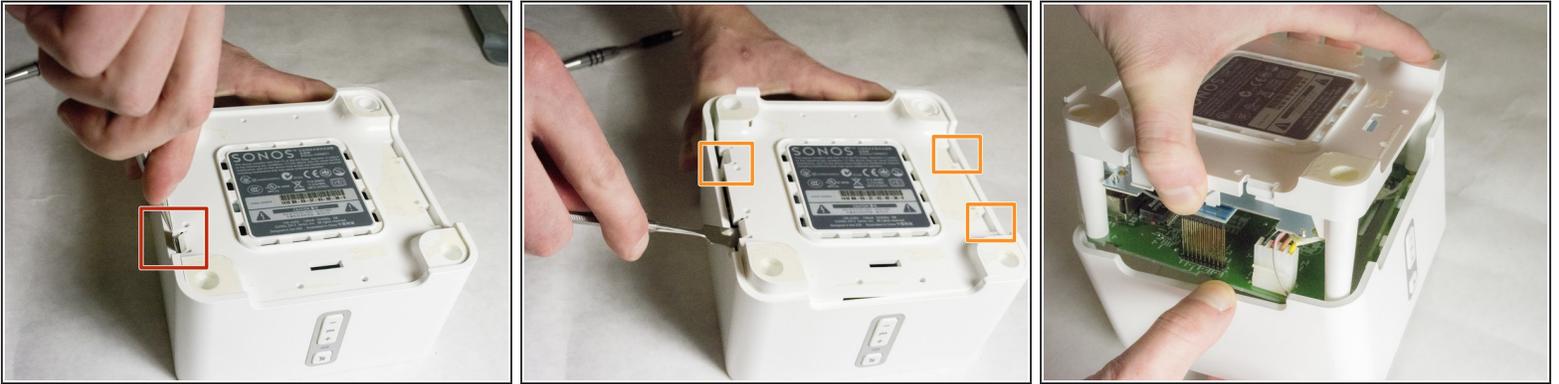



- Use a nylon spudger to unsnap the bottom from the sides.
- Pry until the remaining three points are unsnapped.
- Once unsnapped, lift the cover.

Step 4





- Remove the connection for the front buttons to fully remove the cover.

Step 5

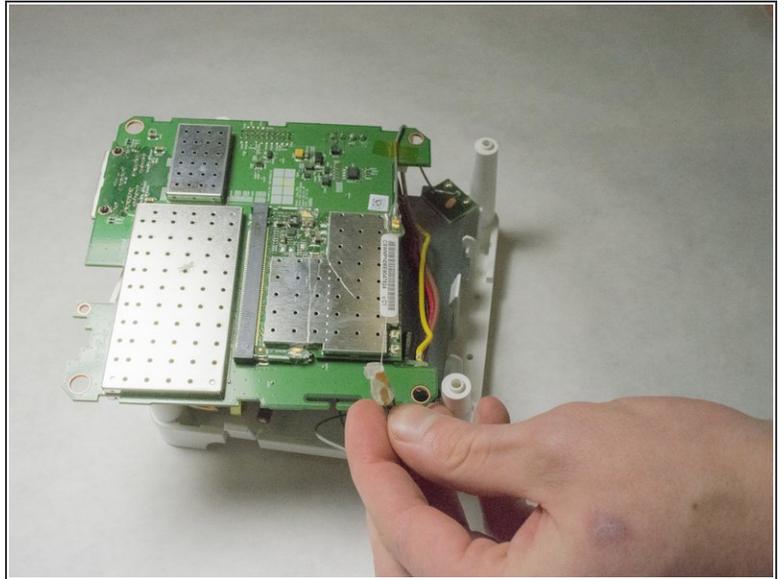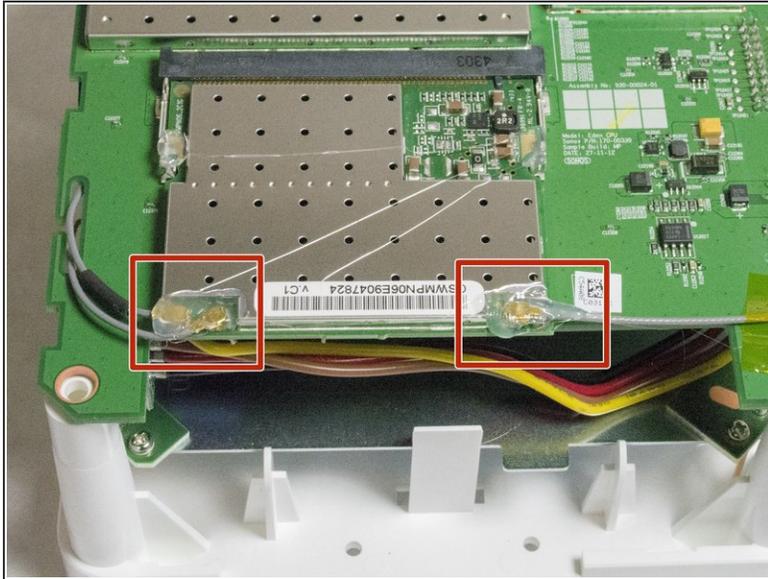


- Use a plastic opening tool or spudger to remove the adhesive covering the the WIFI connectors.
- Gently pull the wires at the connection point to disconnect them from the motherboard.

Step 6

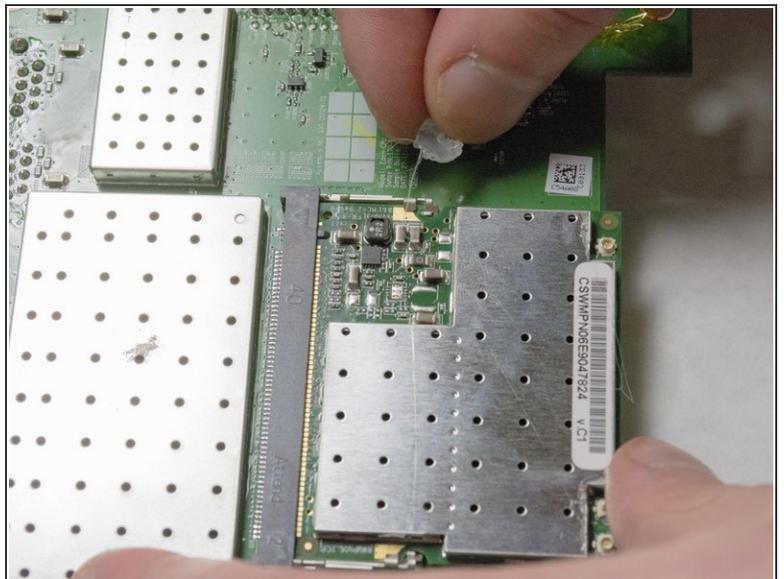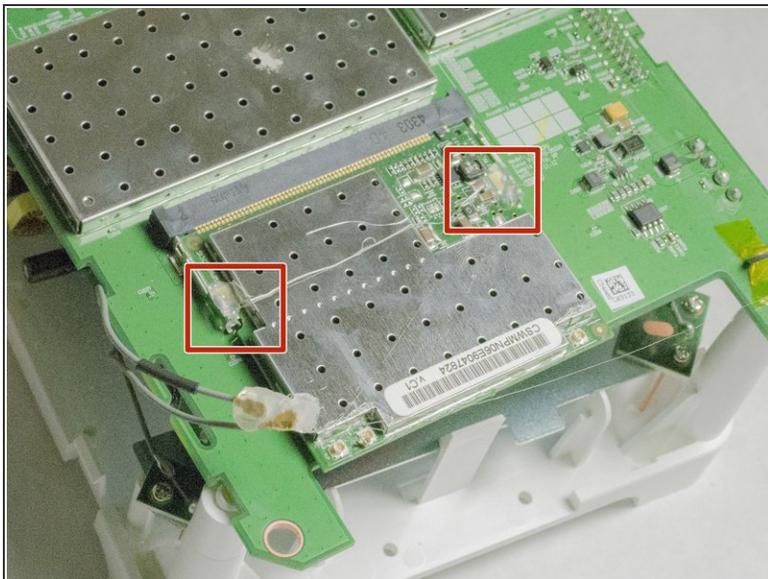

- Remove the two pieces of glue holding the WIFI card in place.

Step 7

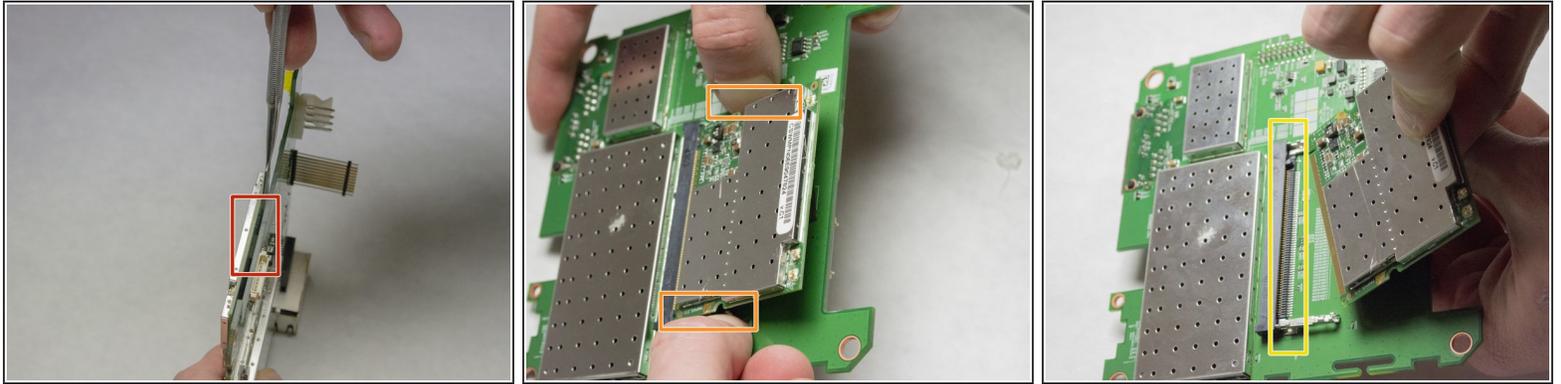

- Scrape the glued pad underneath the WIFI card to separate the card from the board.
 - Push apart the two clips holding the WIFI card in the connection.
 - Pull the WIFI card out of the connection.
- When putting the new WIFI card in, put the card in the connector first, then push downward until it clicks.

To reassemble your device, follow these instructions in reverse order.