




# Nerf Dart Tag Swarmfire Motor Spring Replacement

The purpose of this guide is to help users find and replace the motor spring.

Written By: Sonal Purohit

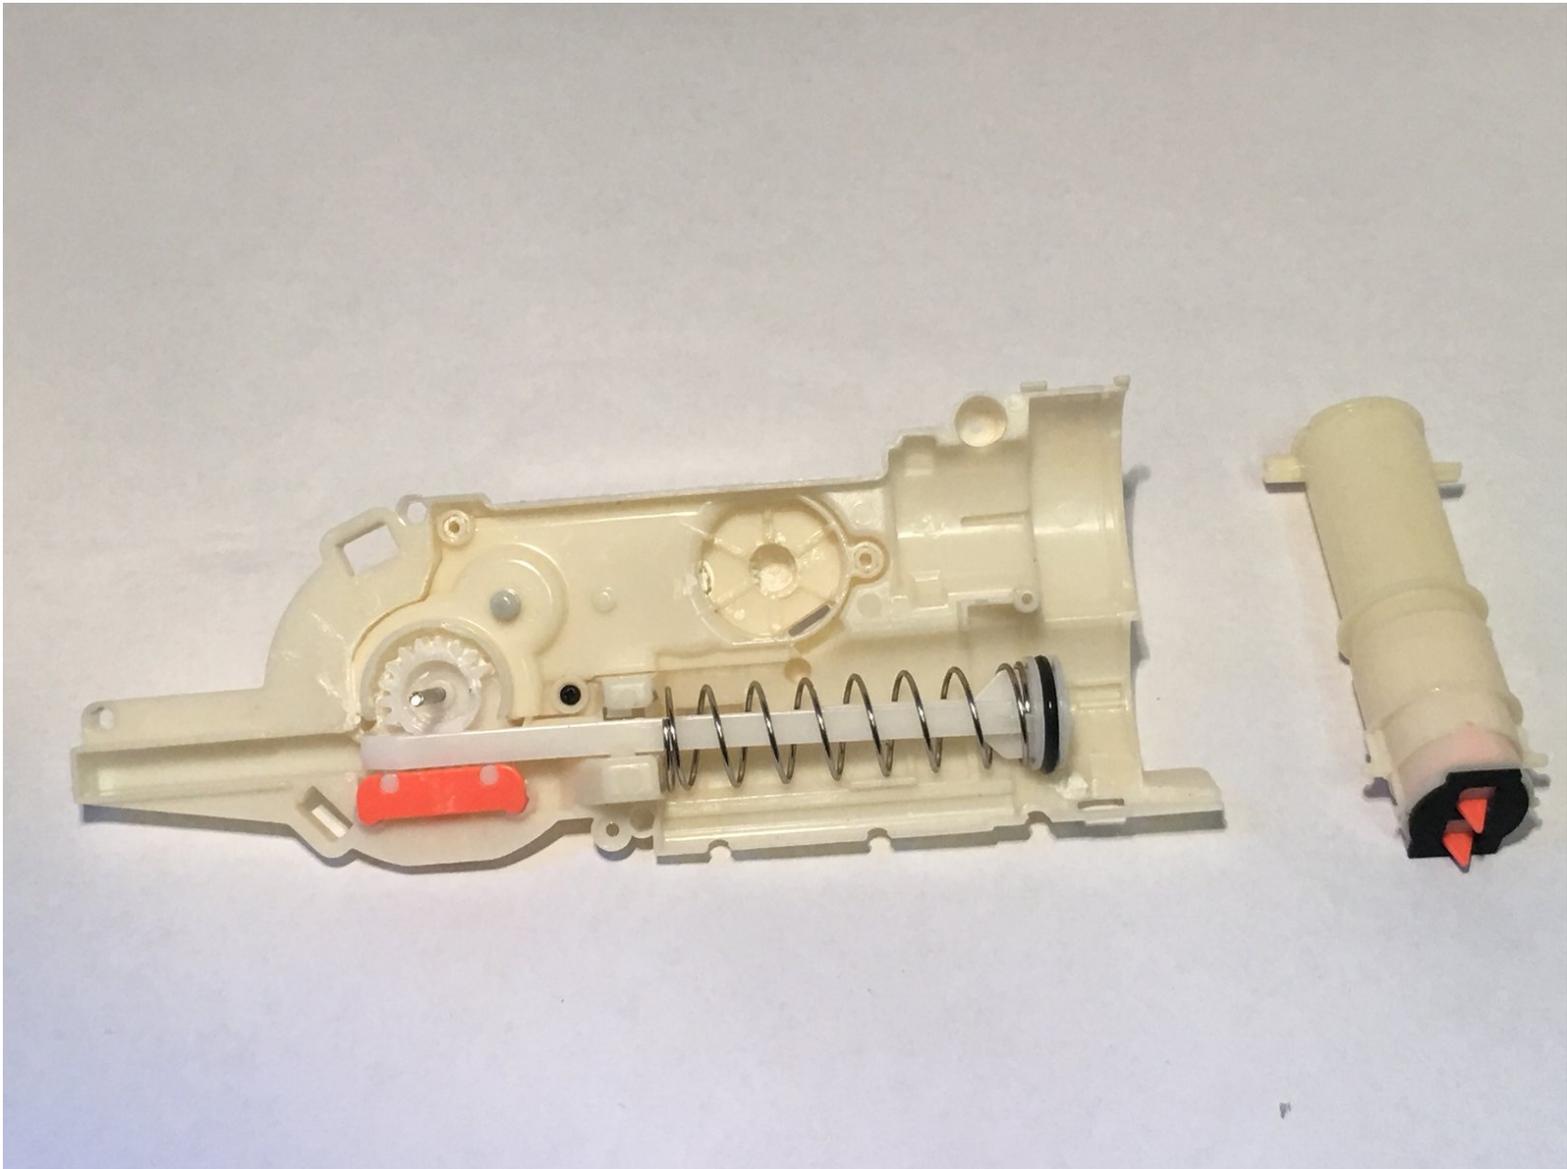

---

## INTRODUCTION

This guide will help you find and replace the motor spring.

---

### TOOLS:

- [64 Bit Driver Kit](#) (1)
  - [J1 Screwdriver Bit](#) (1)
  - [Magnetic Project Mat](#) (1)
-

## Step 1 — Motor Spring Replacement



- Using the JIS #1 screwdriver, loosen the nine screws, holding the outer yellow shell in place
  - ⓘ The screwdriver you'll be using is a J1 head from the 64 Bit Kit.
  - ⓘ Be sure to sure to use the Magnetic Project Mat to prevent loss of the screws.

## Step 2



- Lift off the outer yellow shell.

### Step 3




- Remove the screw holding the battery compartment shut.
- Lift off the inner blue casing

### Step 4




- Lift off the blue casing, exposing the white motor spring compartment.
- Loosen and remove the three screws holding the white compartment door shut.

## Step 5

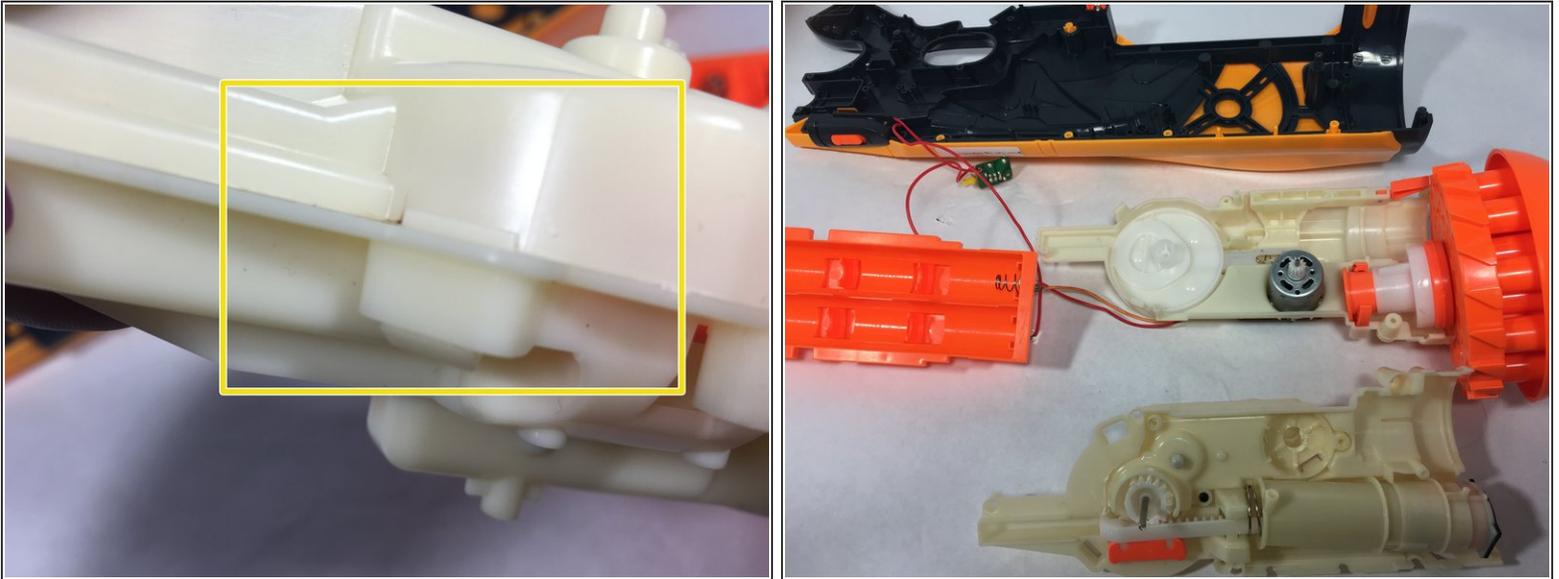

- Unsnap the white compartment into two pieces.

## Step 6

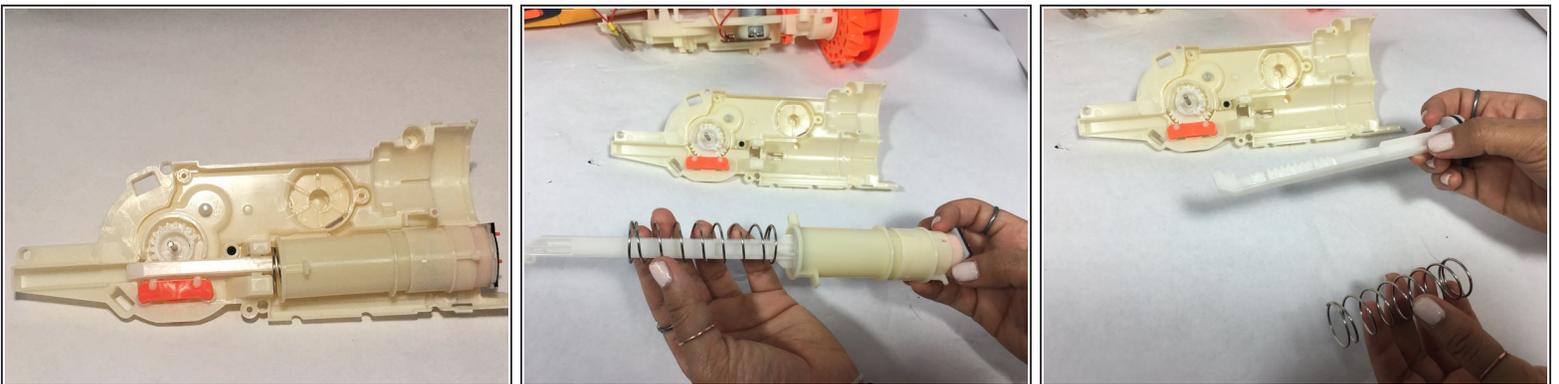

- Remove the motor spring located inside the rotating barrel and replace.

To reassemble your device, follow these instructions in reverse order.