

# Palm m105 Display Screen Replacement

This guide will help you to replace the screen display on your Palm m105.

Written By: Erik Thompson





• T5 Torx Screwdriver (1)

## Step 1 — Display Screen



- Remove protective flap by pulling directly out from the top.
- The two clips will pop out

### Step 2



- Remove Faceplate. There is a tab where the finger is located in the picture that needs to be pulled up.
- The Faceplate will then easily lift off.

## Step 3





- Using a a T5 Torx bit screwdriver, remove the four screws located on the back of the device turning counter clockwise.
- The link to purchase this screwdriver is Located here.

# Step 4




 This is what the device looks like once you have taken the screws out and opened the device.

### Step 5




- The Motherboard and screen will pop out of the back case easily.
  - Be careful when doing this step, the components are fragile.

### Step 6

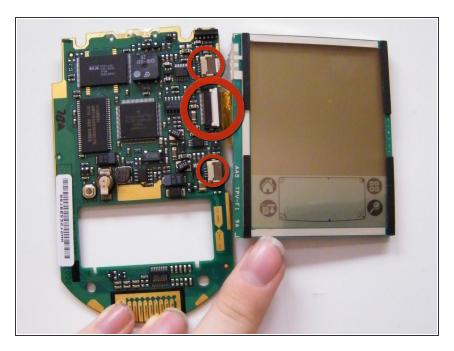

- To remove the screen from the motherboard there are going to be three tabs that need to pulled up.
- \*\* This step needs to be done with special care because it is very fragile.\*\*
- Once they are all three popped up the motherboard and screen will separate easily.

# Step 7

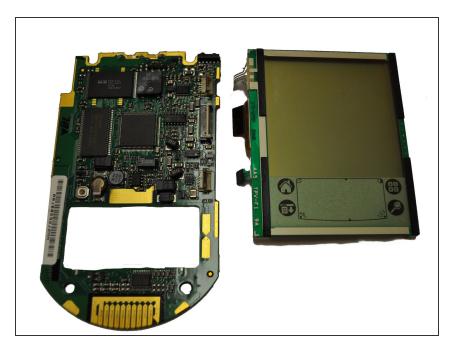

- Click here for <u>Palm m105 screen</u> <u>replacement</u>
- Now that the screen and motherboard are separated you may discard the broken screen. The best way to dispose of the broken screen is to: Recycle it

To reassemble your device, follow these instructions in reverse order.