



Acer Aspire One 532h-2527 Battery Replacement

This guide will show how to replace the battery for the Acer Aspire One 532h-2527.

Written By: Erica Romero



INTRODUCTION

This guide will show how to replace your netbook battery. To prevent getting shocked or damaging any components it is important to always remove the battery before performing any repairs. Over time your battery may lose its ability to hold charge, if this is the case you may need to replace it.

Step 1 — Battery



- Press the power button to turn off the netbook.

Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

Step 3



- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

Step 4



- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

To reassemble your device, follow these instructions in reverse order.