


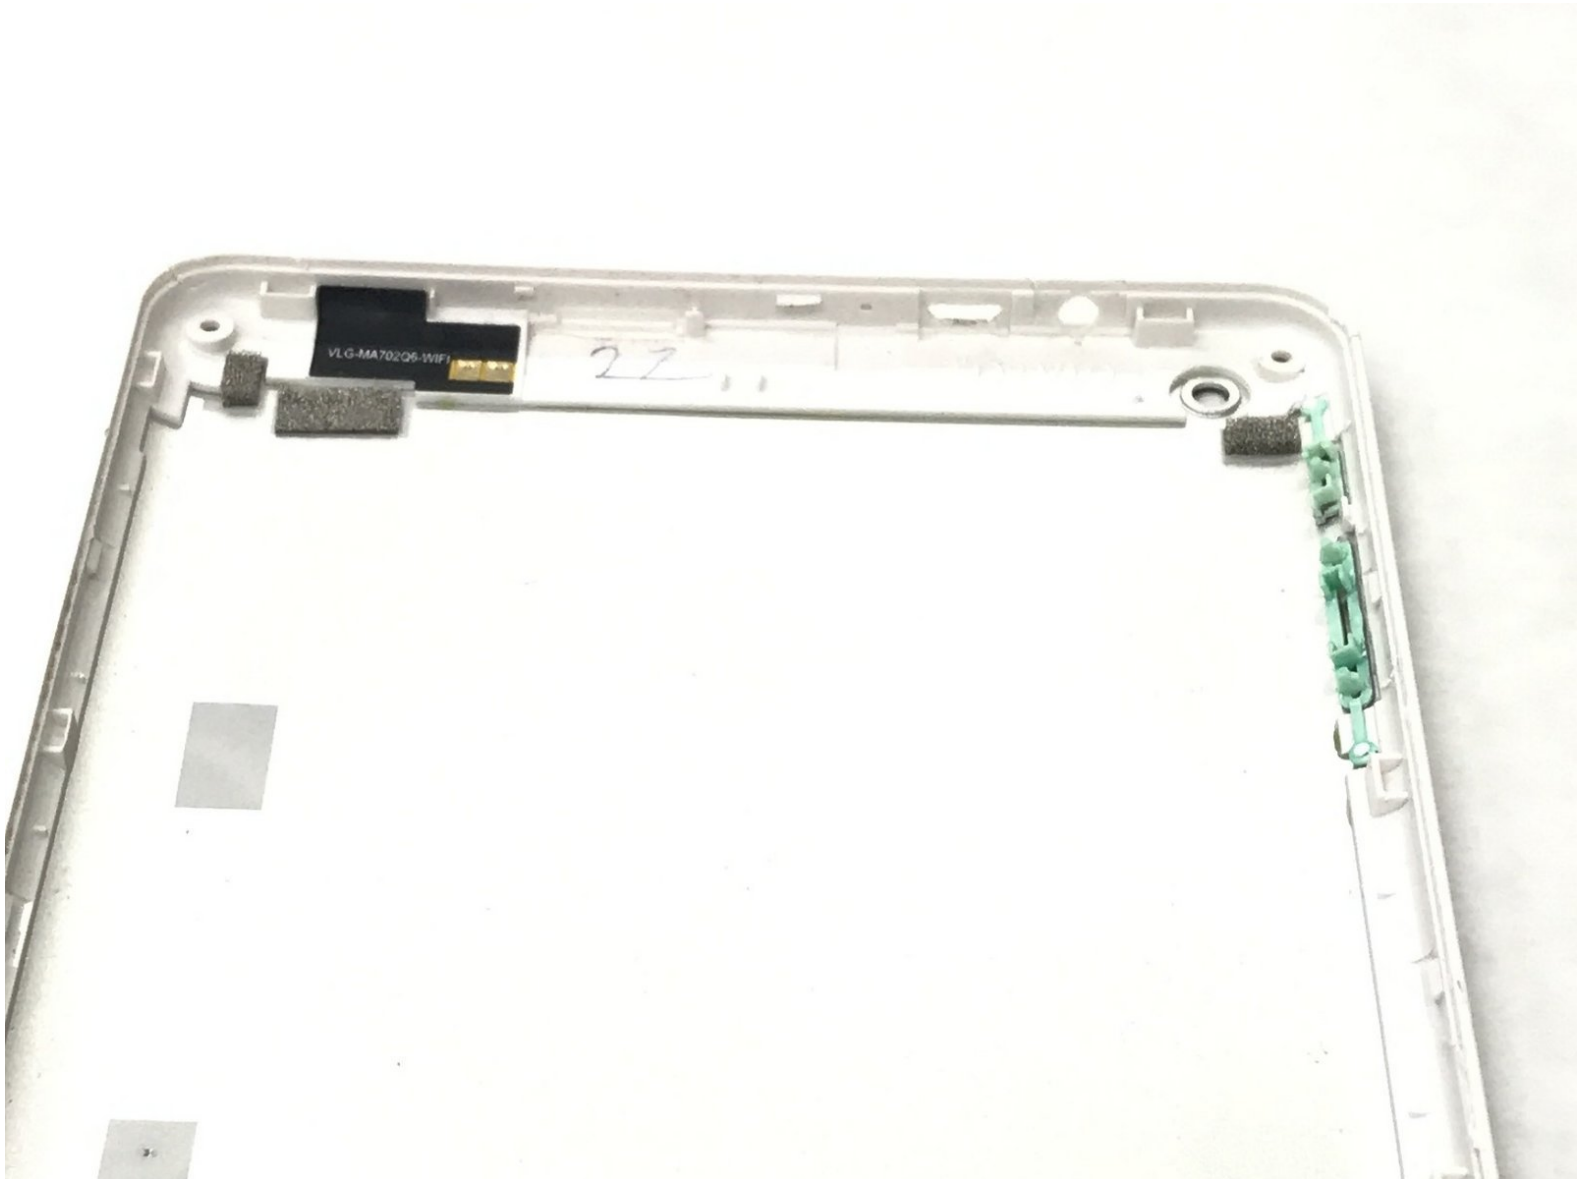

HP 7 Plus 1302 Power and Volume Button Replacement

This guide will show you how to replace the power and volume buttons on the HP 7 Plus 1302

Written By: Shannon Suttles



INTRODUCTION


If the device buttons are unresponsive then it may be necessary to replace them. The most difficult step will be removing the back cover, it is important to make sure you have all tools required and follow the instructions precisely.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-



Step 1 — Back Cover

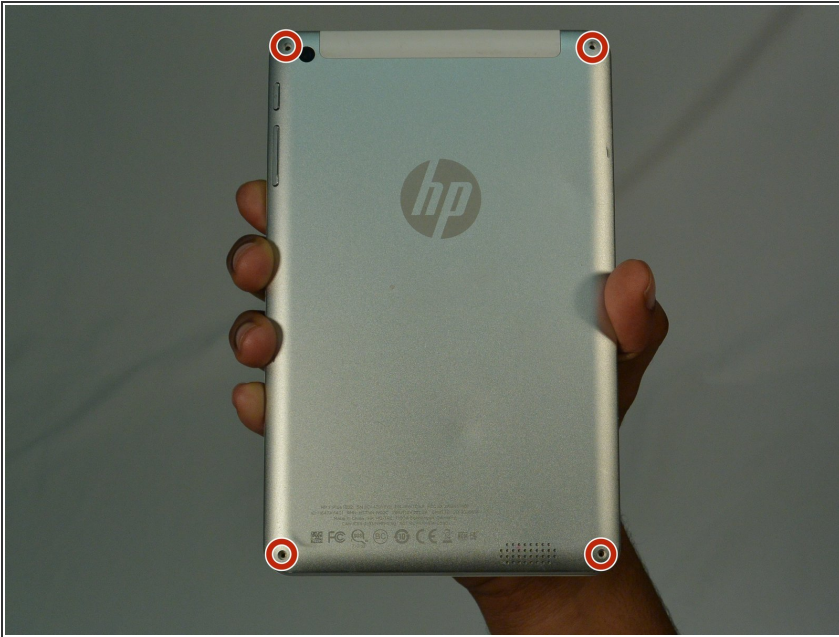

- Using the T5 Torx Screwdriver, remove the T5x3mm screws located in all 4 corners.

⚠ Device should be turned off and unplugged before starting the replacements.

Step 2

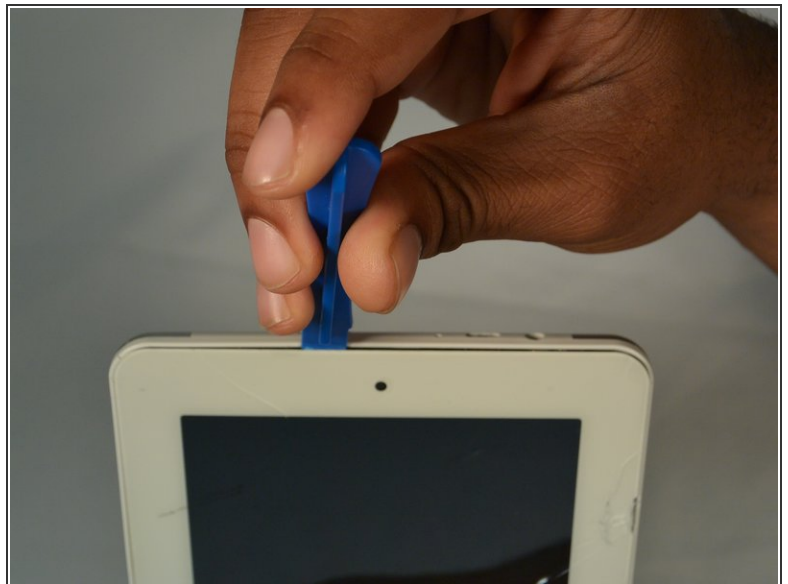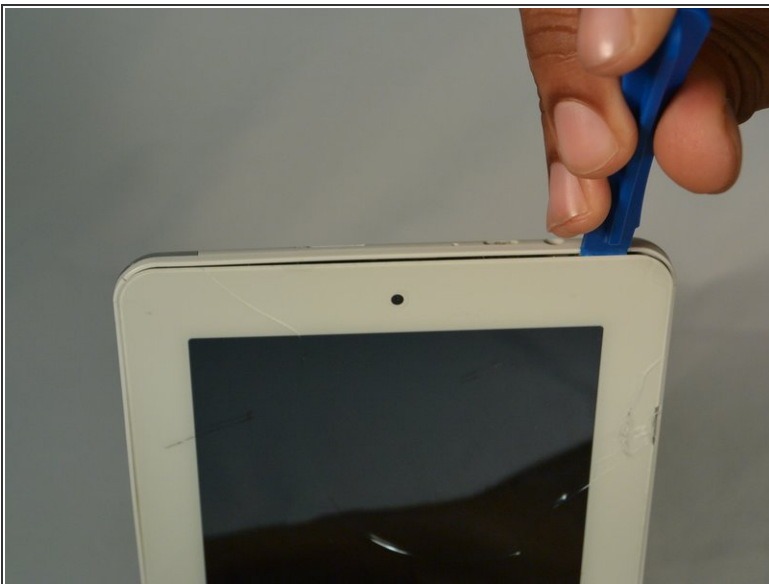

- Use the plastic opening tool to push in between the front and the back of the tablet.
- Slide the plastic opening tool around all 4 sides of the tablet to separate the back cover.


⚠ Be careful when you are trying to remove the back as it can damage the screen if you force it too much.

Step 3



- Continue sliding the plastic opening tool around the tablet until all 4 sides are separated from each other.
- Remove the back cover.

Step 4 — Power and Volume Button

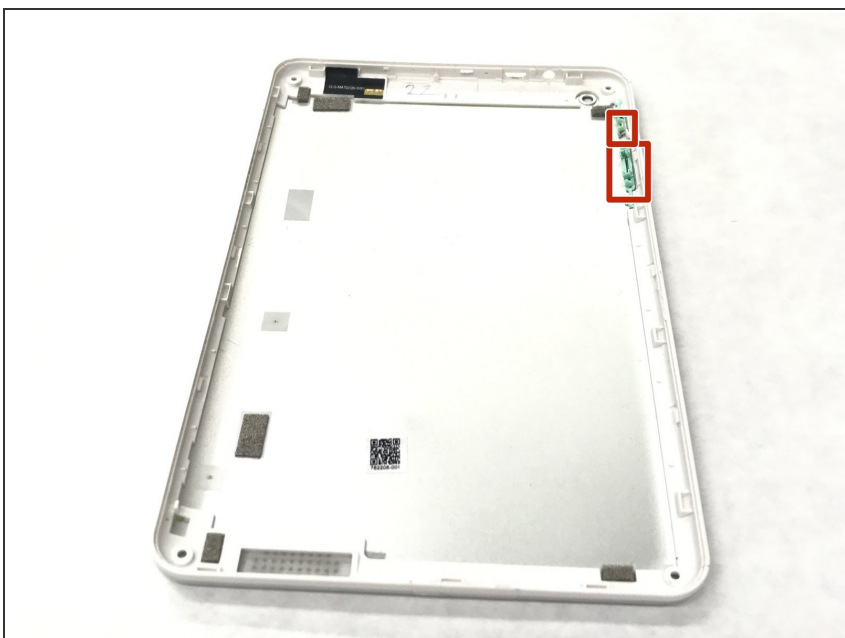

- Locate the power and volume buttons on the right side

Step 5



- Pop out the power and volume buttons with your hands

To reassemble your device, follow these instructions in reverse order.