



Felco Gartenschere - Pruners Disassembly

It is easy to disassemble and replace all parts. The blade can be sharpened and greased.

Written By: VauWeh



INTRODUCTION

These scissors require a little maintenance. The blade must be sharpened, rust marks removed and the joint lubricated.

TOOLS:

- [Gabelschlüsselset](#) (1)
-

Step 1 — Various types available



- There are several types - e.g. also for left-handers, here a Felco Nr 4 is shown.

Step 2 — Release mother



- First, the upper nut SW 13 is released, then the scissors is turned over.
- The spring can be easily removed.

Step 3 — Release screw from below



- Now the hinge screw can be unscrewed. Here SW 14 is used. Next to it lies the spring and the lock nut.
- Now the scissors can be completely disassembled.
- The blade is pinned with three bolts in the handle half and usually dissolves easily.

Step 4 — The items



- The scissors are disassembled. We see the pivot nut, the hinge screw, the spring, the two handles and the blade.

Step 5 — maintenance



- The blade is ground on one side. Sharpen the beveled edge with about 15 degrees, only deburr the straight edge with a maximum of 5 degrees.
- The parts should be free from rust and freshly oiled or greased.

Repeat the steps in order to reassemble your device.