



DeWalt DW936 Saw Blade Replacement

Replacing the saw blade on DeWalt DW936

Written By: Scott Weinhardt



INTRODUCTION

This guide will show you the necessary steps to replace the saw blade. The blade is not included in these pictures.

Step 1 — Saw Blade



- Take out the Allen Key that is located on the front of the saw below the smooth control handle on the top of the saw.

Step 2



- Use the Allen Key to replace to loosen the bolt where the center of the saw is/would be.

Step 3



- Remove the circular nut that is used to hold the saw blade in place. It slide right off.

Step 4



- Lift up the plastic cover on the bottom to expose the bottom slot on the saw.

Step 5



- Place blade on the peg in the middle of the saw. The peg has two flat sides as does the saw hole to prevent slipping when spinning.

To reassemble your device, follow these instructions in reverse order.