



# Creative Nomad II Battery Replacement

Use this guide to replace the battery in the CREATIVE NOMAD II Media Player.

Written By: Nathan





## PARTS:

- [AA Batteries](#) (1)
-

## Step 1 — Battery



- Using your thumb, slide down and remove the battery cover.

## Step 2



- Using your index finger, remove the old AA battery.
- Install the new AA battery.

To reassemble your device, follow these instructions in reverse order.