



# Sony Cyber-shot DSC-P100 Front Casing Replacement

Written By: Katie McCraw



---

## INTRODUCTION

This is a step by step guide to uninstalling the front casing of the camera.

---

### TOOLS:

- [Heavy-Duty Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Front Casing




- First locate the appropriate screws for detachment.

## Step 2




- Remove the five screws shown using a Phillips #00 Screwdriver.
- ⓘ It is important to put the small screws in a safe location in order to reassemble the casing.

### Step 3

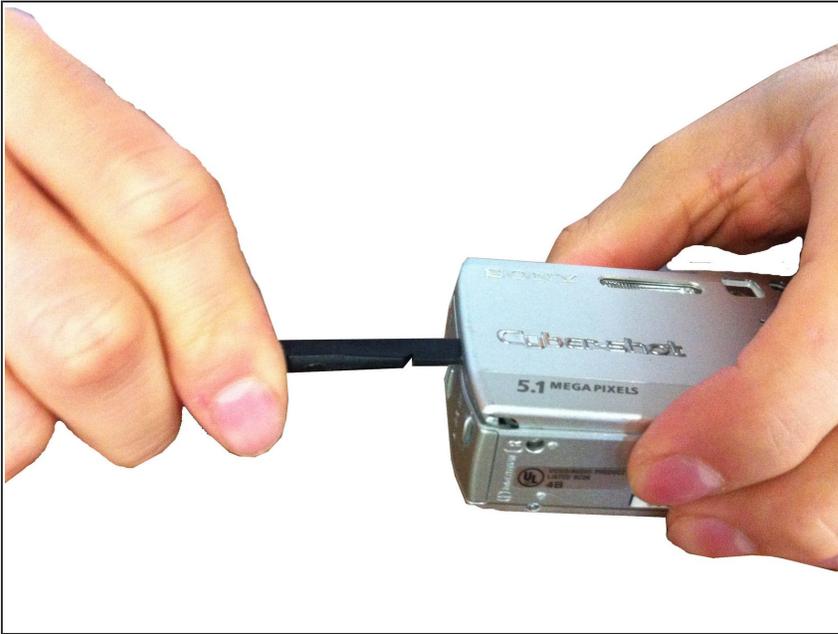

- Using a spudger, carefully pry open the front casing.

### Step 4

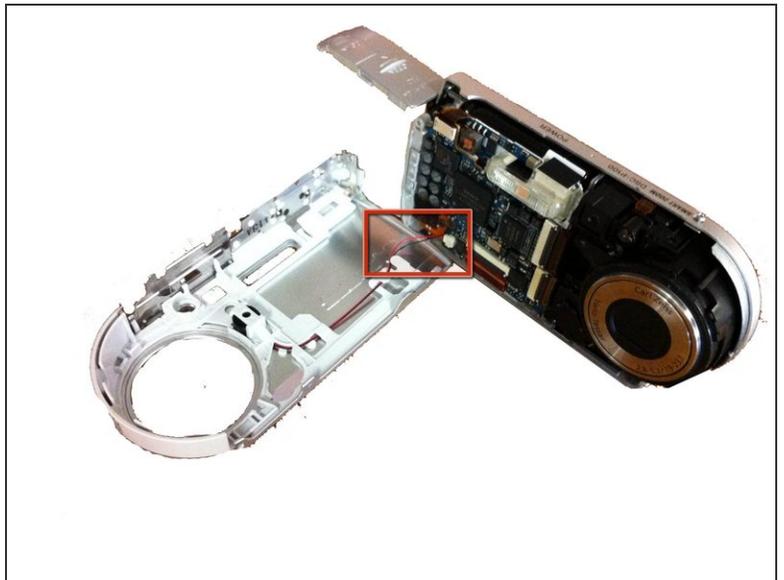

- Carefully separate the front casing from the camera body.

**⚠ CAUTION:** Be careful not to break the wire connecting the front casing and the camera.

To reassemble your device, follow these instructions in reverse order.