 




# Camera Reset

This is a step-by-step guide to resetting the Sony Cyber-shot camera.

Written By: Katie McCraw

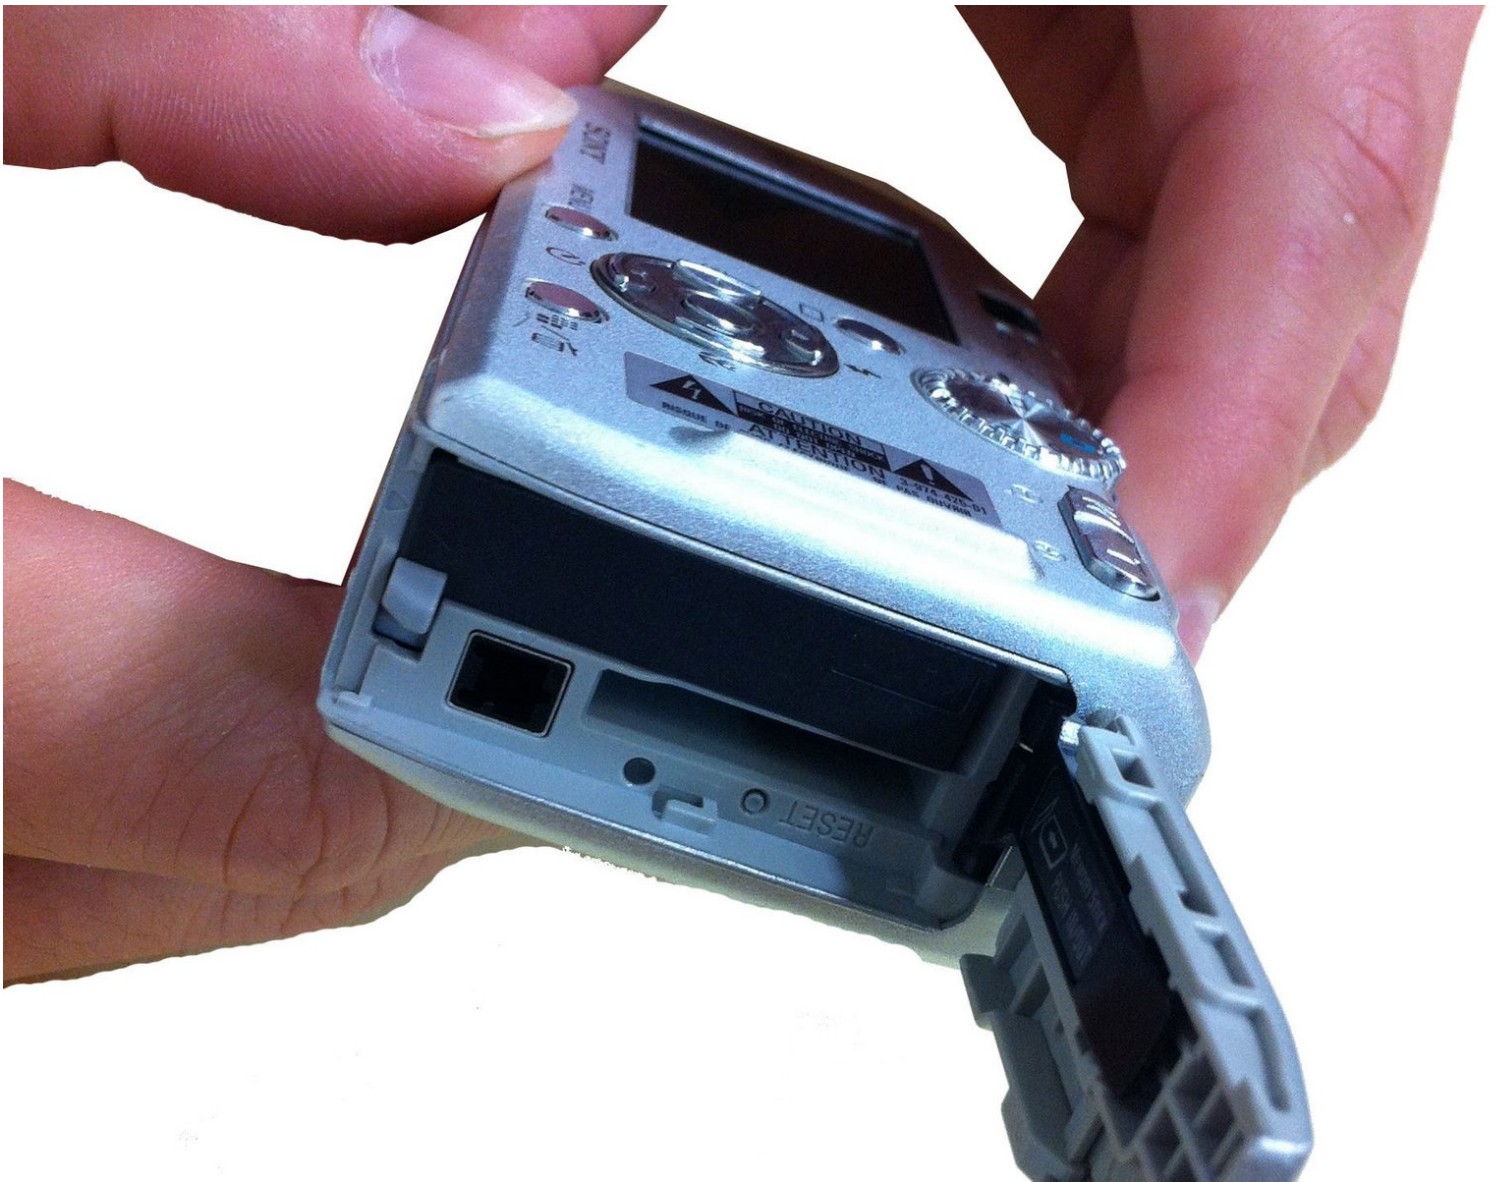



## TOOLS:

 
- [Paper Clip](#) (1)
-

## Step 1 — Camera Reset



- Pull the battery cover in a downward motion, following the arrow on the cover, until it is released.

## Step 2

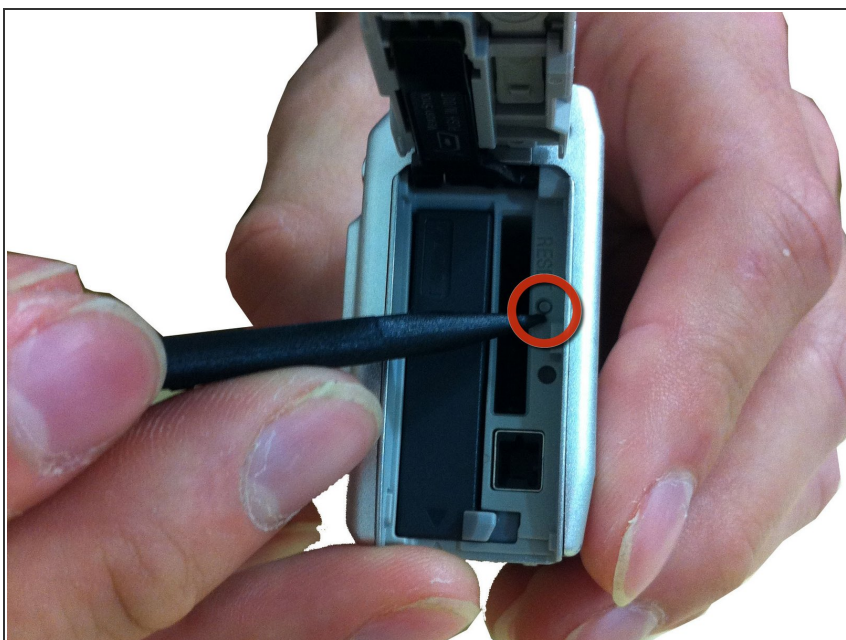

- Locate the reset button near the battery compartment and push the button with a pointed object such as a paper clip or pry tool.

### Step 3



- Close the battery cover.