



LeapFrog LeapTV Controller Joy Stick Replacement

This is the process to replace the joy stick on the controller of the LeapFrog LeapTV controller.

Written By: Joshua Jones



INTRODUCTION

 
This guide will show you how to replace the joy stick on the controller.



TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Small Plastic Spudger](#) (1)
-

Step 1 — Battery

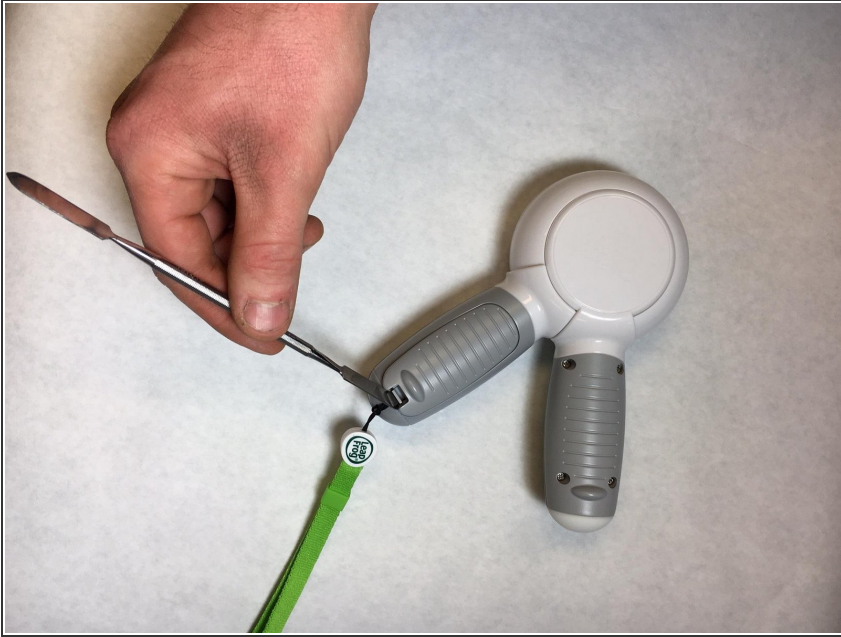

- Use the Metal Spudger to push the release clip on the battery cover.

Step 2



- Lift the cover off.

Step 3



- The battery holder is now visible with the removal of the cover.

Step 4 — Controller Joy Stick



- Use the screwdriver to remove the eight 8.7 mm PH1 Phillips head screws.

Step 5



 
- Separate the top and bottom parts of the controller slightly.

Step 6



- Slide the cover on the back side of the controller covering the joy stick out of the way.

Step 7

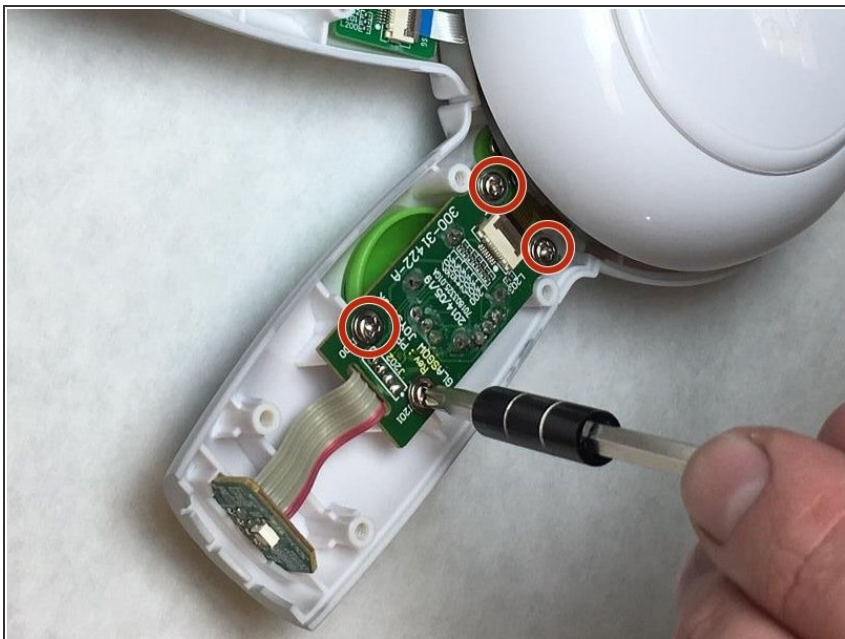


- Use the screwdriver to remove the four 8.7 mm PH1 Phillips head screws.

Step 8



- Turn and lift the circuit board with button attached out of the hole. Do not detach the circuit.

 Step 9

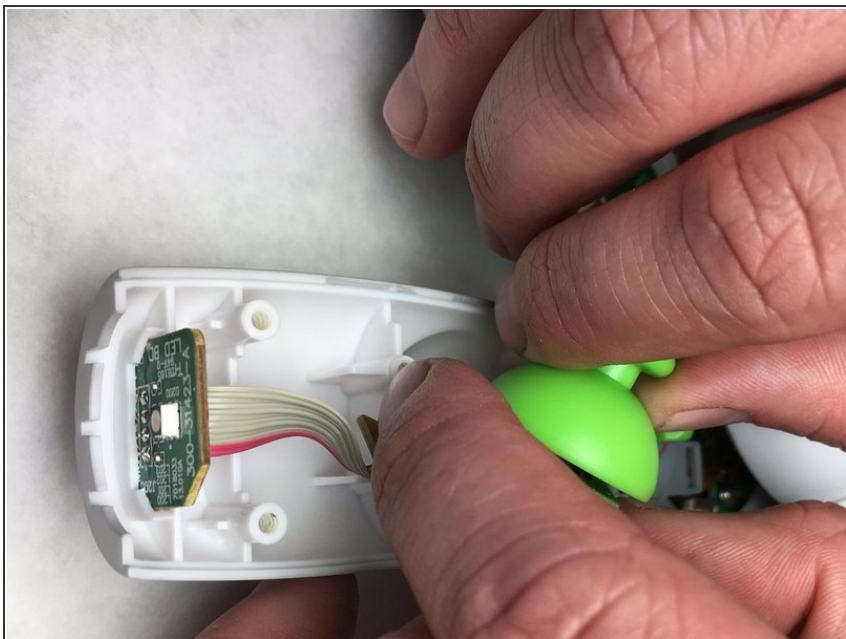

- Hold the circuit board and button and pull the button off.

Step 10



- Joystick will now pop off.

To reassemble your device, follow these instructions in reverse order.