


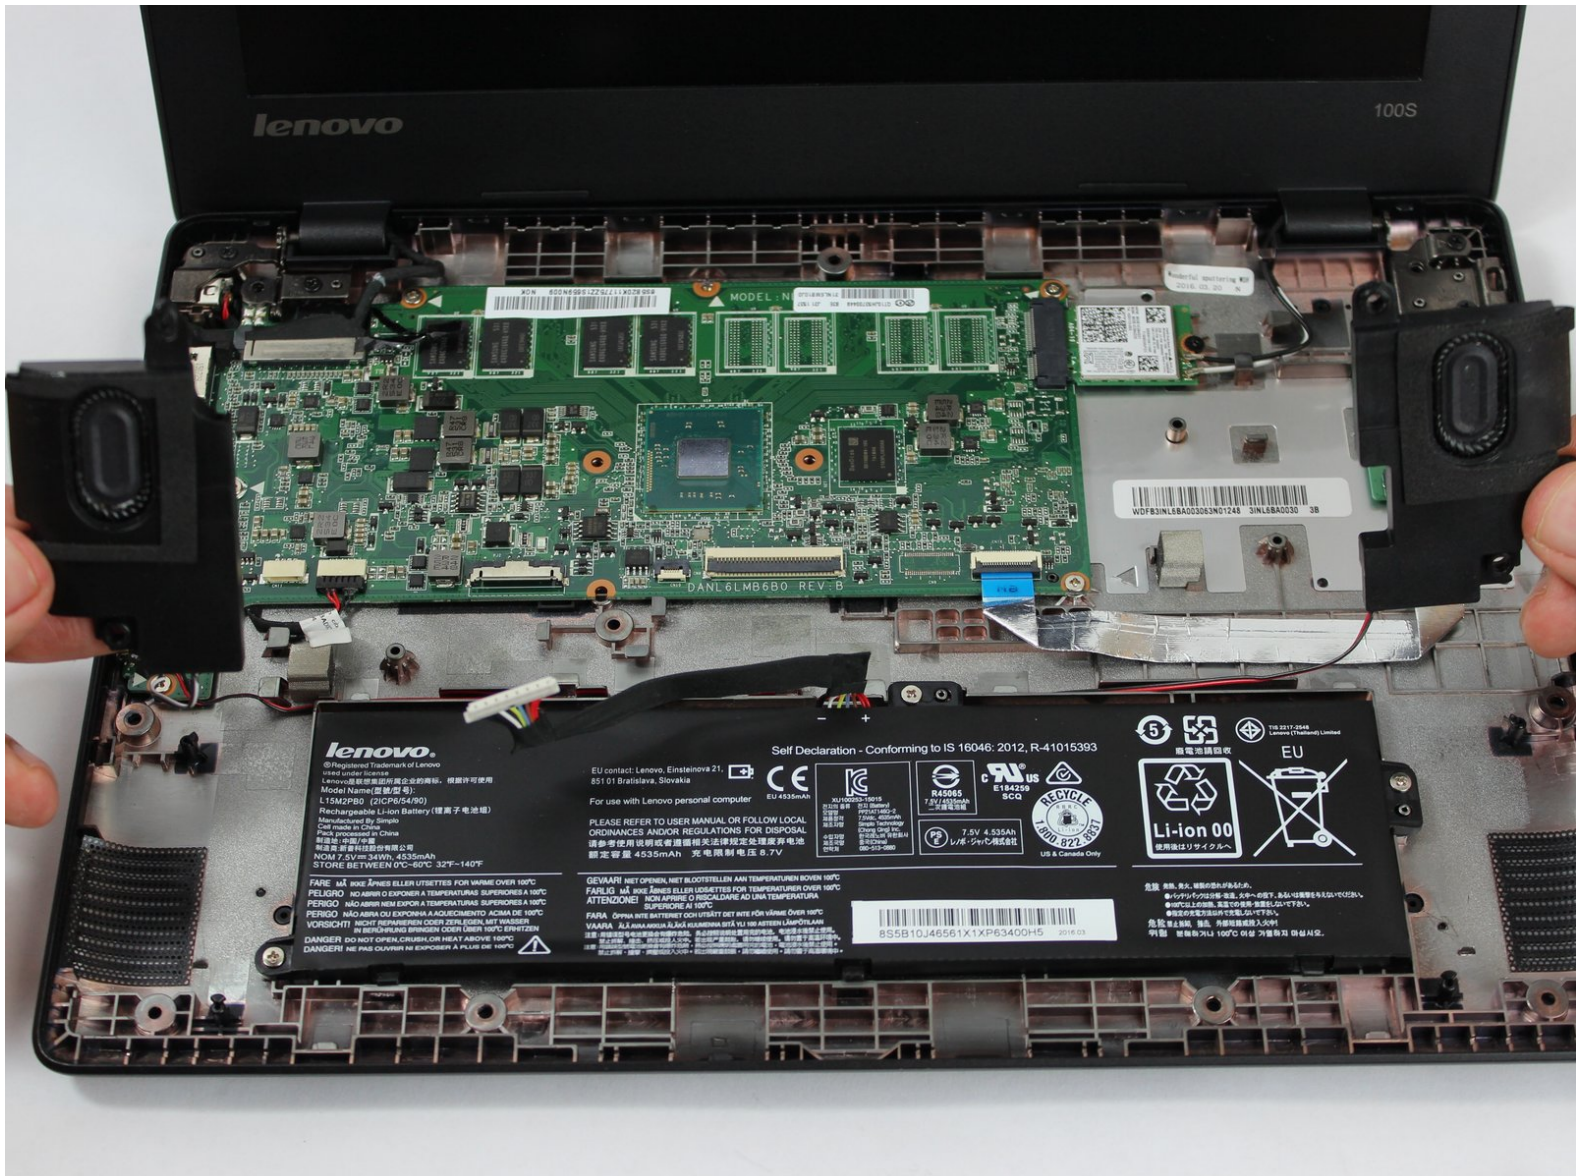

# Lenovo 100s Chromebook-11IBY Speaker Replacement

This guide will show how to remove and replace the speakers for the Lenovo 100s Chromebook-11IBY.

Written By: Milton Perez



This document was generated on 2020-11-17 07:46:43 AM (MST).

## INTRODUCTION

This guide will show how to remove the speakers for the Lenovo 100s Chromebook-11IBY. This removal will allow you to replace or upgrade the speakers for your laptop.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Speakers



- Ensure your device is turned off and unplugged.

## Step 2



- Use a #0 Phillips screwdriver to remove the nine 6mm screws from the larger back plate.





### Step 3



- Turn your laptop back over, open it, and use the plastic opening tool on the recessed notch to gently pry each side and lift the keyboard plate up.


⚠ Be careful not to pull keyboard plate out immediately because cables are attached.

### Step 4

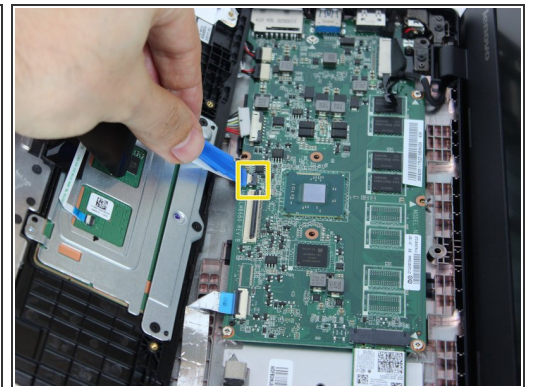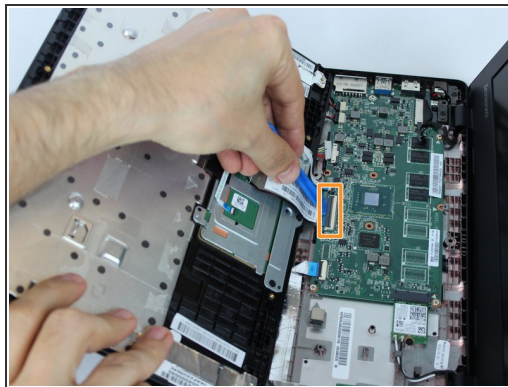



- Locate the two sticker-like connecting wires (for the keyboard and touchpad).
- Carefully unplug the orange circled (keyboard) wire from the keyboard plate.
- Carefully unplug the yellow circled (touchpad) wire from the keyboard plate.
- Then lift the keyboard plate up and place it to the side.

## Step 5

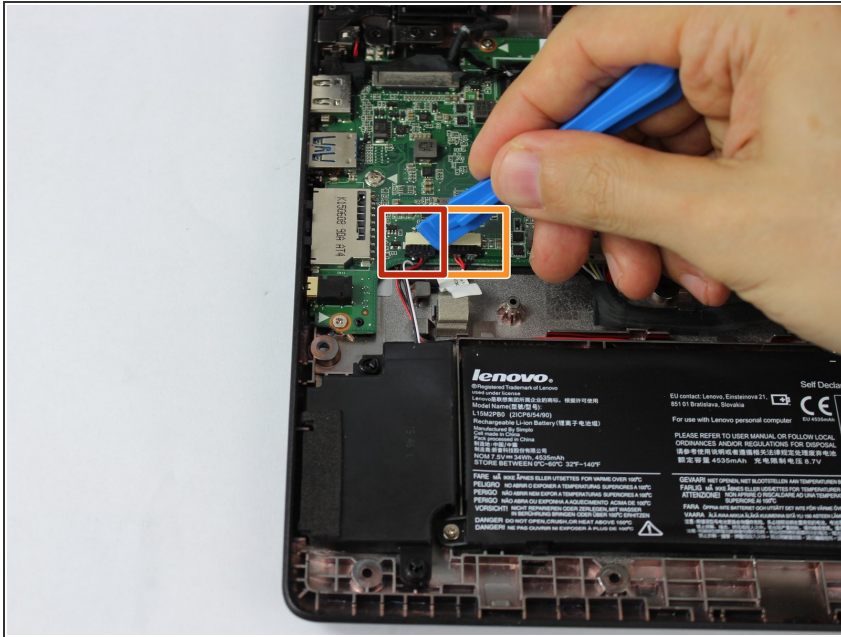


- Locate the cable attaching the left speaker to the motherboard and unplug it by hand.
- Then unplug the cable attaching the right speaker by hand.

## Step 6

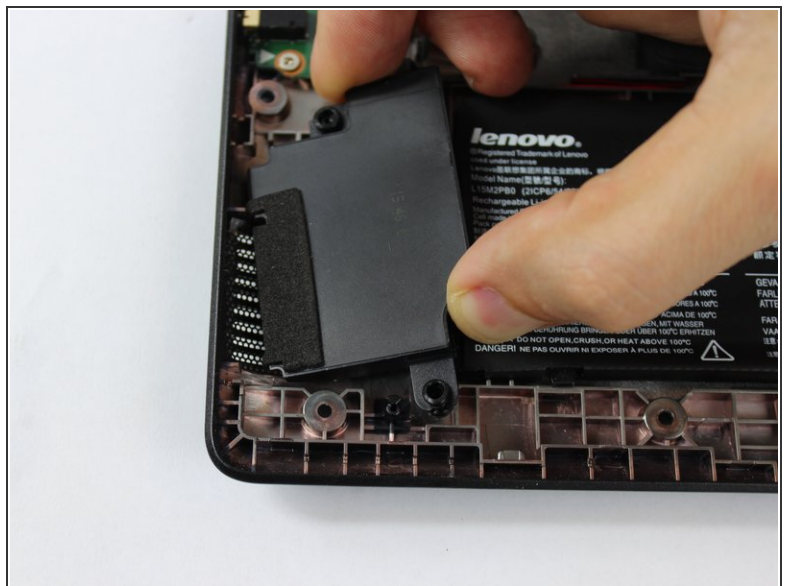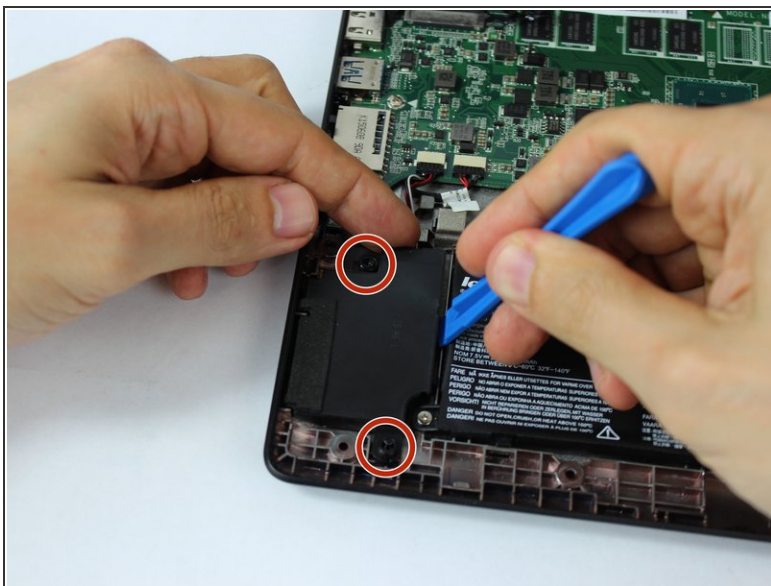

- Carefully pry the speaker up and free of the two notches holding it in place.
- Remove the speaker.

## Step 7

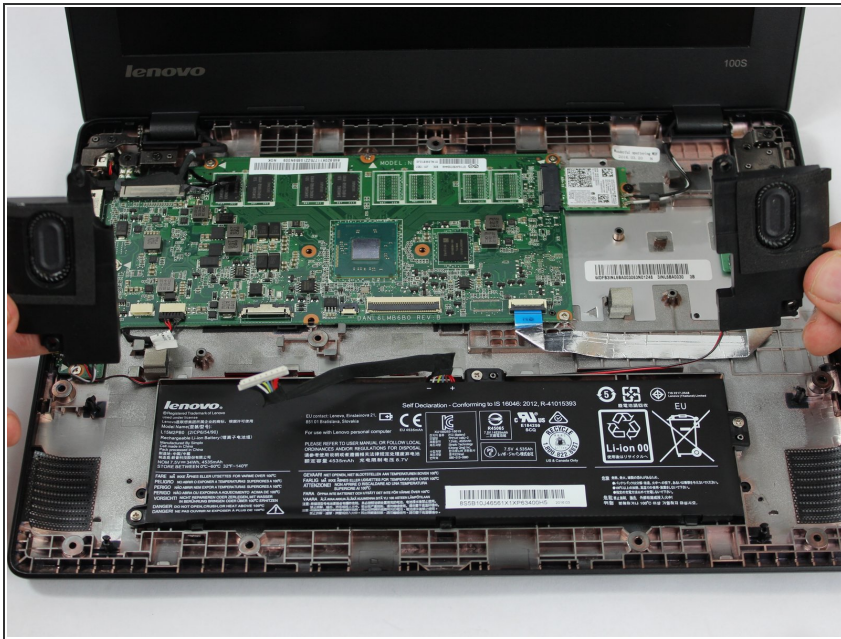

- Repeat steps 5 & 6 in order to remove the right speaker.

To reassemble your device, follow these instructions in reverse order.