




2001-2006 Mini Cooper Wheel Bearings Replacement

A video tutorial on how to change the wheel bearing on a 2001-2006 Mini Copper.

Written By: eCuration

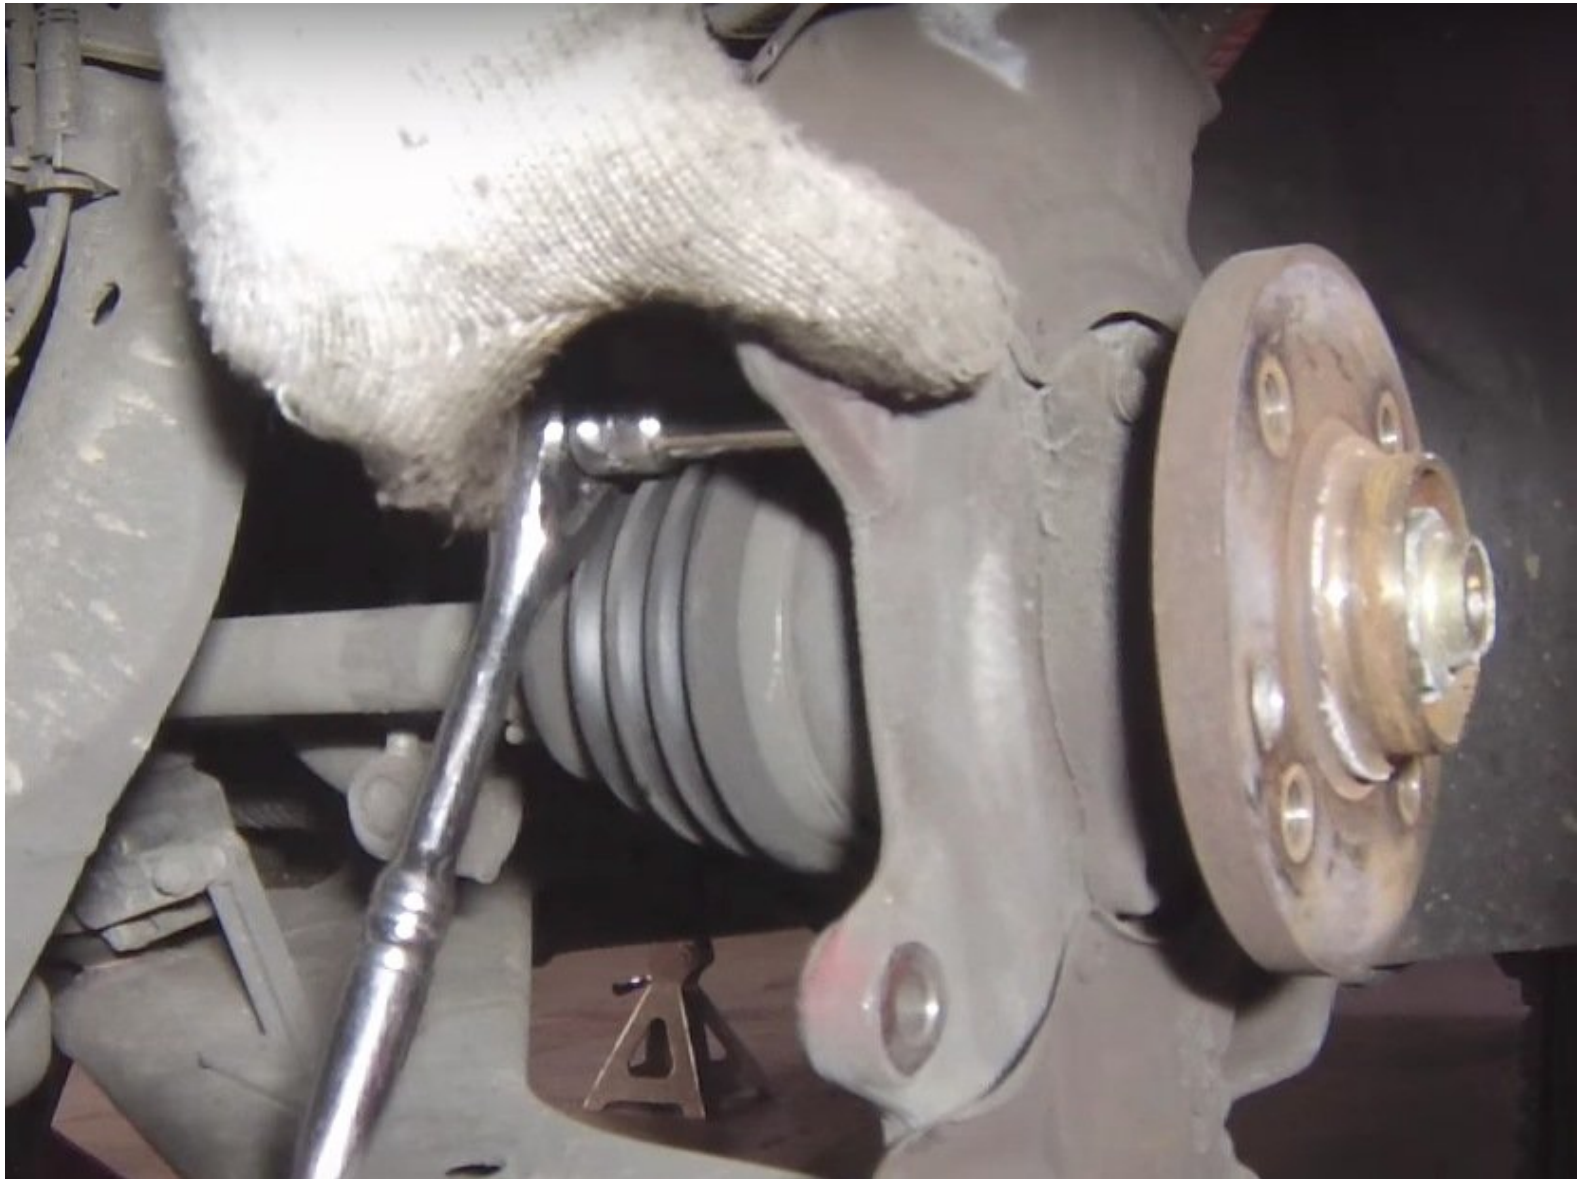

INTRODUCTION

If your Mini Cooper is experiencing abnormal tire wear, grinding or roaring noise from the tire area, vibration in the steering wheel and or play in the wheel then it may be time to change out the wheel bearings.

Follow this guide to perform the repair on your vehicle.



TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Wheel Chocks](#) (1)
- [Torque Wrench](#) (1)
- [1/2" Drive Breaker Bar](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [Universal Flex Joint](#) (1)
- [T40 Torx Socket](#) (1)
- [32mm Socket](#) (1)
- [Socket 16mm](#) (1)
- [13mm Socket](#) (1)
- [7mm Allen Socket](#) (1)
- [Hammer](#) (1)
- [Pin Punch](#) (1)
- [Flathead Screwdriver](#) (1)
- [Socket 17mm](#) (1)



PARTS:

- [Wheel Bearing and Hub Assembly](#) (1)

To reassemble your device, follow these instructions in reverse order.