



1998-2002 Toyota Corolla Spark Plug Replacement

A video tutorial on how to change the spark plugs on a 1998-2002 Toyota Corolla.

Written By: eCuration



INTRODUCTION

Spark plugs should be replaced every 30,000 miles but some signs of early failure can include slow acceleration, poor fuel economy, engine misfiring, and difficulty starting the vehicle.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.



TOOLS:

- [3/8" Drive Ratchet](#) (1)
- [10mm Socket](#) (1)
- [3/8-Inch Drive Extension Bar](#) (1)
- [Spark Plug Socket](#) (1)
- [Anti-Seize Lubricant](#) (1)
- [Dielectric Grease](#) (1)
- [Torque Wrench](#) (1)



PARTS:

- [Spark Plug](#) (1)

To reassemble your device, follow these instructions in reverse order.