



Flip Ultra HD Teardown

Please review all slides carefully before attempting this yourself. I am not responsible for any damage. Thanks. In this teardown, I show you guys how to take apart the Flip Ultra HD (2nd Generation) just for you guys so you can see the insides. Enjoy


Written By: Charlie Tran



 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Flip Ultra HD Teardown

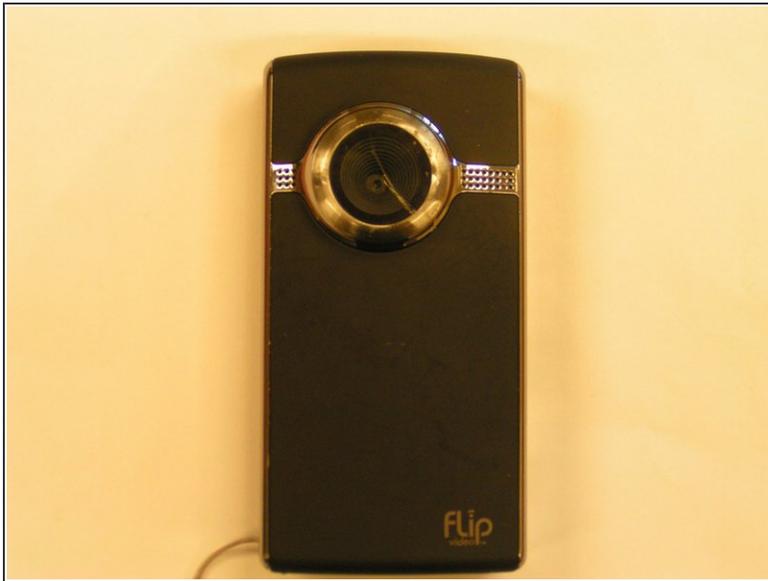

- Front and back of the Flip Ultra HD

Step 2



- Locate the lock/unlock latch at the bottom of The Flip Ultra HD 2nd Generation and slide it into the unlock position.

Step 3



- Pull down on the large front cover to expose the battery slots.

Step 4




- Pry off the top of the camcorder with a flat head screwdriver. The cover is glued on with adhesive so it will take some force to dislodge it from the device.

Step 5




- Use a small Phillips head screwdriver to remove the two screws at the bottom of the battery slot and the two screws above the camera lens.

Step 6

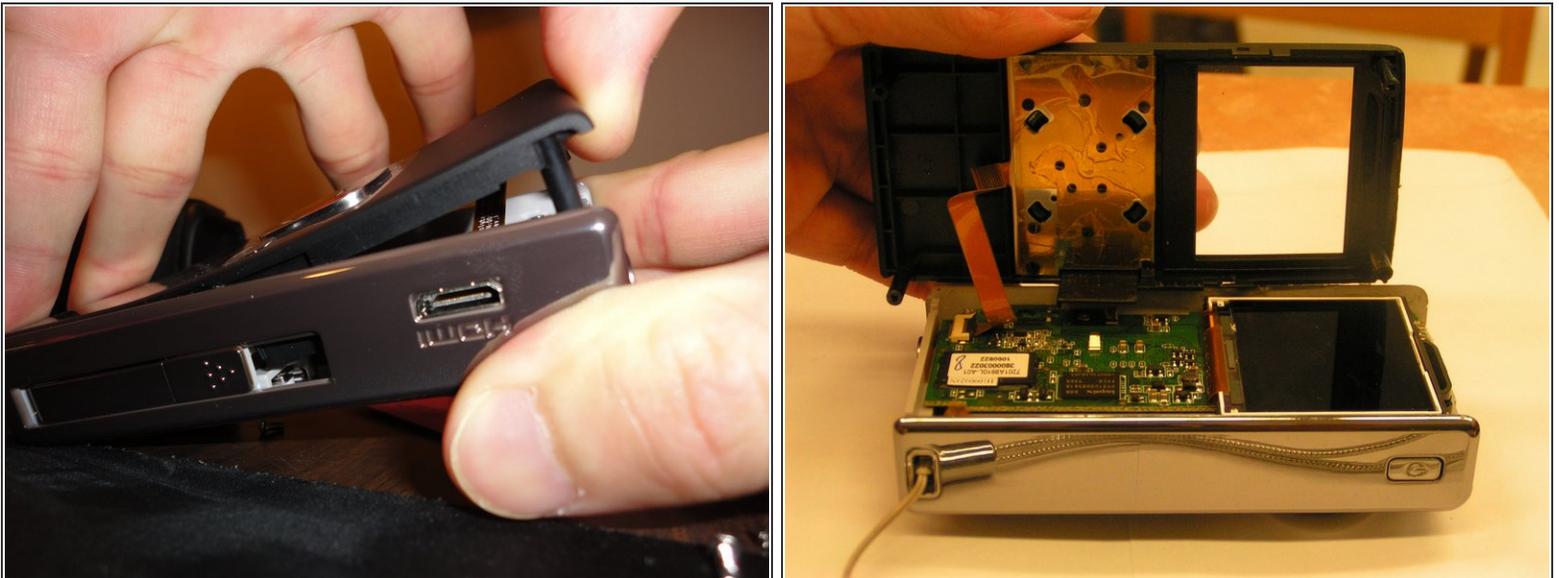


- Gently pull off back cover of the camcorder. Once again, it is glued with adhesive

Step 7

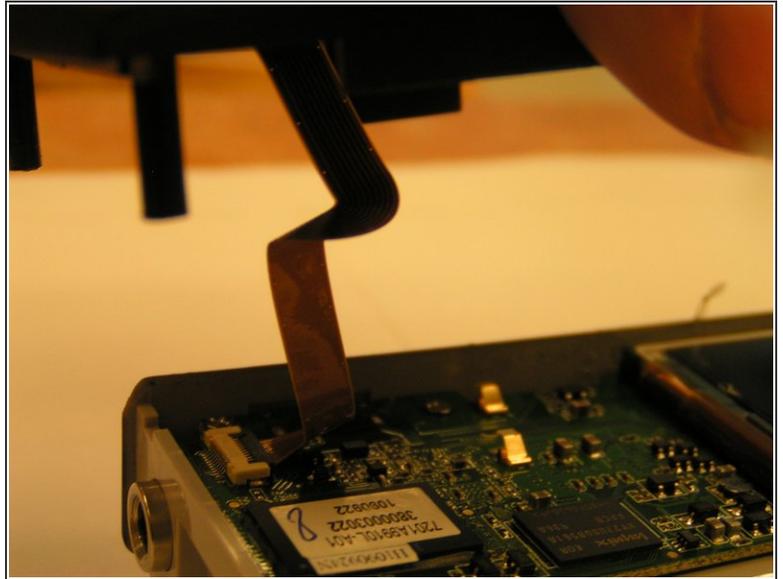



- Remove the ribbon cable gently and pull the back cover off

Step 8

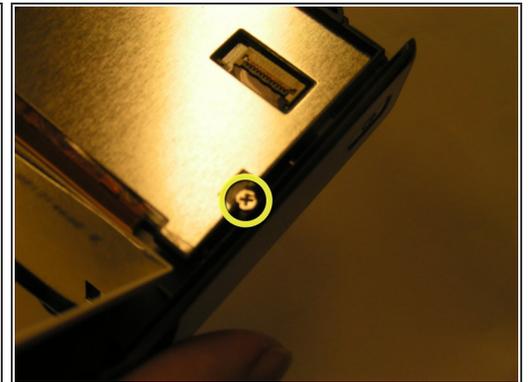


- Remove all of the screws on the circuit board
- Make sure to remove the screw behind the display

Step 9

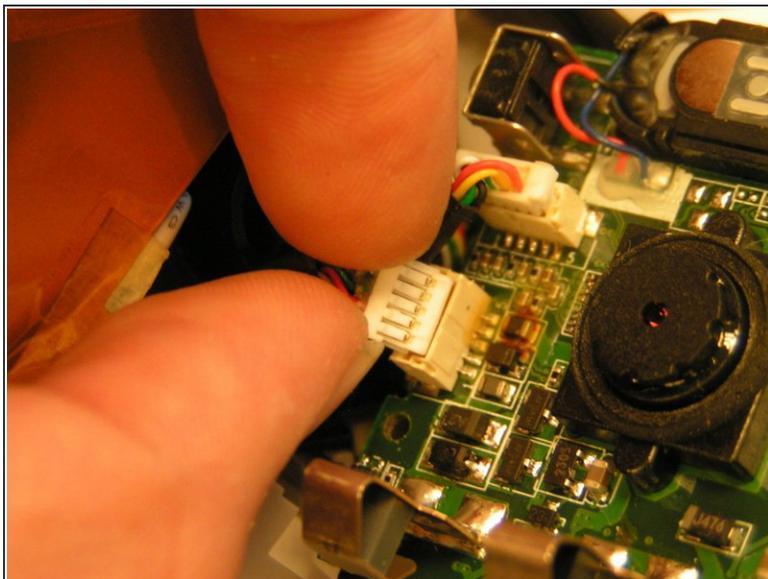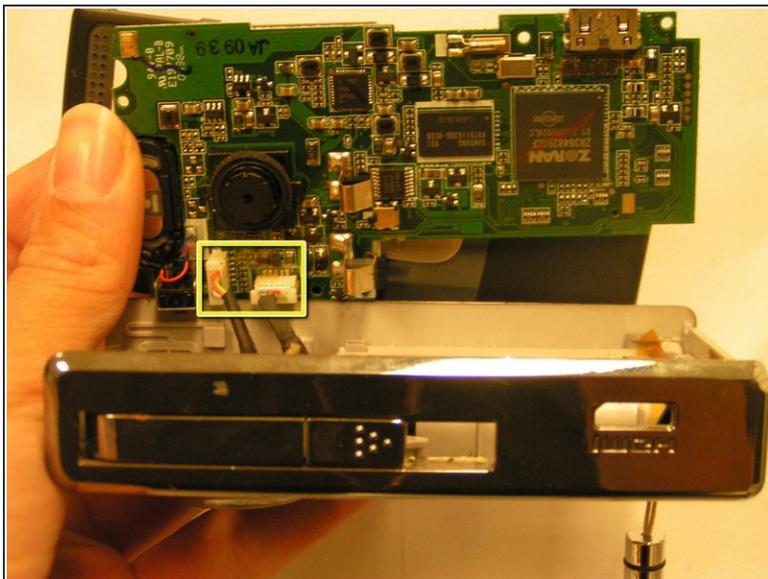

- There are two wires with white heads connecting the circuit board to the front of the device. Gently pull them from their slots to detach the front casing from the circuit board.

Step 10

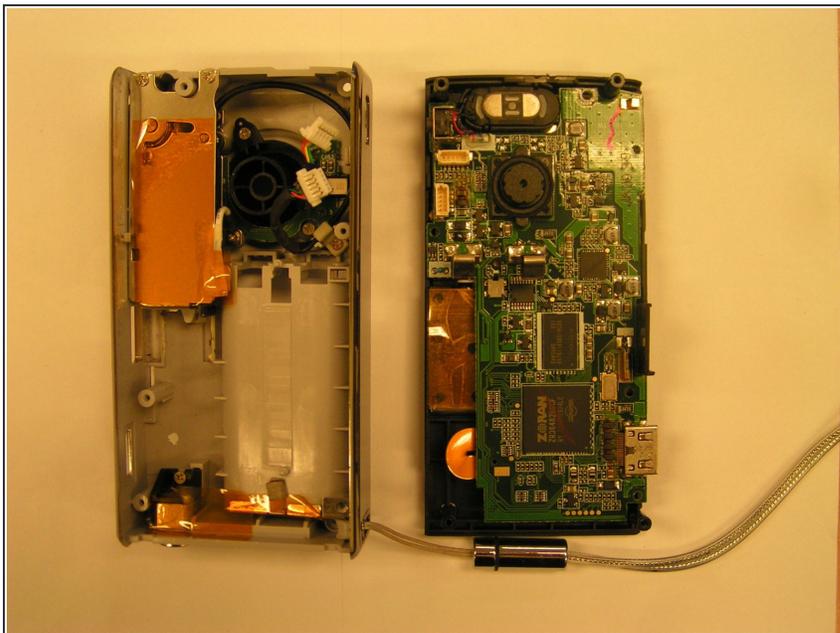

- The disassembled Flip Ultra HD

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-26 07:49:05 PM (MST).

