




# P775DM3 Keyboard replacement

Written By: Felice Suglia

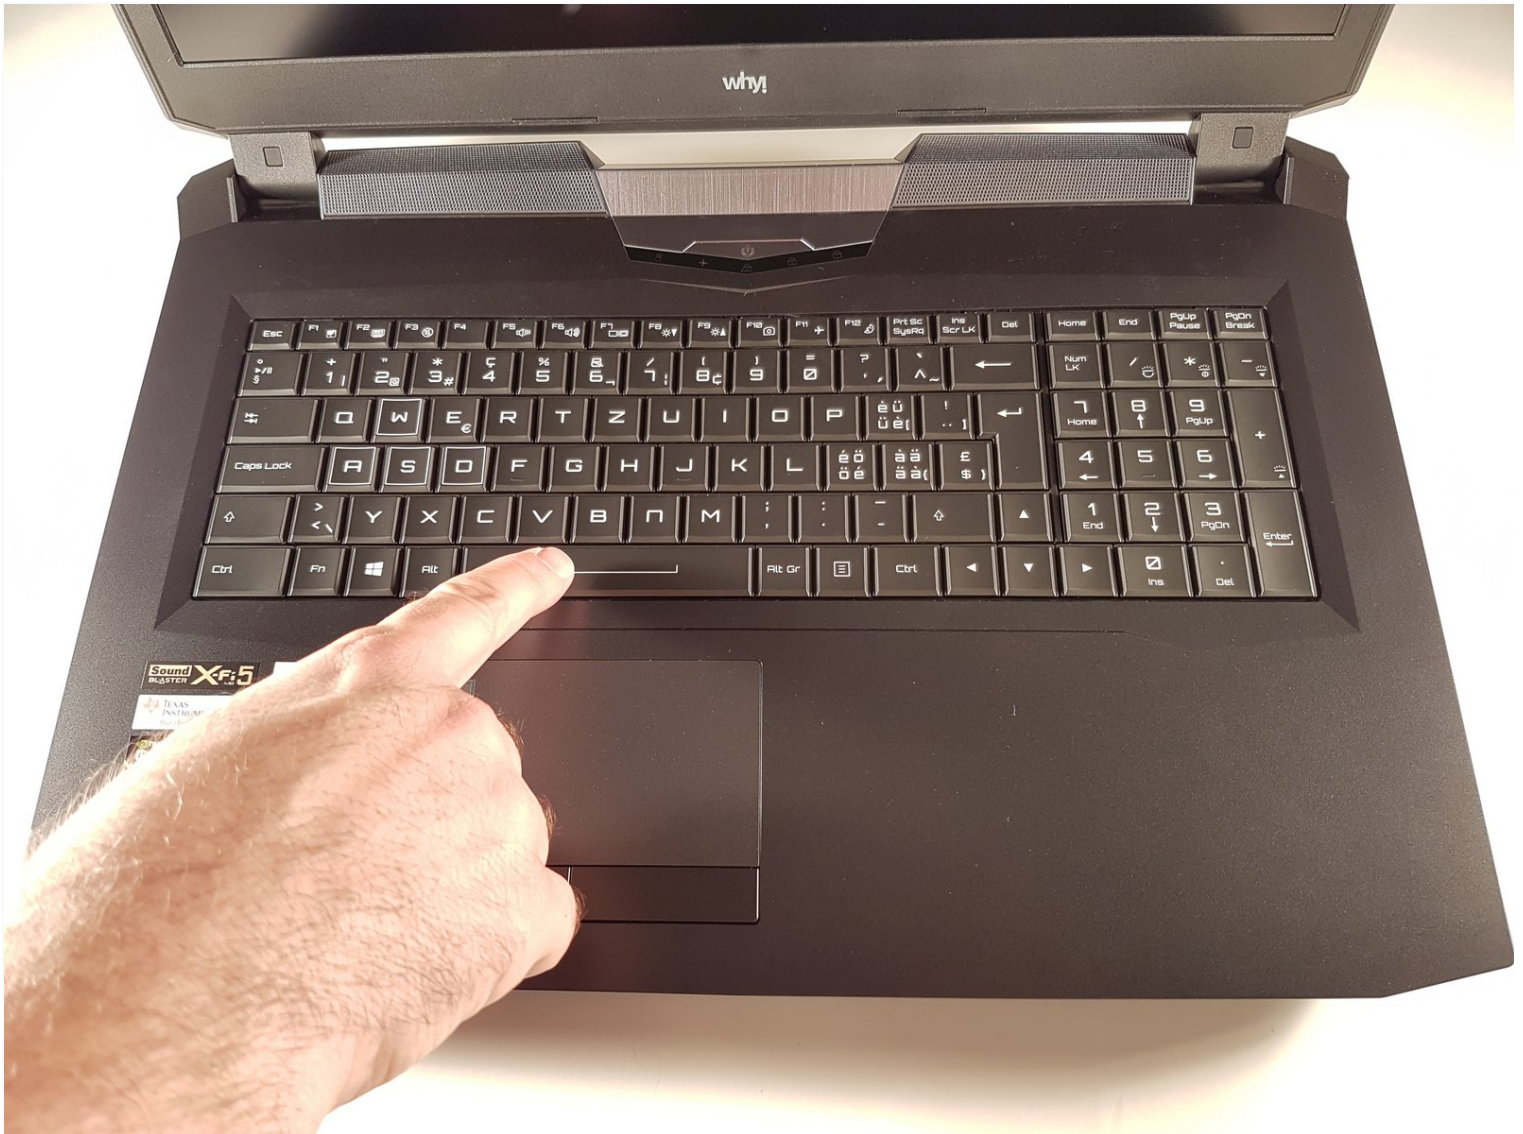



## TOOLS:

Phillips #0 Screwdriver (1)

Tweezers (1)





## PARTS:

Pièces pour why! P775DM3 CH (1)


Pièces pour why! P775DM3 EU (1)

### Step 1 — Battery

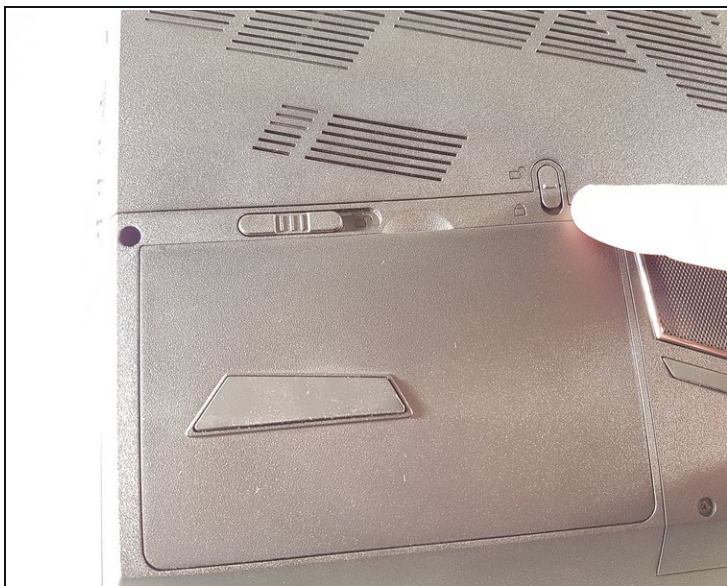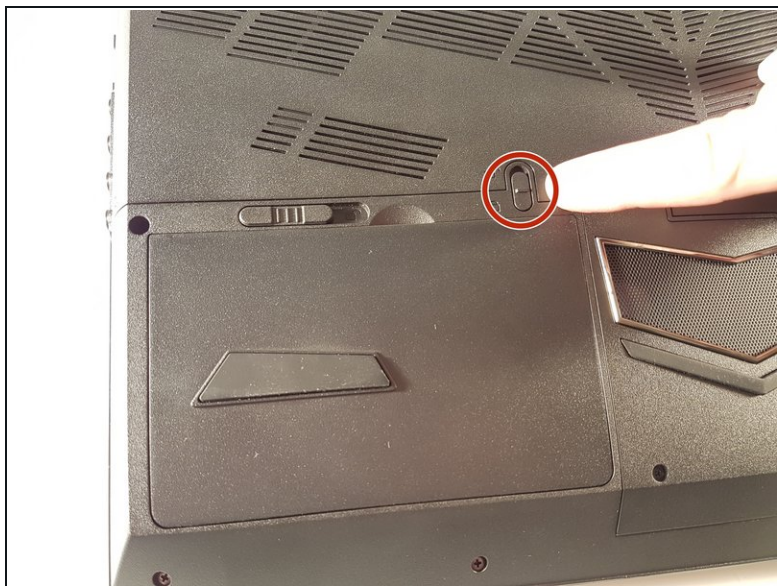

- Unlock the lock circled in red.

### Step 2

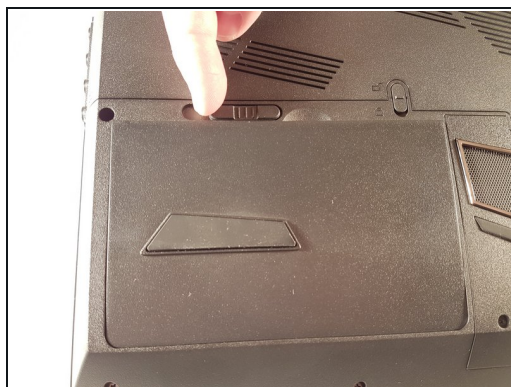

- Lift the battery while unlocking the lock circled in red.




### Step 3 — Access to major components



- Unscrew the five screws circled in red.



### Step 4

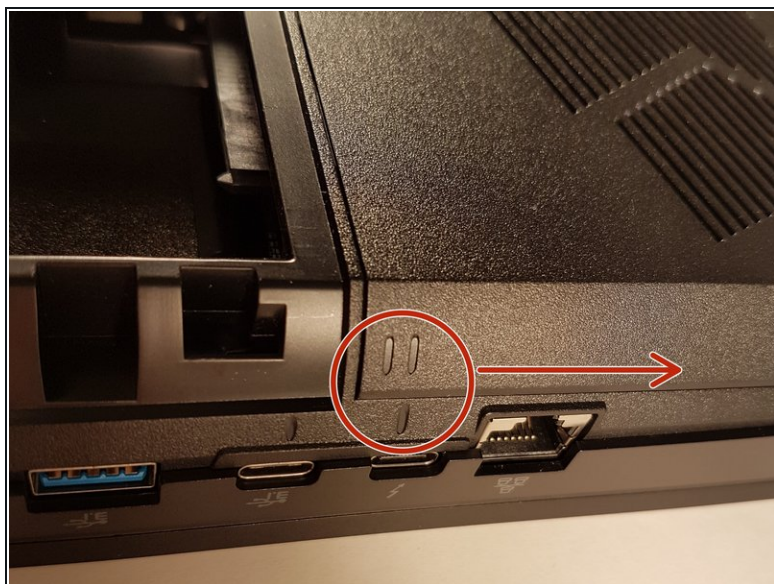

- Slide the plate in the direction of the red arrow.





## Step 5

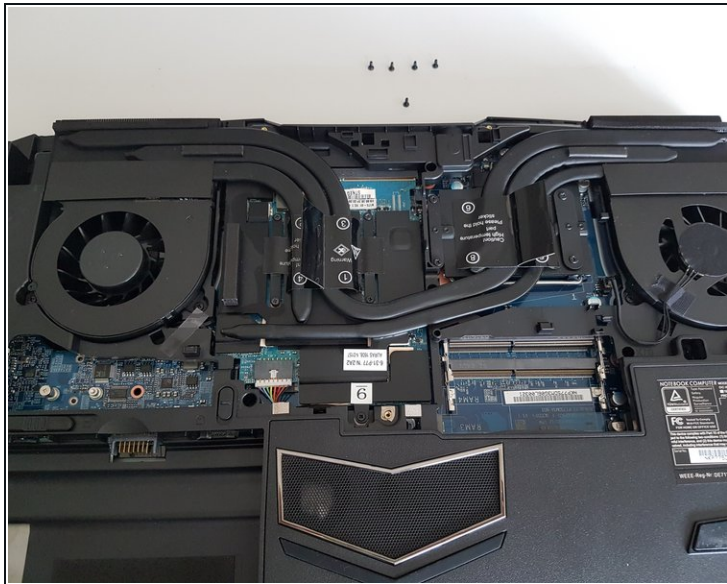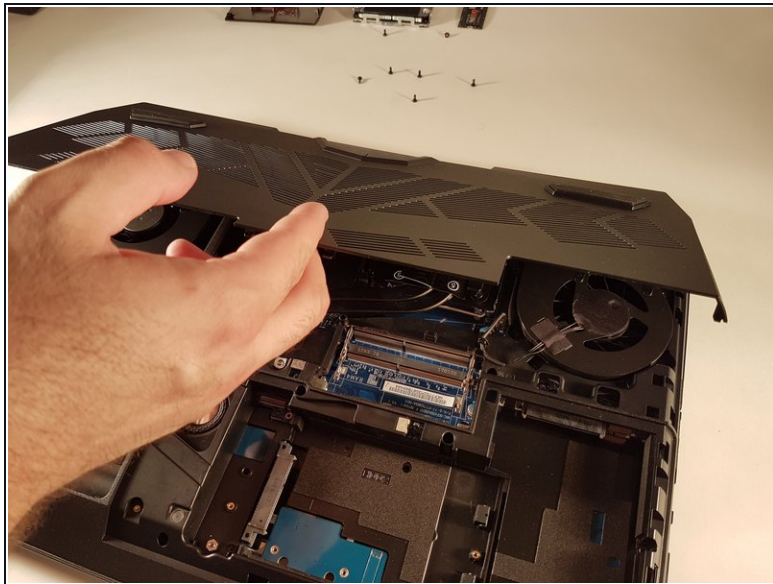




- Lift the plate.

## Step 6 — Keyboard

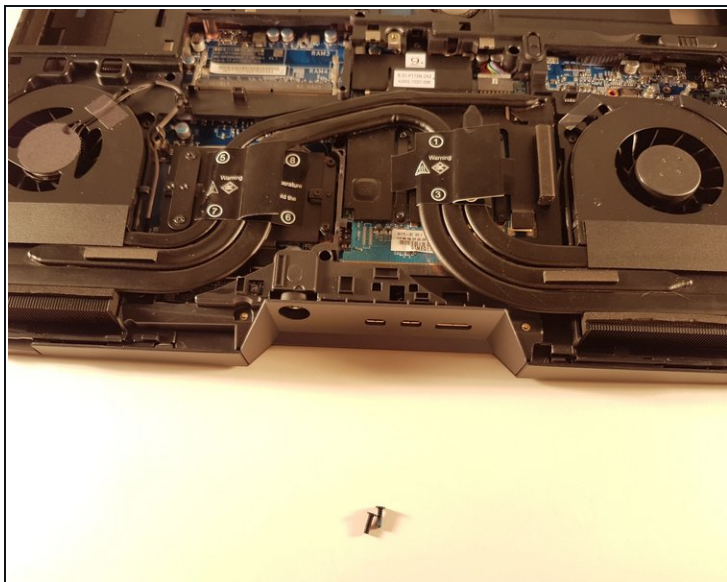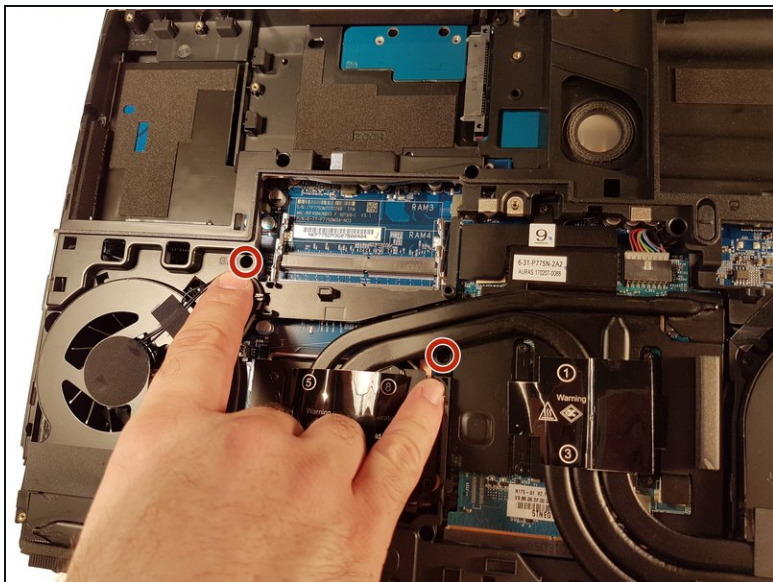



- Unscrew the two screws circled in red

## Step 7

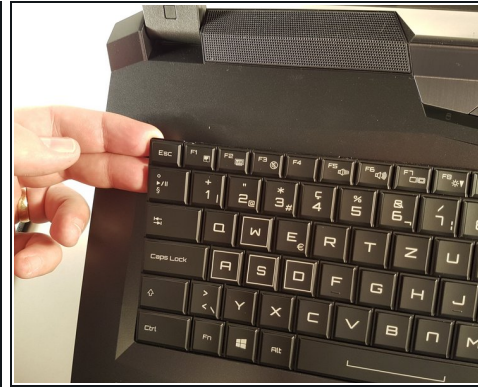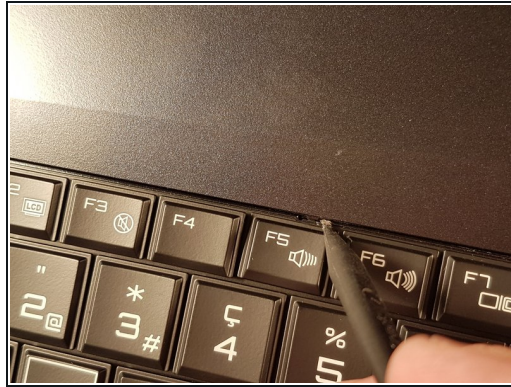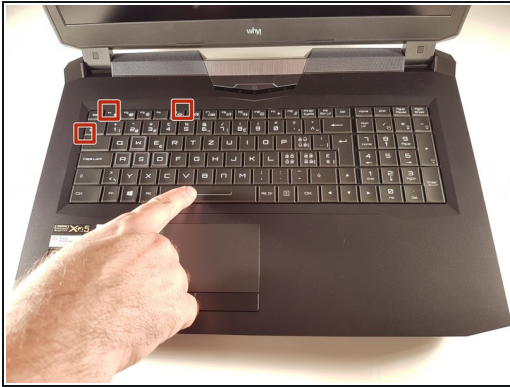

- Press a paper clip in the three places marked in red
- Lift the keyboard and feel free to put some strength



## Step 8

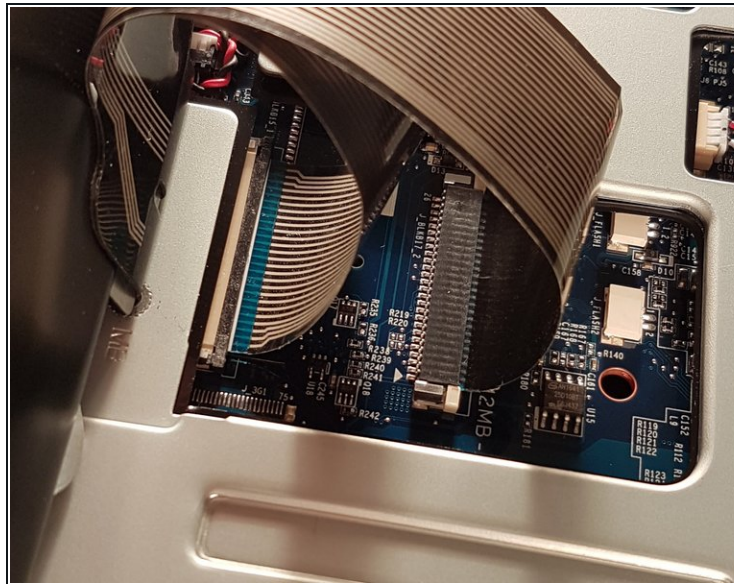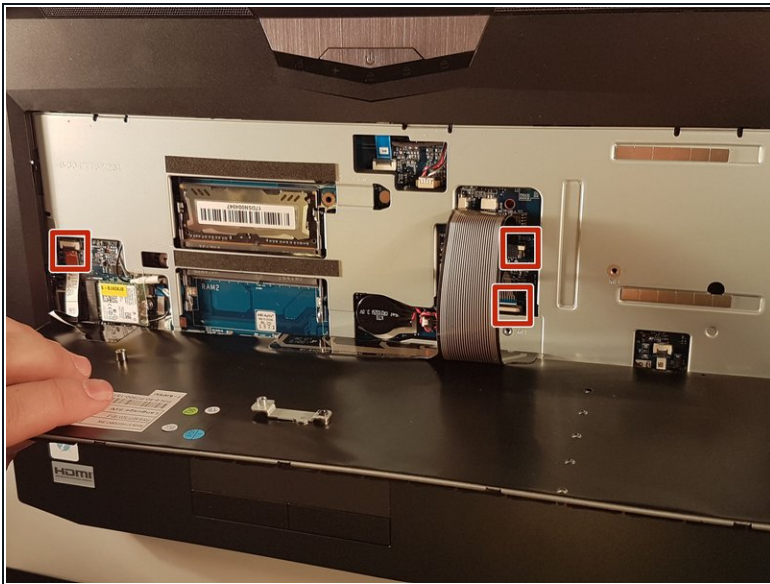

- Disconnect the three framed connectors in red





## Step 9

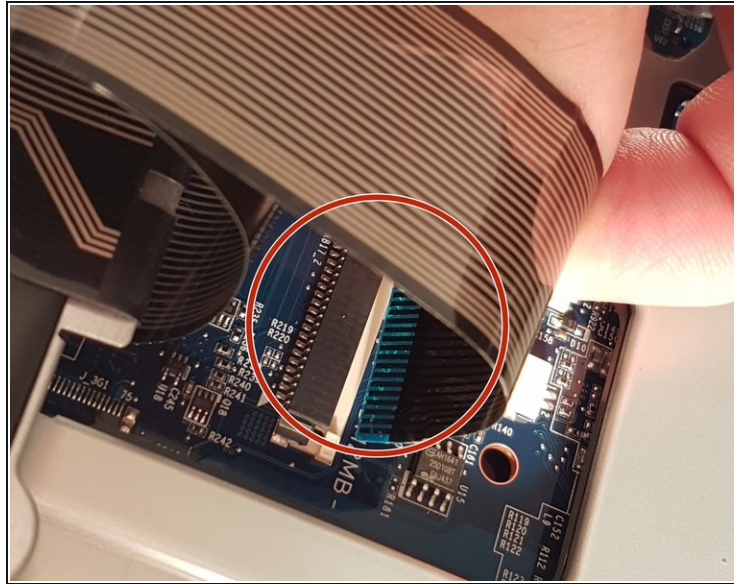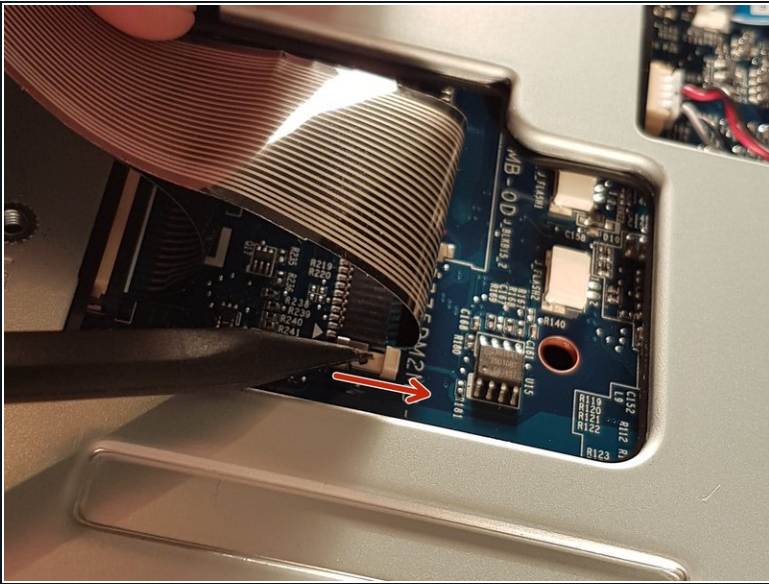



- Pull the white drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

## Step 10

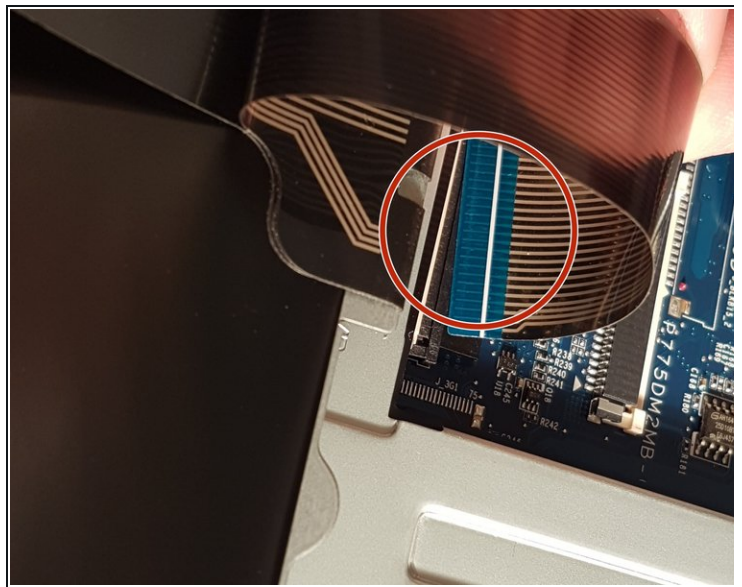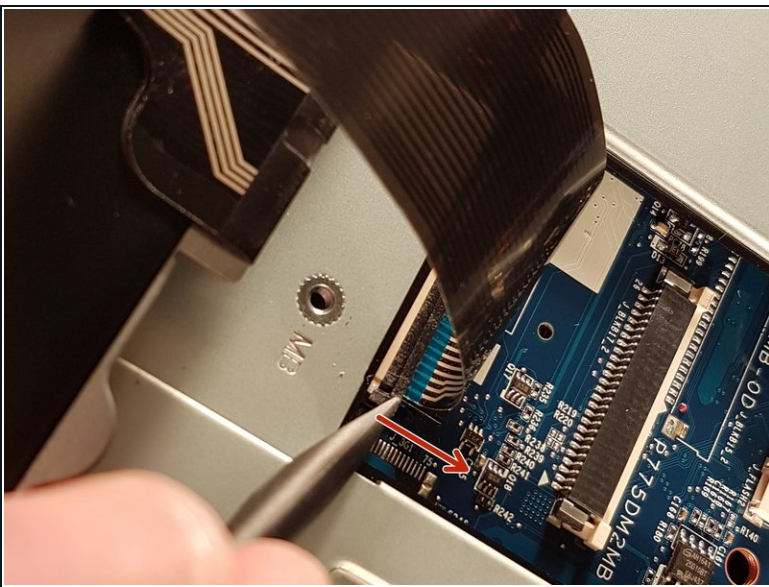

- Pull the black drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

## Step 11

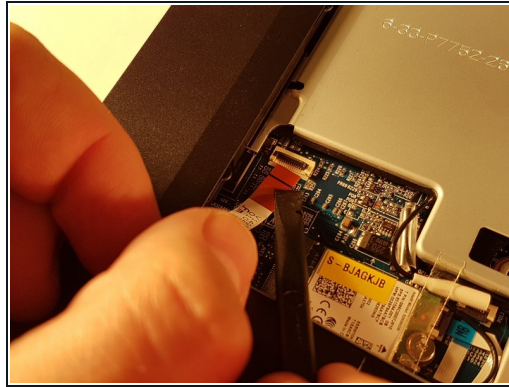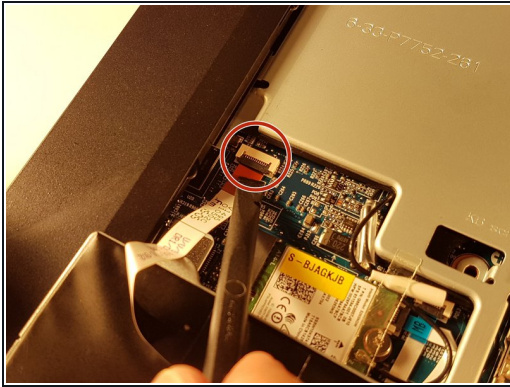

- Lift the flap that holds the connector circled in red
- Disconnect the red circled connector
- Remove the keyboard

To reassemble your device, follow the instructions in reverse order.