 





ASUS U57A-BBL4 Battery Replacement

This guide teaches you how to replace the battery in an ASUS U57A series laptop.

Written By: Joseph Sctbunio

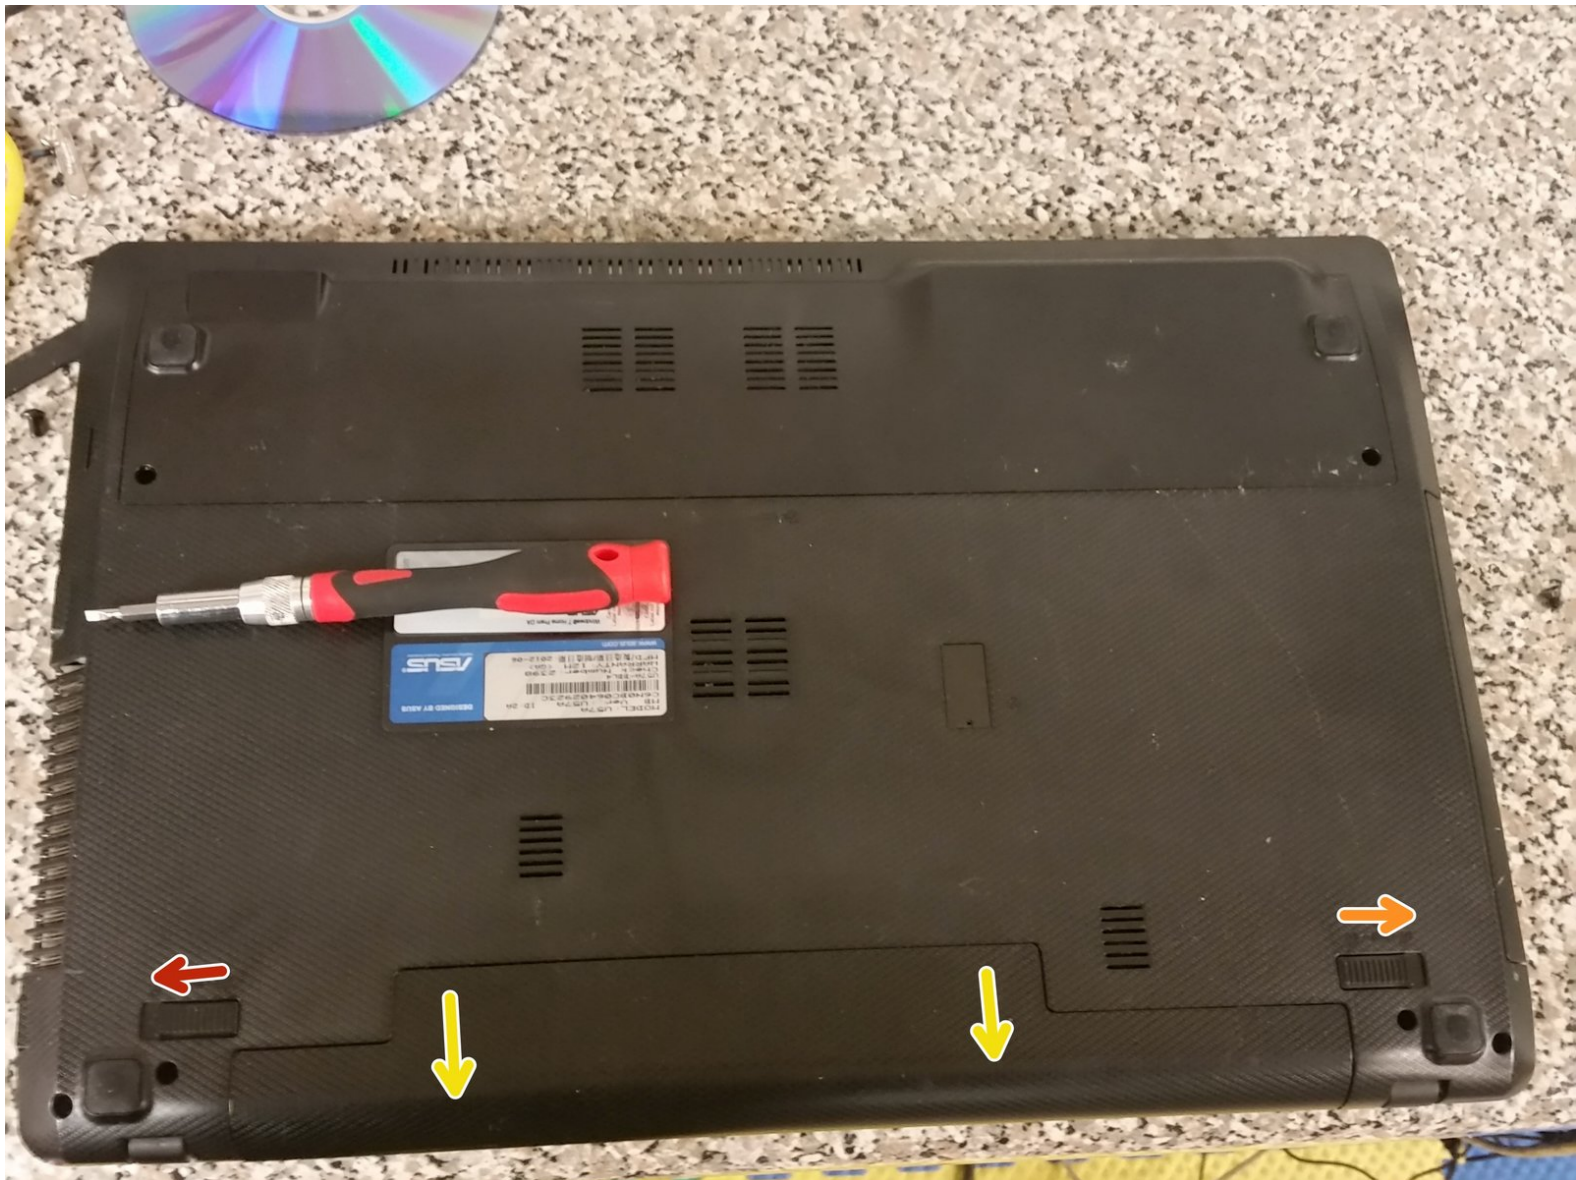

 Step 1 — Remove battery

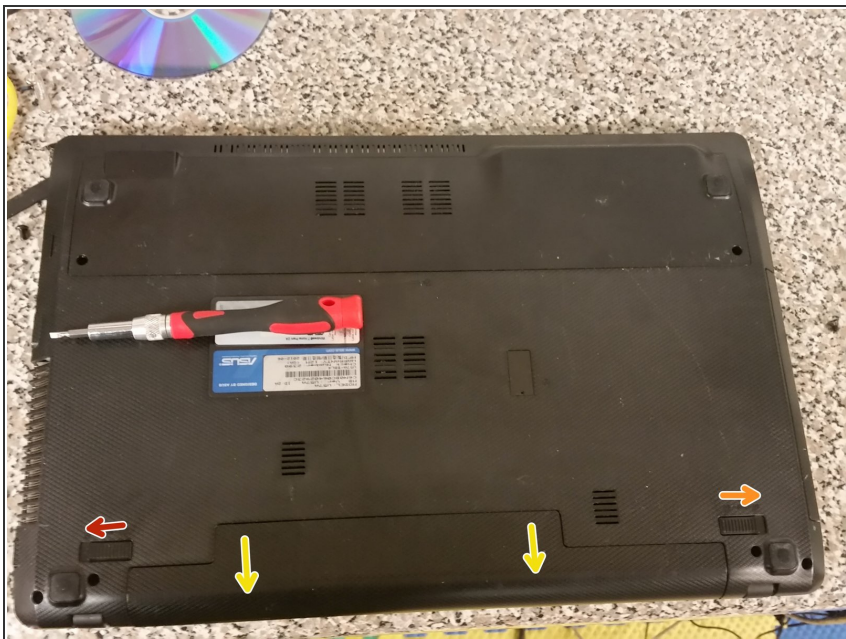

- Flip the laptop upside-down, battery side facing you.
- Move the left latch to the left. You can let go after moving it.
- Move the right latch to the right, and don't let go.
- Pull the battery out with your other hand.

To reassemble your device, follow these instructions in reverse order.