



ASUS U57A-BBL4 Battery Replacement

How to replace the battery in the ASUS U57A-BBL4.

Written By: Isabella Bernardi



INTRODUCTION


If your laptop runs out of battery very quickly, you might need to replace the battery. This guide will take you through the steps to remove the battery from the bottom of the laptop.

Step 1 — Battery



- ⚠ Make sure the laptop is completely shut down to avoid data complications.
- Hold the left lock switch towards the left to the unlock option.

Step 2

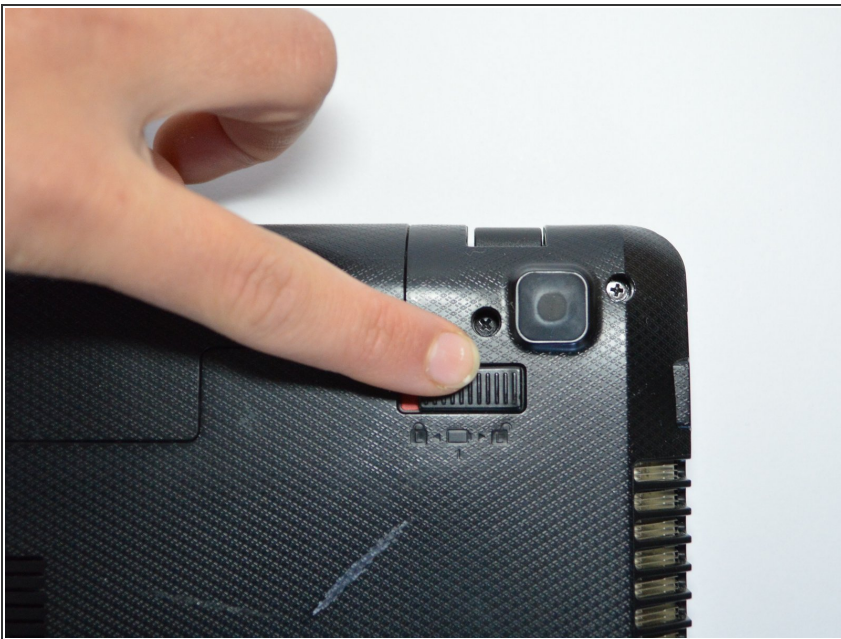

- Toggle the right lock switch to the unlock option.

Step 3



- Gently slide the battery out while still holding the left unlock switch.

To reassemble your device, follow these instructions in reverse order.