



# ASUS U57A-BBL4 Display Assembly Replacement

How to replace the ASUS U57A-BBL4 display assembly.

Written By: Isabella Bernardi



## INTRODUCTION

If your screen is cracked or not working properly, this guide will show you how to replace the screen on the ASUS U57A-BBL4.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Display Assembly



- Carefully pry the two rubber covers at the bottom of the screen off with a metal sprudger.

## Step 2



- Remove the two 1.84 mm Phillips head screws at the bottom of the screen using PH00 screw driver.






### Step 3



- Starting from one of the corners, use your fingers to pry the bezel from the screen.
- ⓘ There is a popping sound when the bezel is loosened from the screen.


### Step 4

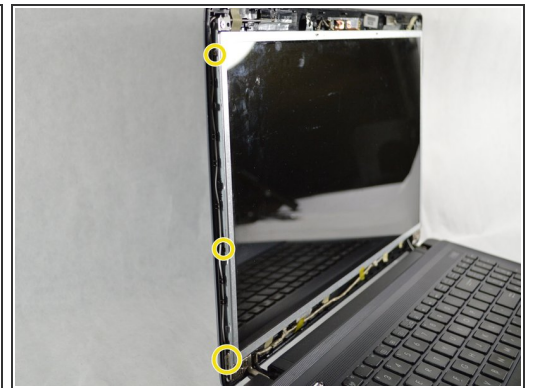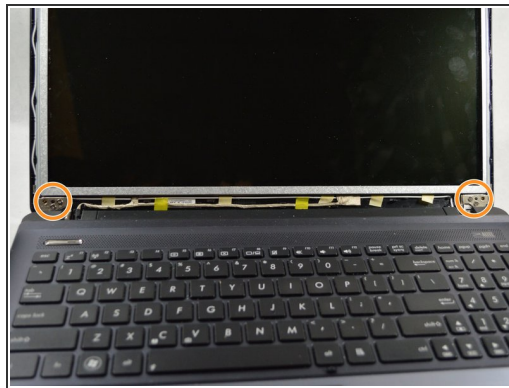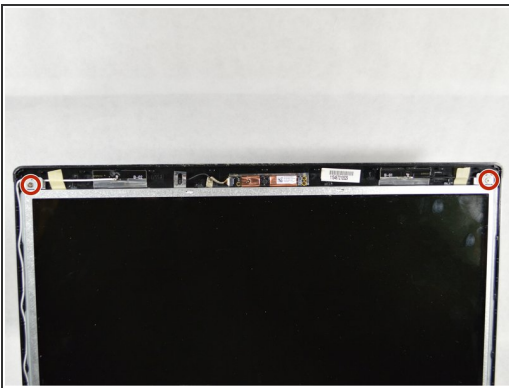

- Remove the top two 2 mm Phillips head screws.
- Remove the four 2 mm Phillips head screws on the bottom.
- Remove the eight 2 mm Phillips head screws on the sides of the screen. There are four on each side.
- ⓘ There are 14 screws in total: two on the top, four on the bottom, and four on each side. Use PH00 screw-driver for removing all 14 screws.


## Step 5



 Don't tear off the bottom of the screen or you might damage the connector cable.

- Carefully lower the screen from the casing with your fingers, making sure to keep the bottom intact and lay it face down on the keyboard.

## Step 6

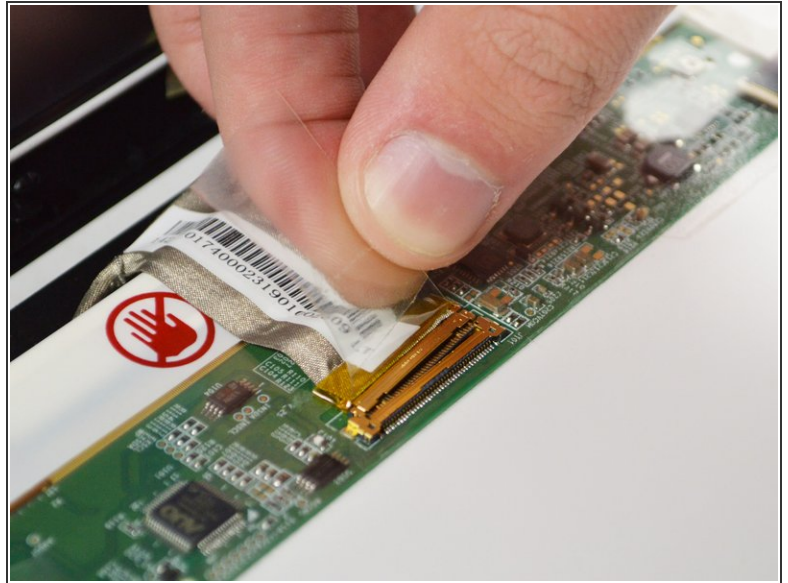

- Disconnect the connector cable at the bottom by loosening the adhesive tape and lifting up.
- Gently slide the cable out of the ridges to free the screen from the casing.

To reassemble your device, follow these instructions in reverse order.