


LG G Watch R Battery Housing

The battery housing holds all off the internal components firmly in place.

Written By: Westley Courchene

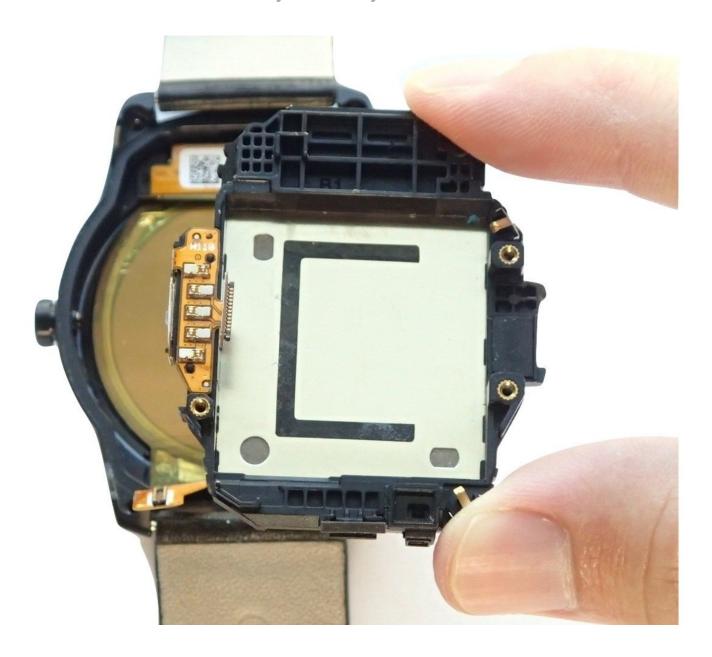

INTRODUCTION

This guide will show you how to remove the battery housing for the LG G Watch R.



Step 1 — Back Case





- Power off your watch before disassembling it.
- Place the watch upside down on a hard surface so that its back case is facing upright.
- Use a T4 Torx Star screwdriver to remove the four 4.0 mm Torx screws from the corners of the back case.


Step 2



 Use a plastic opening tool to pry open the back case from both sides of the watch.

This document was generated on 2020-11-22 04:49:27 PM (MST).

Step 3

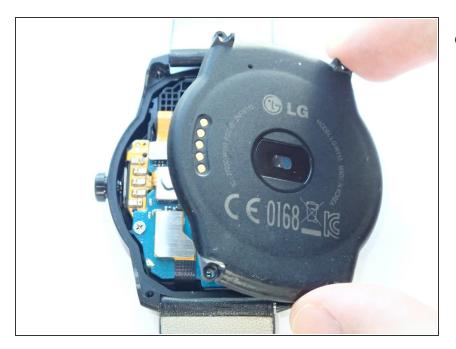

Remove the back case.

Step 4 — Motherboard





• With a plastic opening tool, disconnect the four connectors on the top of the motherboard.


Step 5






 Remove three 3.0 mm Phillips screws on the edges of the motherboard with a Phillips #000 screwdriver.

Step 6

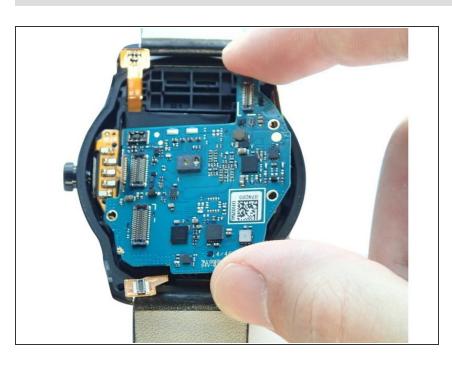


 Grasp the edges of the motherboard and slide it slightly towards the right to remove it from its case.


Step 7 — Battery Replacement

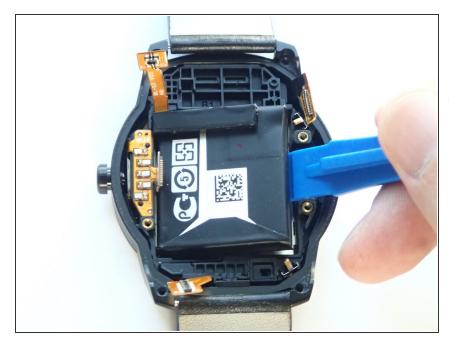

- Use a plastic opening tool to pry the battery out of the device.
- You may need to use a stronger prying force due to the adhesive that secures the battery to the case.

Step 8 — Battery Housing Replacement

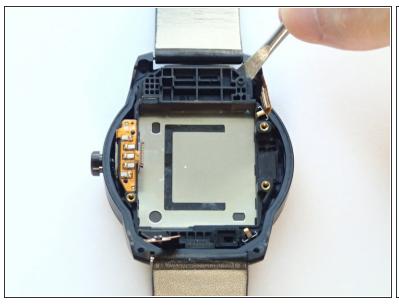

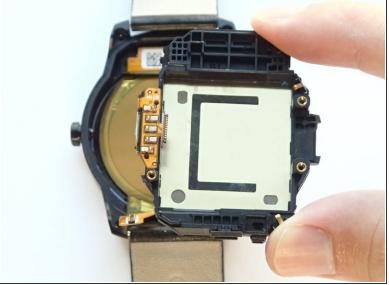

- Pry the battery housing from the top right corner using a spudger.
- Once loosened, remove the battery housing.

To reassemble your device, follow these instructions in reverse order.