



# Shark Navigator Freestyle SV1106 Roller Brush Replacement

This guide will demonstrate how to safely and properly remove and replace the Shark Navigator Freestyle's roller brush.

Written By: Zachary Liu



---

## INTRODUCTION



If your roller brush is not working even after removing surrounding debris, it is time to replace the roller brush.

---

### TOOLS:

- [Coin](#) (1)
-

## Step 1 — Roller Brush

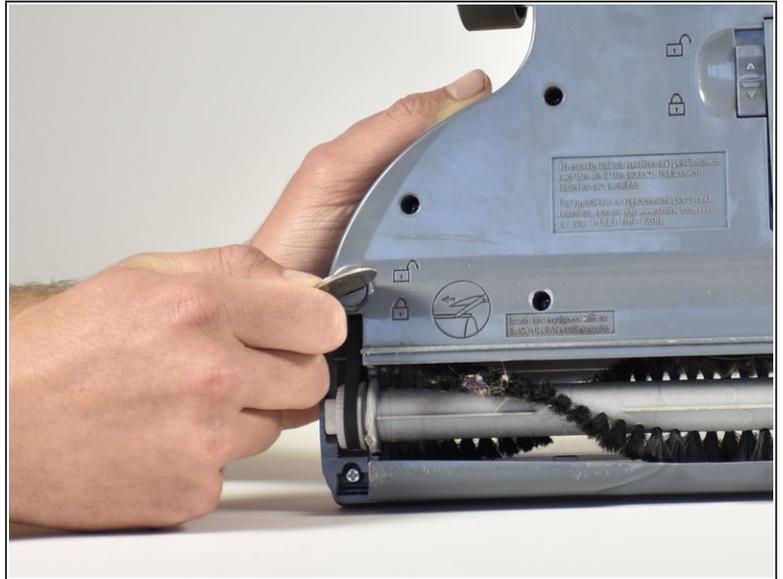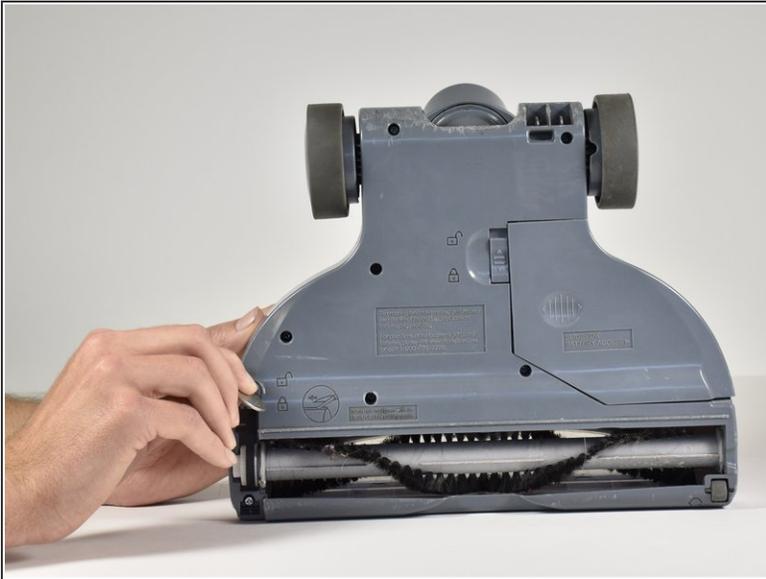

- Remove the black rubber band from the roller brush
- ⓘ In most models there will be a plastic cover over the rubber band. You will use the quarter to twist the latch and take off the cover

## Step 2



- Use the bristles to pull the end of the brush that was connected to the belt away from the vacuum.

### Step 3



- Slide the roller belt off of the roller brush and pull the roller away from the motorized brush.

To reassemble your device, follow these instructions in reverse order.