



Hoover T-Series WindTunnel Pet UH30310

Height Adjustment Wheels Replacement

How to replace the height adjustment wheels at the bottom of the vacuum.

Written By: Nathan Yung



INTRODUCTION

Instructions on how to replace the height adjustment wheels at the bottom of the vacuum.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Height Adjustment Wheels





- Place the vacuum on its back.
- Push the red switch to the left.
- The black cover will then pop out. Remove the cover.

Step 2

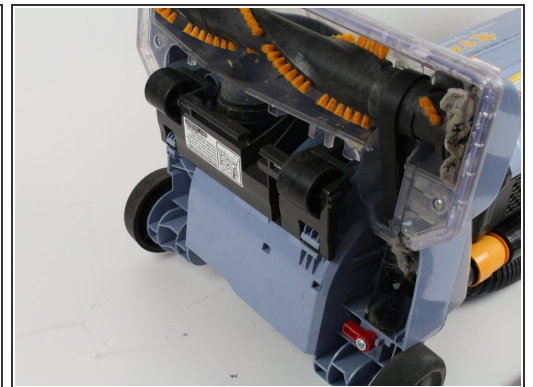

- Locate the red switch near the head of the vacuum.
- Push the switch left.
- This will pop out the plastic base plate. Remove the plate from the vacuum.

Step 3

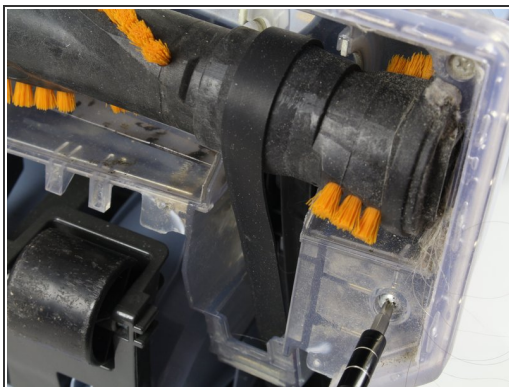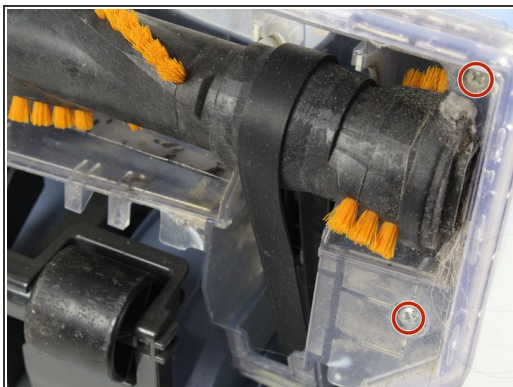


- Use a Phillips #1 screwdriver to remove the screws from the right side of the white plastic frame.

Step 4




- Remove screws from the left side of the white plastic frame.

Step 5

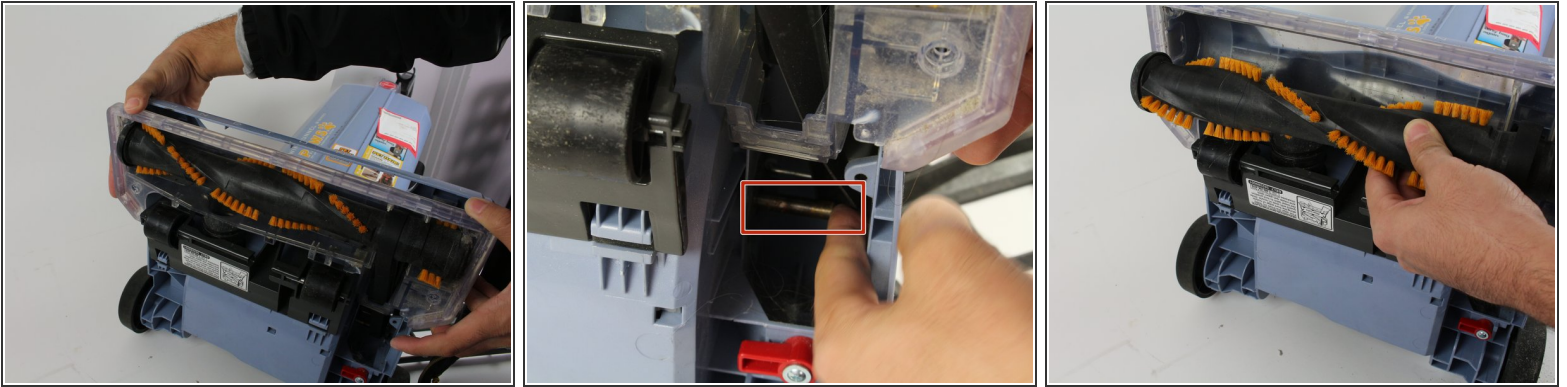


- Pull the white plastic frame away from the vacuum.
- Slide the vacuum belt off the metal rod.
- Pull the brush off the vacuum.

Step 6

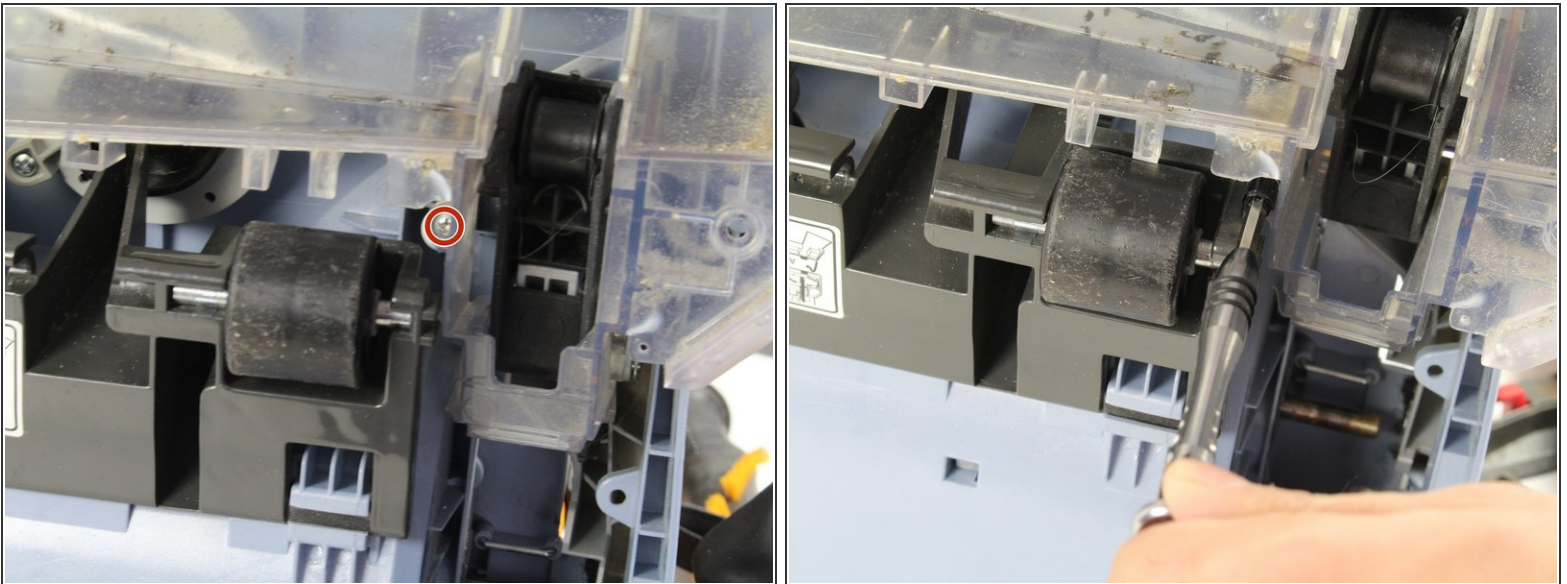

- Remove the screws at the bottom of the white frame near the roller.

Step 7

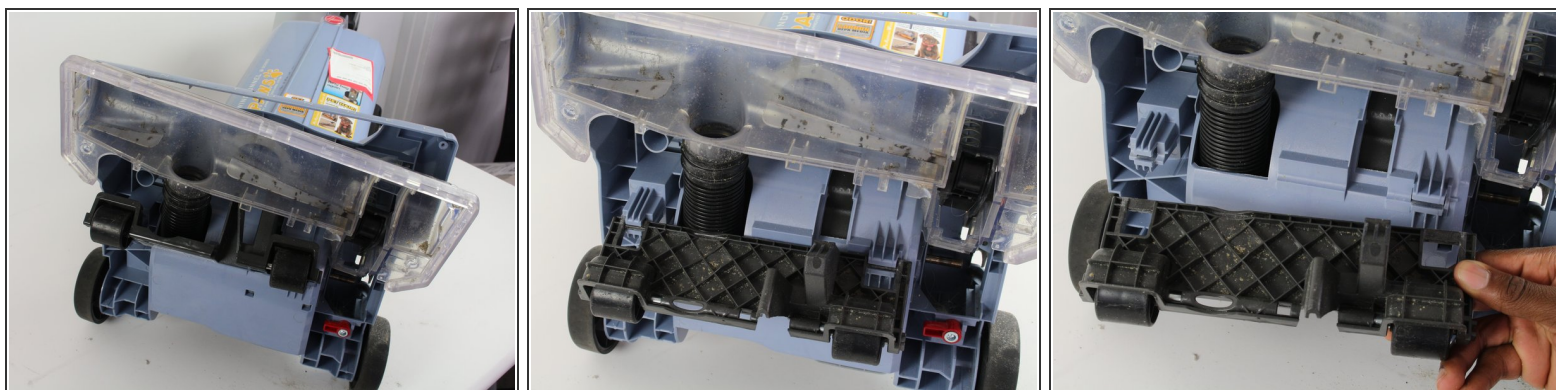

- Pop off the right side of the white frame.
- Pull down the blue hinge and roller.
- Pull free the roller from the vacuum.

To reassemble your device, follow these instructions in reverse order.