



Lenovo Y70-70 Touch Fan Replacement

This guide will show you how to replace the fan on your Lenovo Y70-70 Touch Laptop.

Written By: Trevor James



INTRODUCTION

This guide will walk you through with replacing the fan of your device. You're going to need to sit down and unscrew a lot of screws to access the fan of your device.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [ESD Safe Tweezers Blunt Nose](#) (1)
-

Step 1 — Back Cover




- Flip the device so the back is facing you.
- Using the Phillips #0 screwdriver, unscrew the fourteen screws from the device.

Step 2




- Use the blue Opening Tool to pry-open the back cover.
- Slide it around the perimeter of the PC freeing the back cover.
- Remove the back cover from the device.

Step 3 — Fan

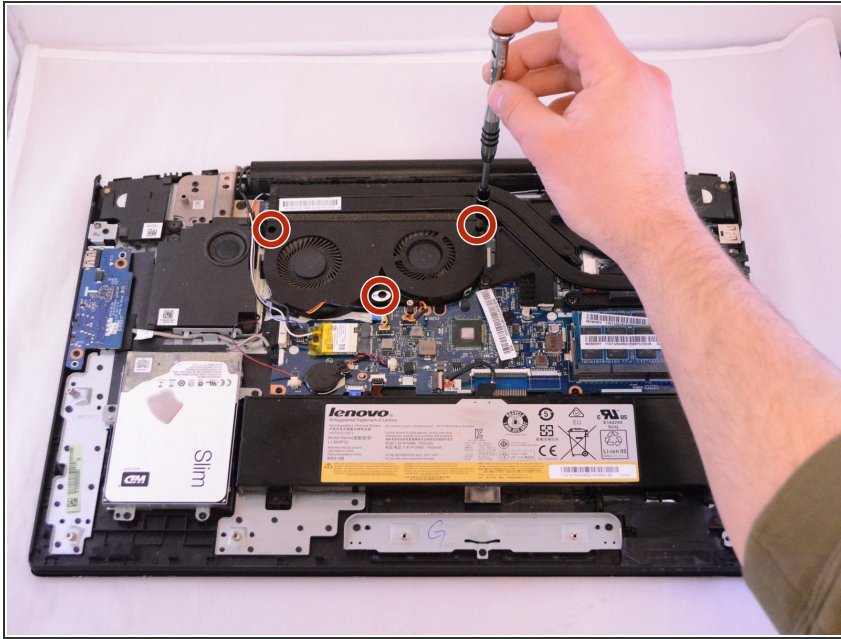

- Using the Phillips #0 screwdriver, remove the three screws connecting the fan to the device.

Step 4

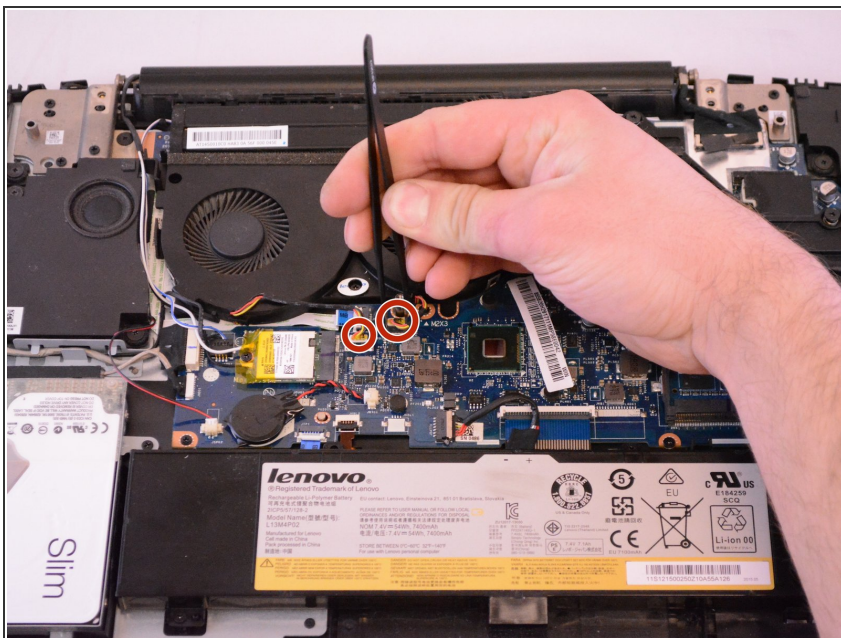

- Using a pair of blunt tweezers, disconnect the fan from the motherboard.
- Remove the fan from the device.

To reassemble your device, follow these instructions in reverse order.