




MSI GE62 Apache Pro 004 Speakers Replacement

MSI GE62 Apache Pro 004 Speakers Replacement

Written By: Majid Al Hashmi

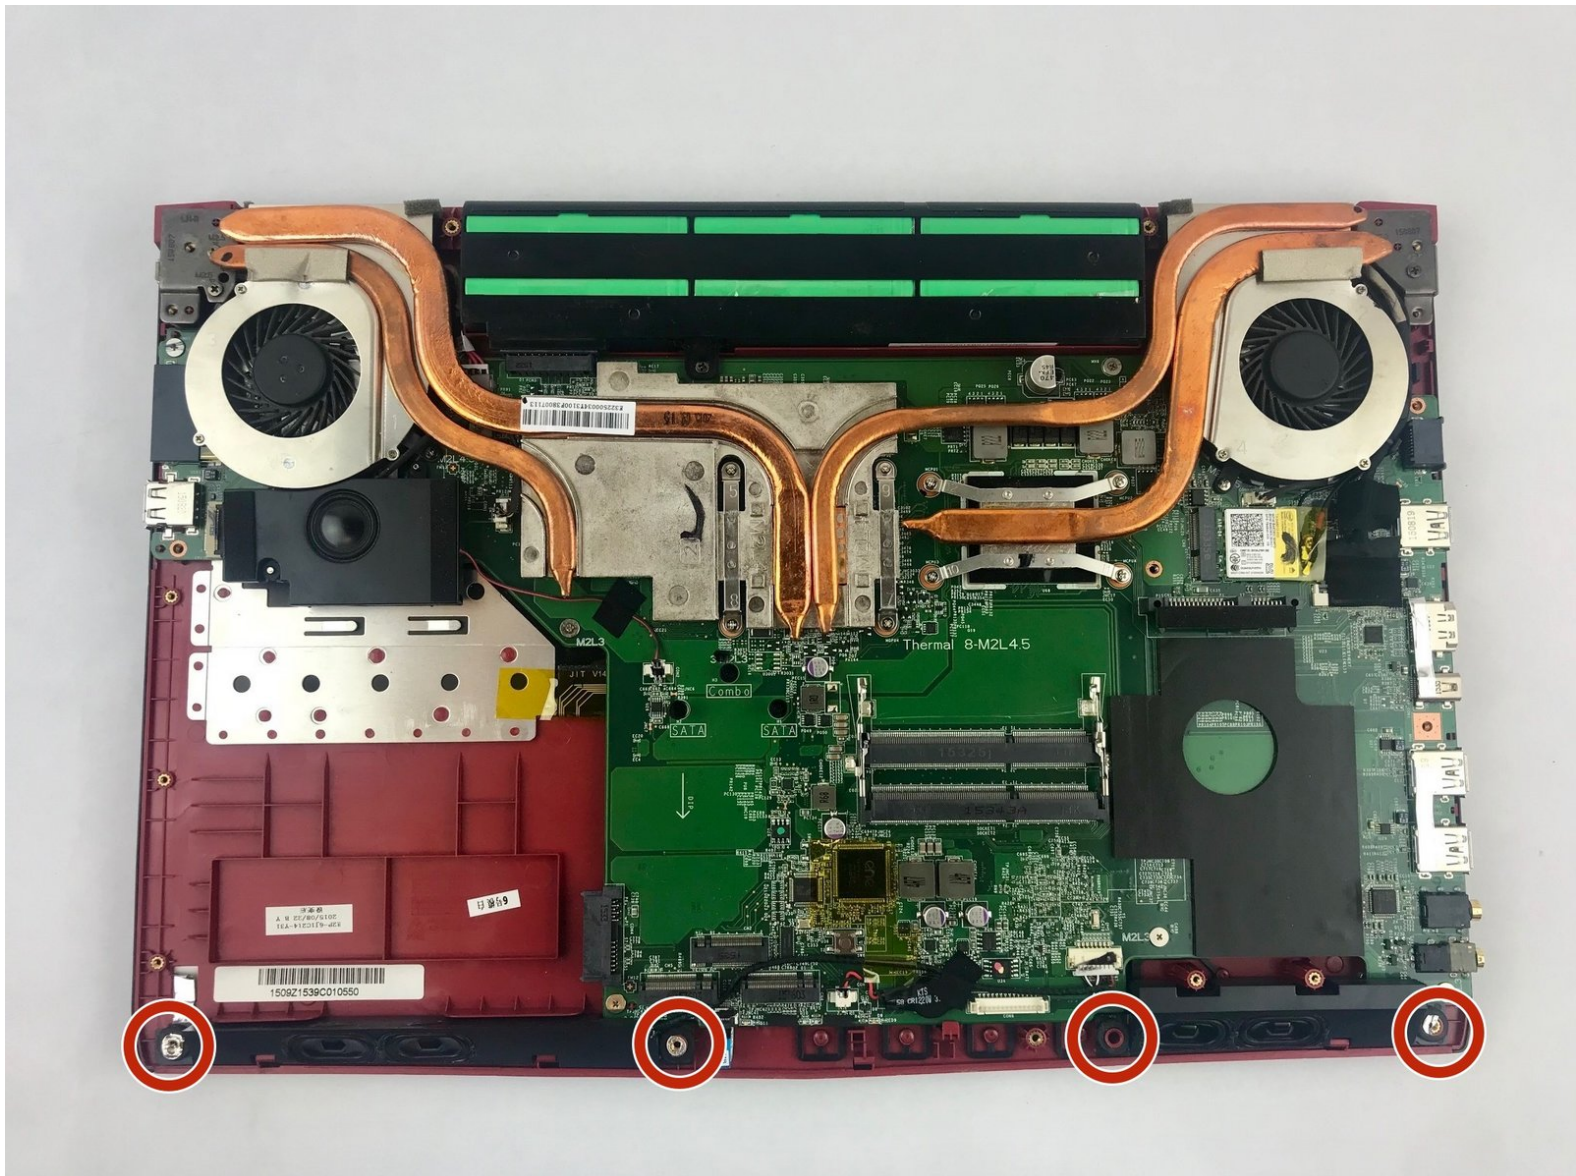

INTRODUCTION

This guide will show how to replace the speakers on the MSI Apache Pro 004 laptop.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

PH00



PARTS:

- [MSI BTY-M6H Replacement Battery](#) (1)

Step 1 — Battery





- Start with the bottom of the laptop facing up.

Step 2





- Remove the 15 screws from the bottom of the laptop with a PH1 screwdriver.
- Remove the bottom plate
- ⓘ Keep track of all the screws and which slot they came from, as they slightly differ. We recommend this system: lay out on a piece of paper and pretending the paper is the device. Place the screws on the paper approximately where they would go

Step 3

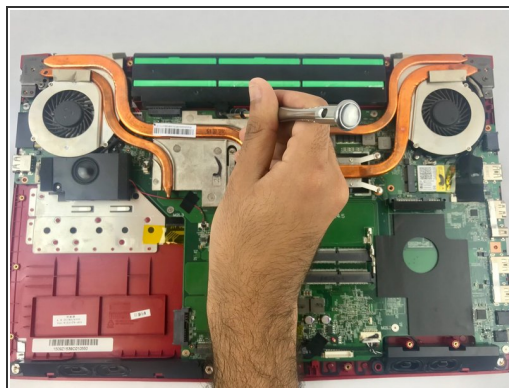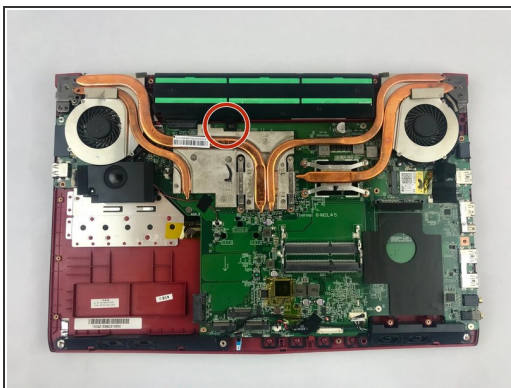



- Remove the screw holding down the battery with a PH1 screwdriver.
- Pull out the battery.

Step 4 — Speakers

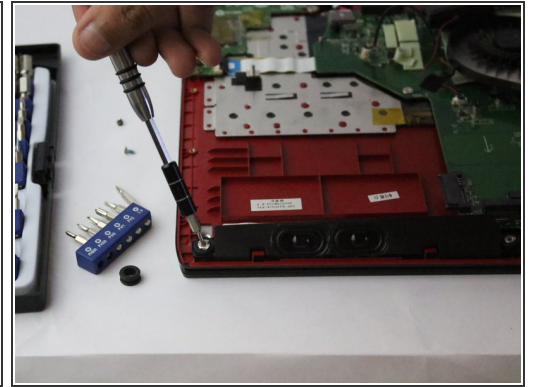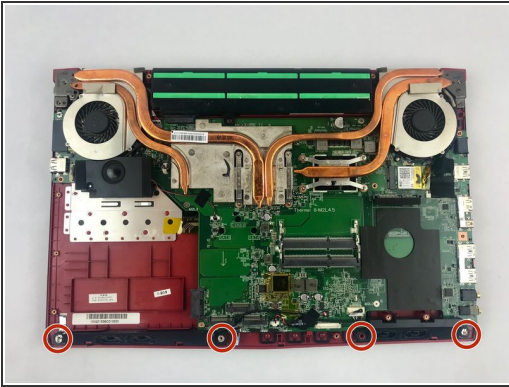

- Remove the four screws, two on each speaker, with a PH1 screwdriver.

Step 5

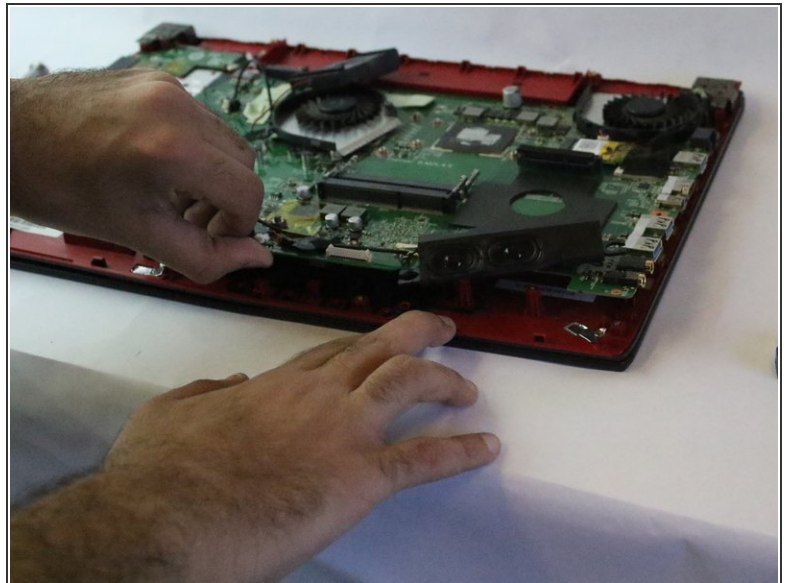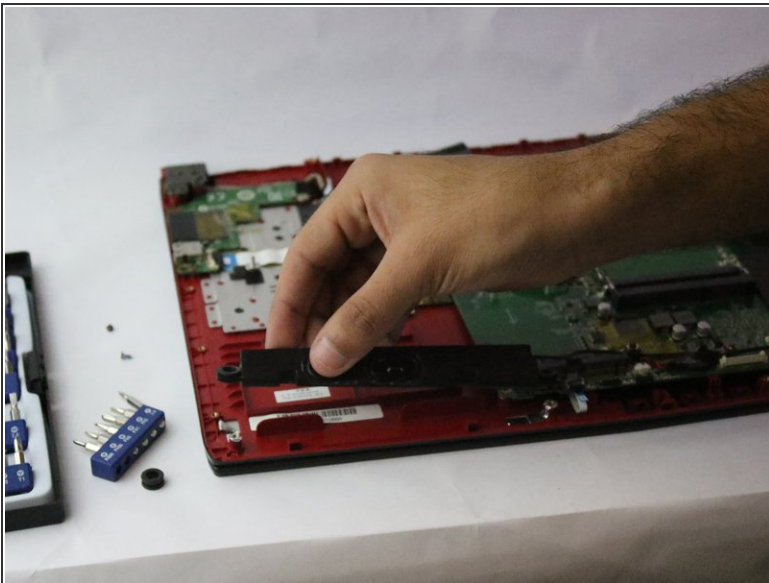

- Gently pull back the speakers until they release from their socket.

⚠ Keep track of which speaker went where. The connectors for the speakers are unique; you cannot use a speaker that should go on the right side on the left side and vice versa.

To reassemble your device, follow these instructions in reverse order.