



Dell Inspiron 17R-N7110 Battery Replacement

If you have narrowed down the cause of your...

Written By: Emily Cone



INTRODUCTION

If you have narrowed down the cause of your laptop's problems to the battery, this guide will explain how to remove and replace your battery to restore normal function to your device. Replacing the battery is very simple.

PARTS:

[Dell DL-I13R Battery](#) (1)


Step 1 — Battery



 Do not touch any electronic components without wearing the [anti-static wrist strap](#). Failure to do so poses a risk of static electric shock, and may cause damage to components.

- Place the laptop on a flat surface with the Dell logo upside down.
- Flip the laptop over. The battery will be in the top center.

Step 2

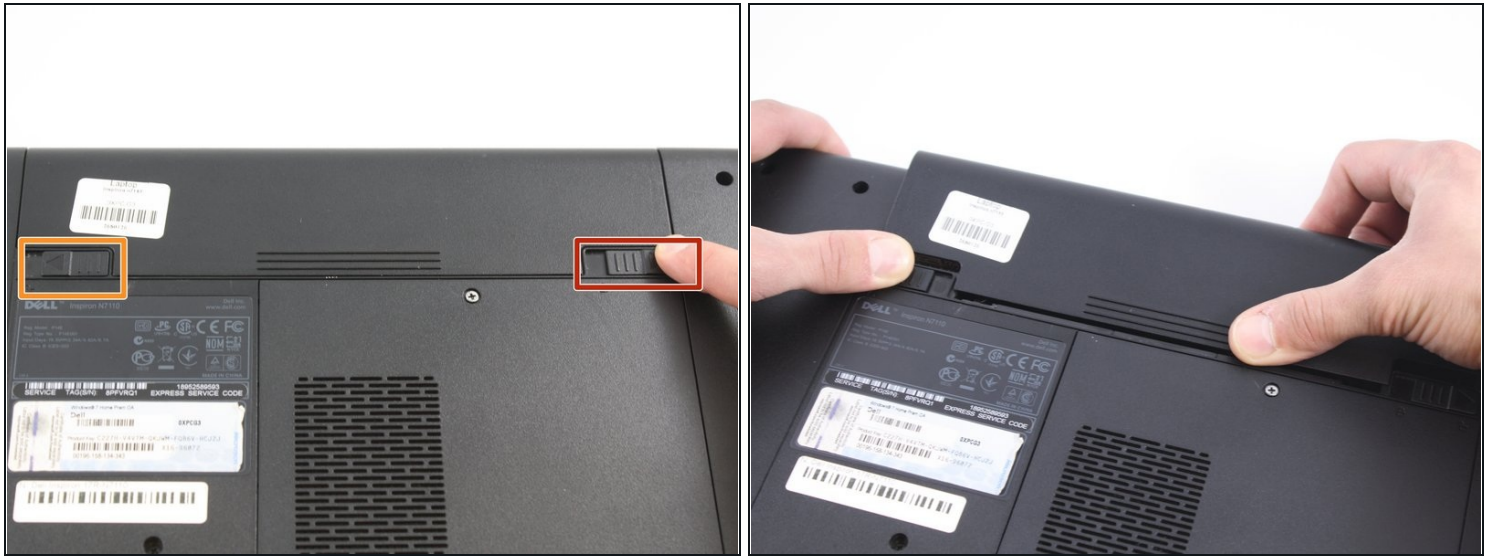

- Slide both the left lock and right lock, towards the center of the battery.
- Push upwards on the grip on the bottom of the battery to remove it.

To reassemble your device, follow these instructions in reverse order.