




Mad Catz Street Fighter IV FightPad RS-DP-LS

Switch Replacement

RS-DP-LS(Right Analog Stick - Directional Pad - Left Analog Stick) switch installation.

Written By: Jefferson Hsu

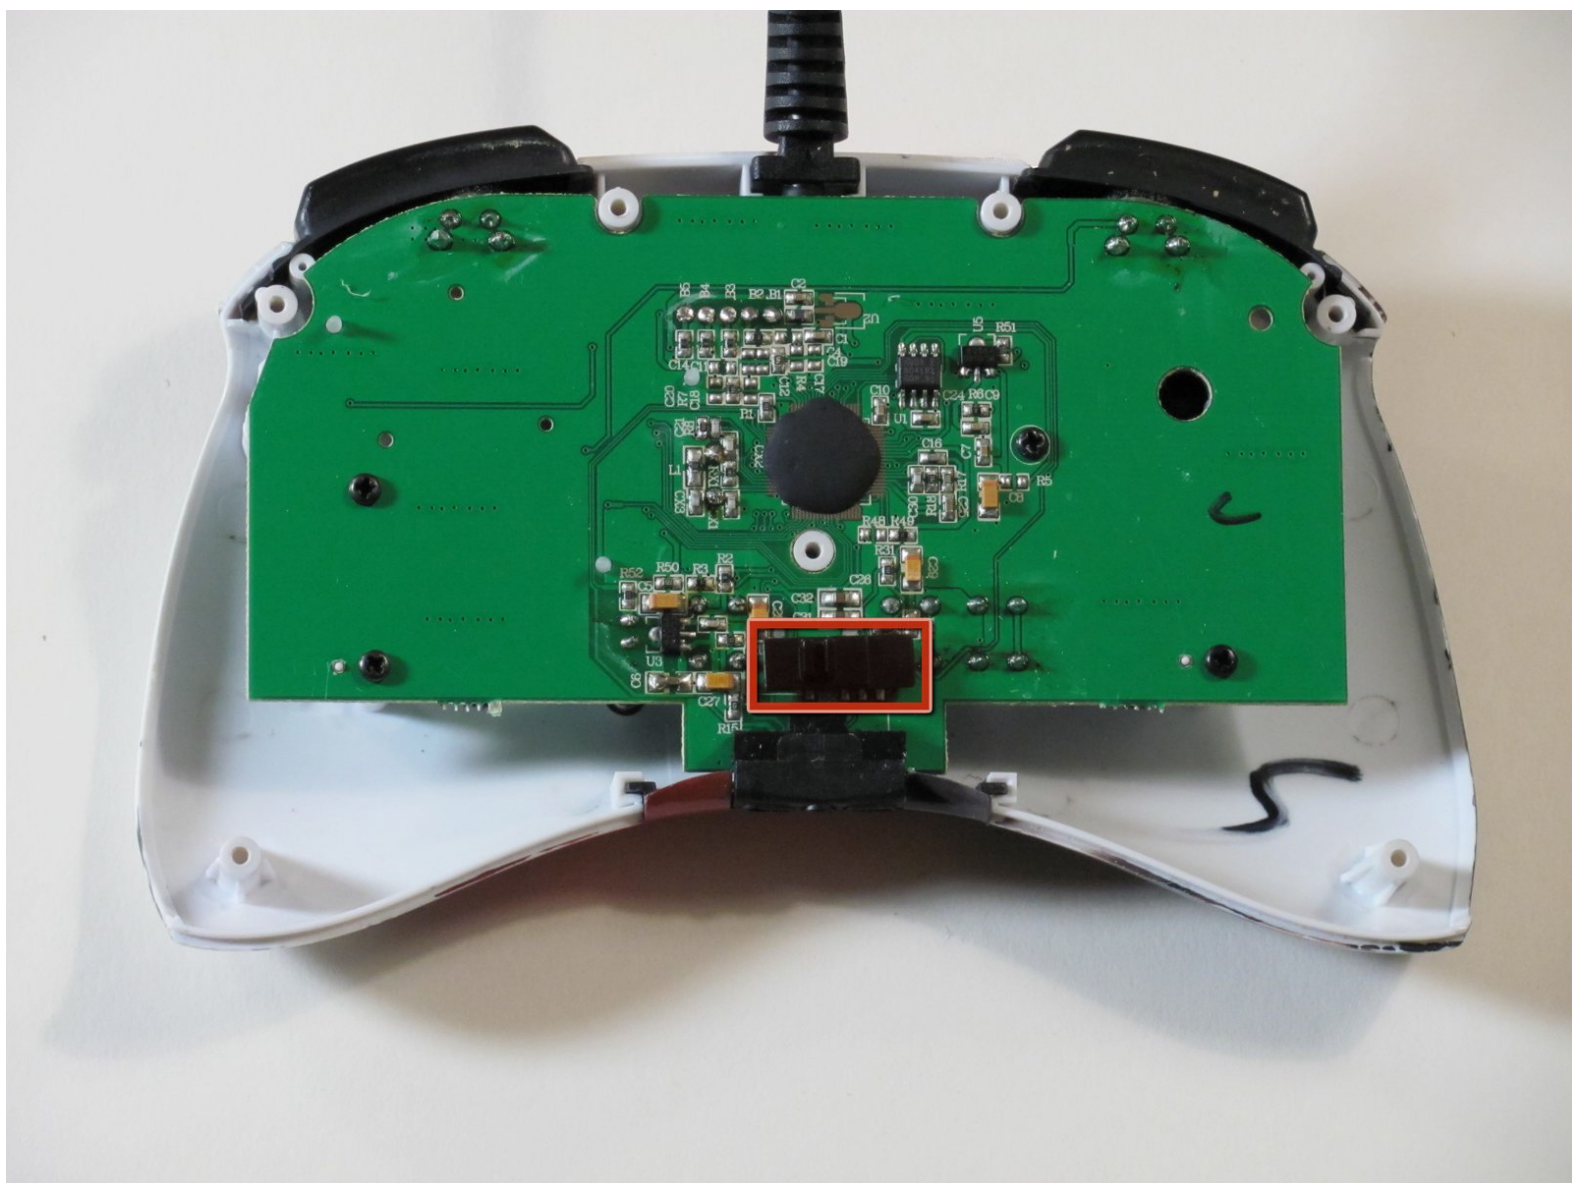

INTRODUCTION

Use this as a guide to remove or replace the switch on the rear side of the FightPad.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear and Side Case




- Use tweezers to completely remove the sticker from the rear of controller.

Step 2





- Find the seven 8.3 mm Phillips screws on the rear of the controller and remove them.

Step 3

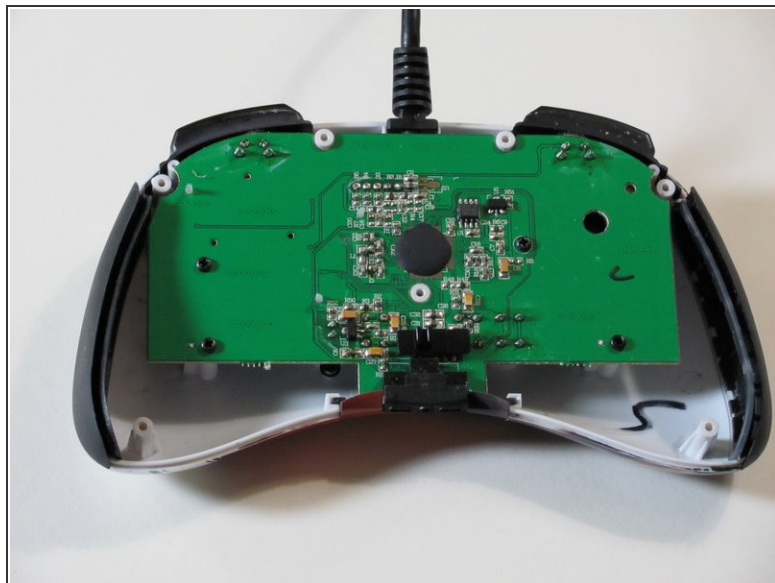



- Use a plastic opening tool to separate the rear and front casing by inserting it in-between the two cases.
- Use the plastic opening tool to pry the two cases apart.

Step 4

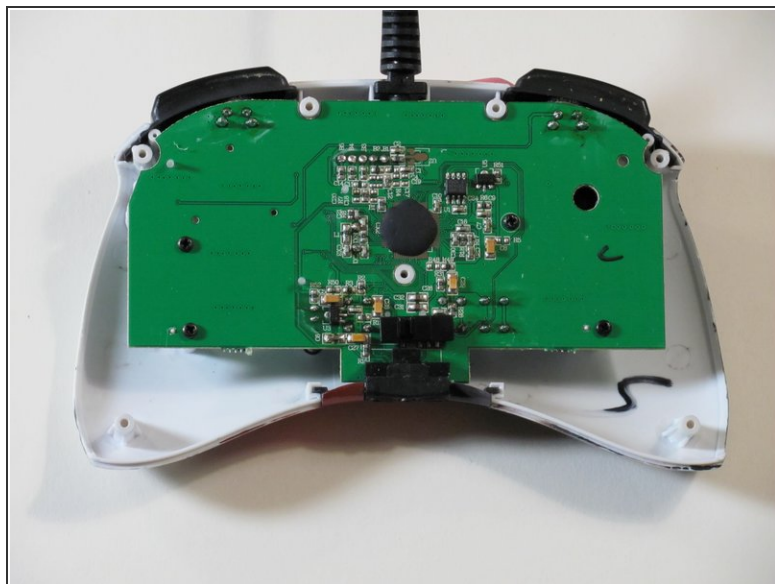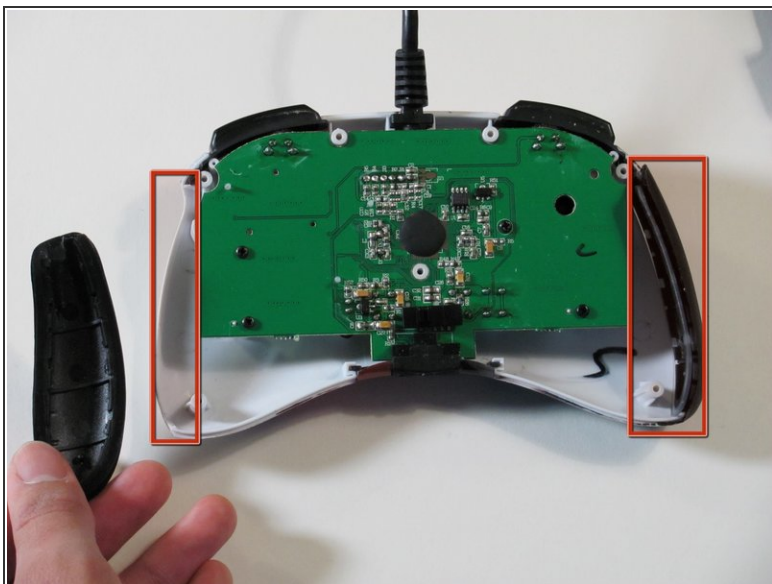

- Remove the two rubber side grips.

Step 5 — RS-DP-LS Switch

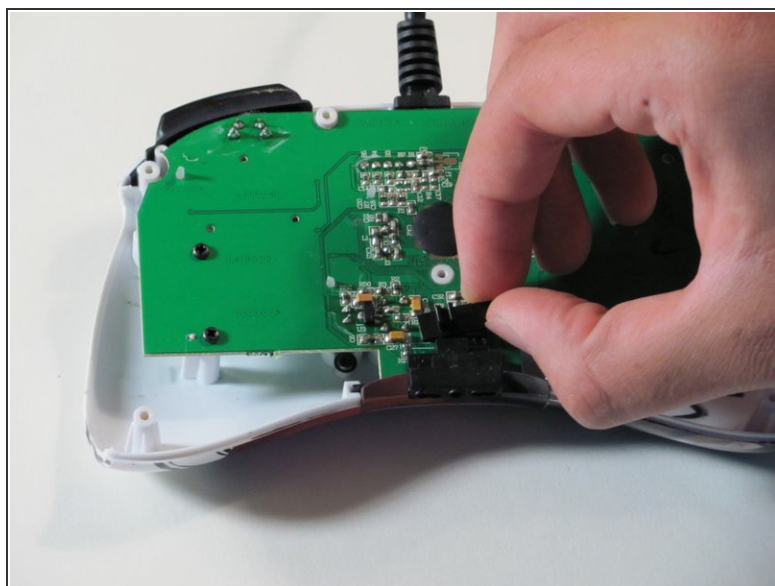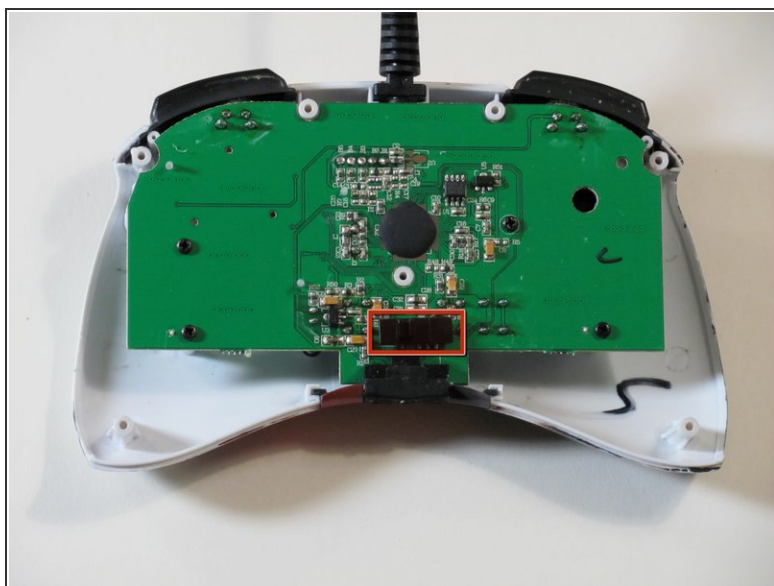

- Locate RS-DP-LS switch.
- Pull upwards on the switch to remove it.

To reassemble your device, follow these instructions in reverse order.