




# LG Optimus F60 Power Button Replacement

Use this guide to replace the power button in your LG Optimus F60.

Written By: Jasmin Piena

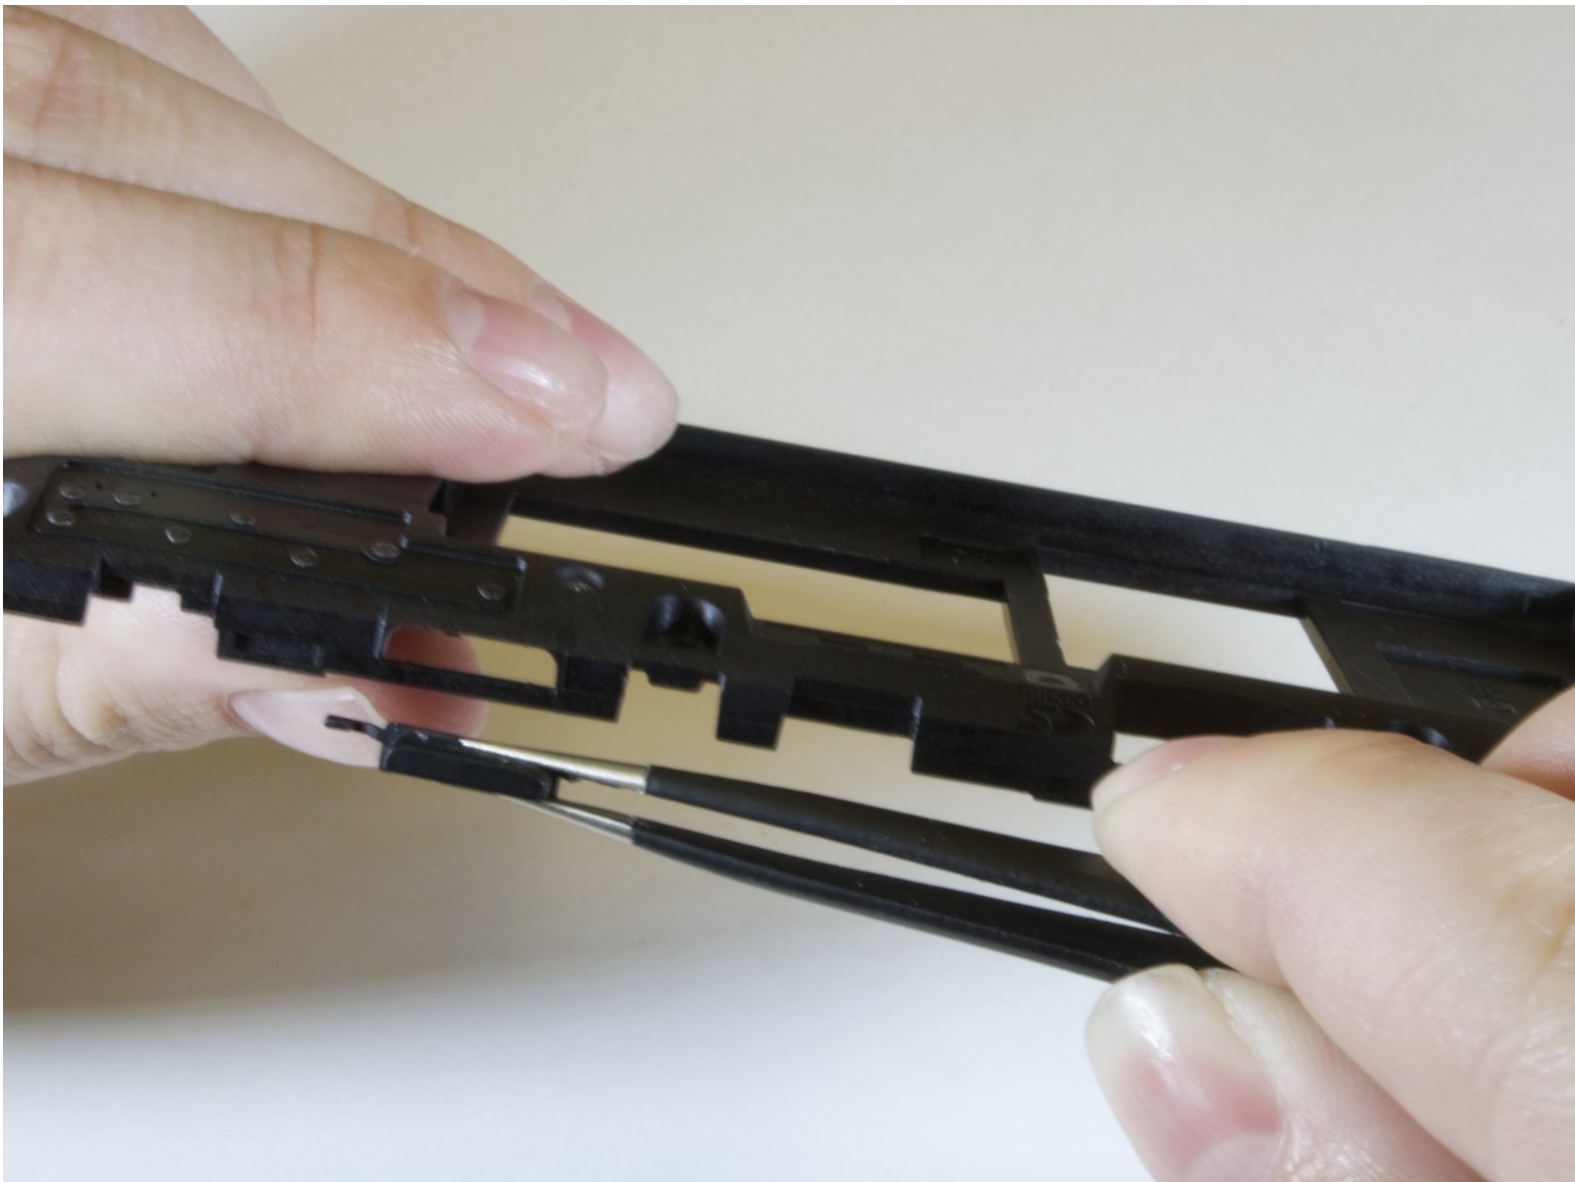

## INTRODUCTION

This guide will take you through the process of replacing the power button in an LG Optimus F60. This task should take about 2-4 minutes to complete.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- Hold the phone in your hand and position the small plastic opening tool or your finger under the lip of the phone by the USB port.
- Pry or lift up on the indent with the opening tool.
- Remove the back panel.

## Step 2



- Place the small plastic opening tool or your finger at the indentation at the base of the battery.
- Pry upwards or lift with your finger and remove battery.

## Step 3 — Power Button



- Remove the eight 4 mm screws on the inner panel using the phillips #000 Screwdriver

## Step 4



- Remove inner panel using plastic opening tool.
- ⓘ Apply force upwards while wiggling the tool further in.
- Remove bottom of inner panel.



## Step 5



- Use plastic opening tool to take off the inner pannel.
- Take out faulty power button replace with new one.

To reassemble your device, follow these instructions in reverse order.