




Asus Tablet MeMo Pad 7 ME7000C Microphone Replacement

Use this guide to replace a faulty or non-working microphone in your Asus Tablet MeMo Pad 7 ME7000C.

Written By: Katie

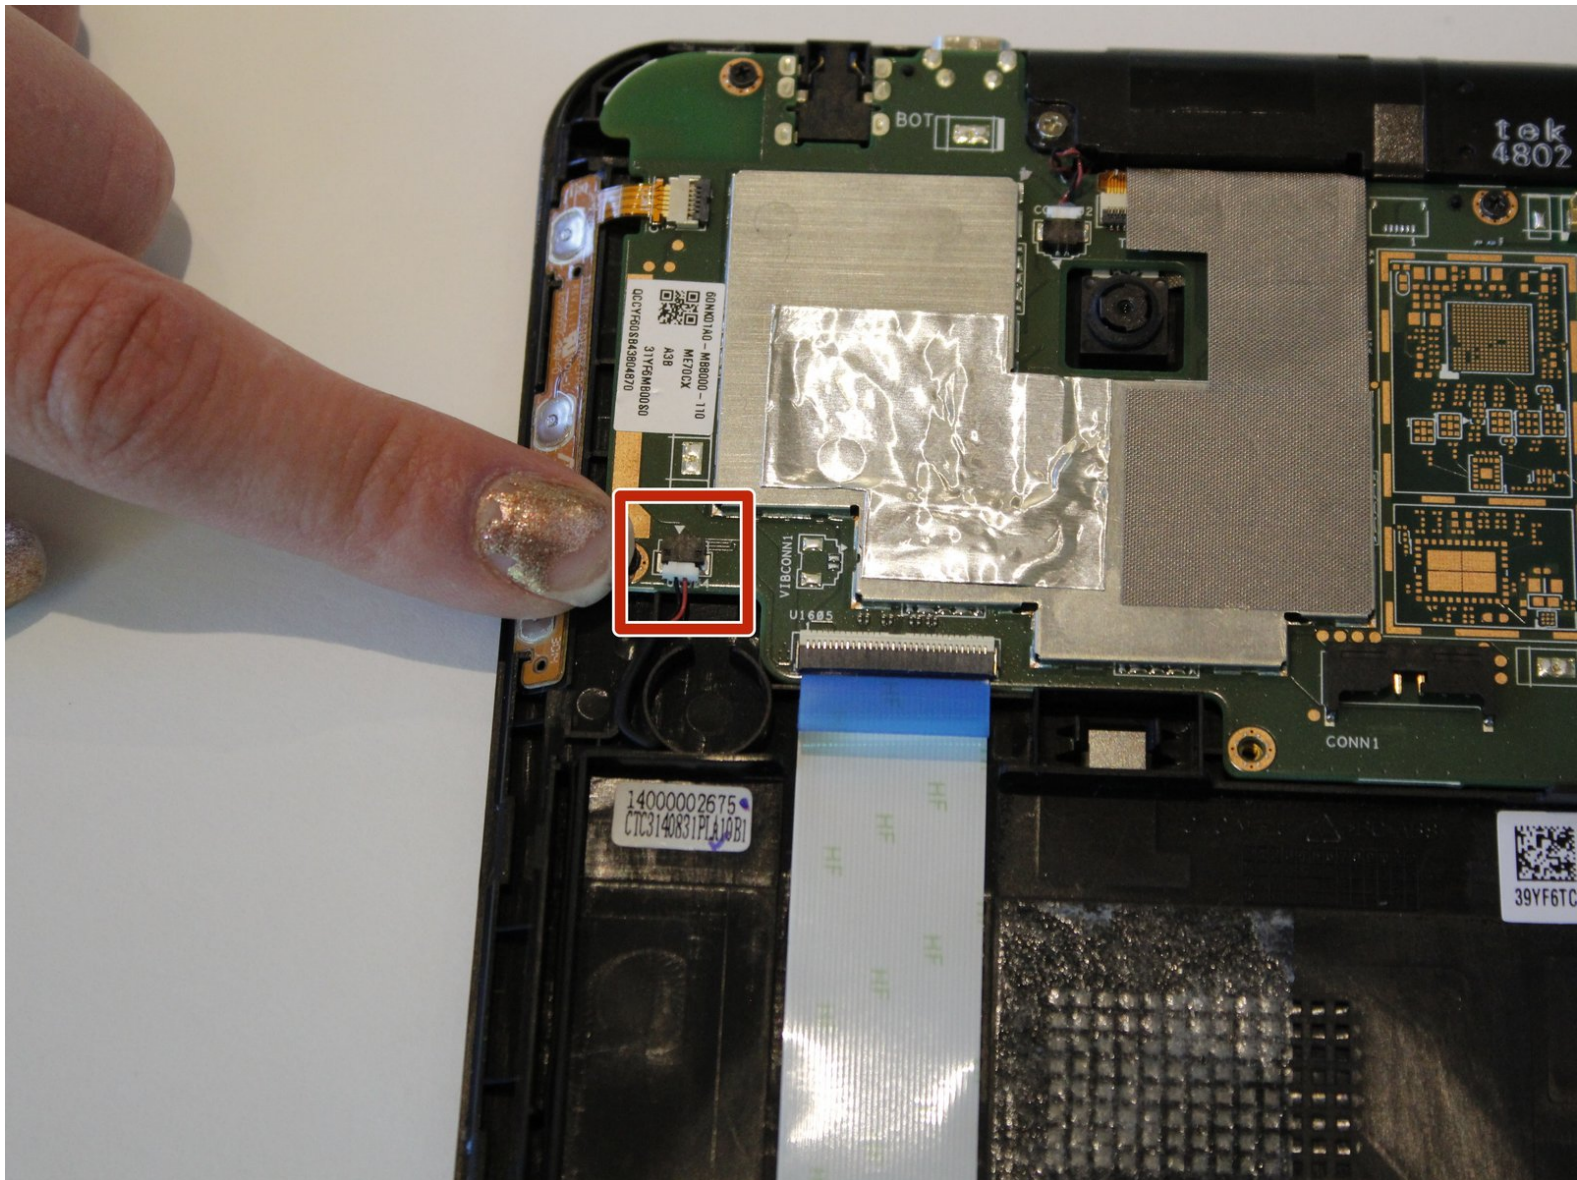

INTRODUCTION

This guide will walk you through the steps to replace a dead or non-working microphone in an Asus Tablet MeMo Pad 7 ME700C. Make sure you are using the proper tools and exercising caution while opening the back panel to avoid causing damage to the tablet.



TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel



- Flip over the tablet so the back cover is facing you. Hold the second button on the left below the volume buttons down until it powers off.

Step 2

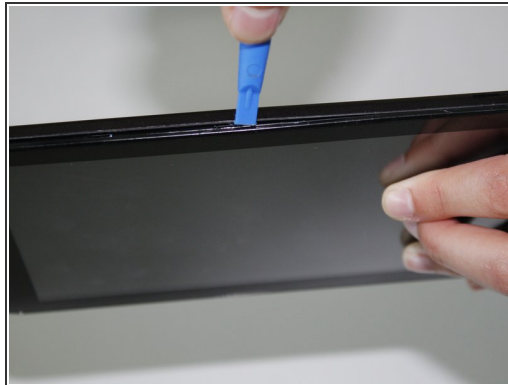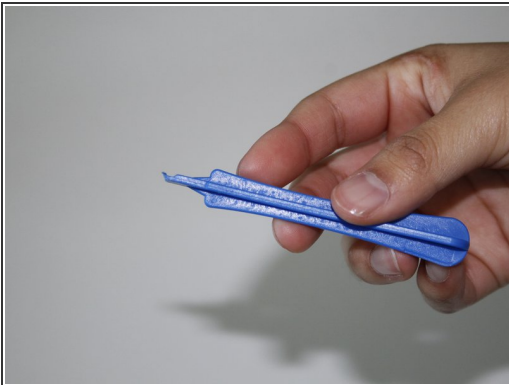



- Beginning in the upper corner of the tablet, use the blue plastic opening tool and run it along the seam. Do this slowly so you don't cause damage to the device.
- ⓘ If you are having trouble using the blue plastic opening tools, try using the black spudger instead.

Step 3




- Pull the rear panel and the display screen away from each other.

Step 4 — Battery

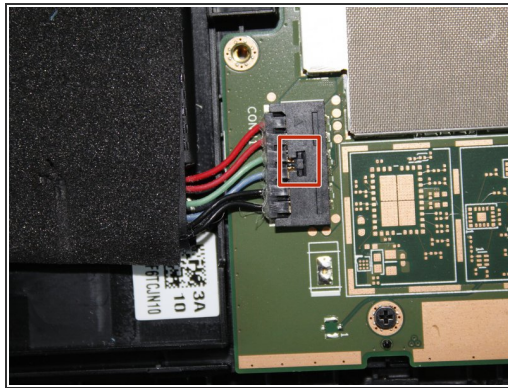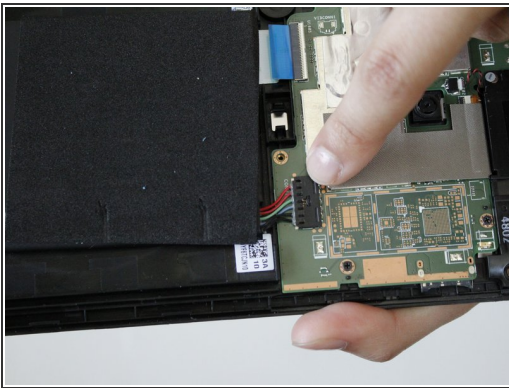



- Using the spudger, gently press on the black button on the plug port to release the battery from the plug.

Step 5

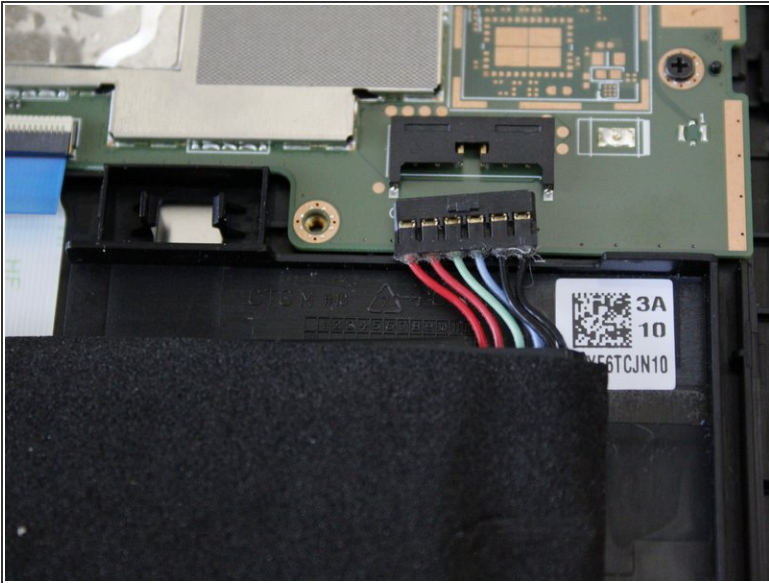


- Remove the battery from the device.

Step 6 — Microphone

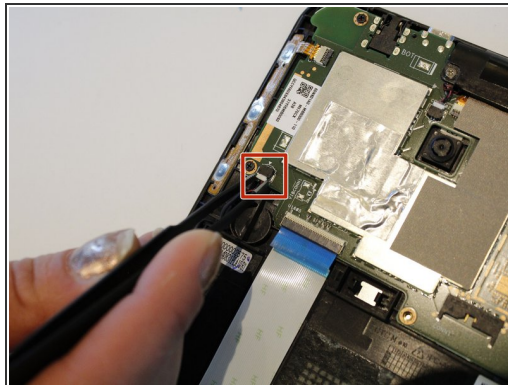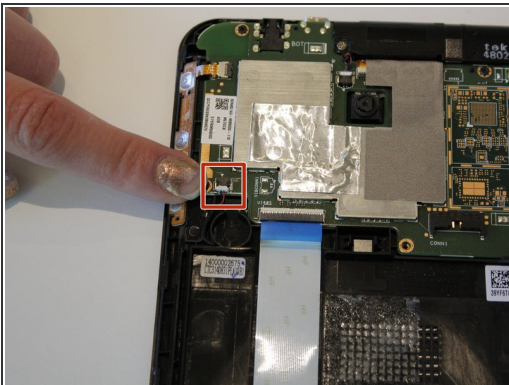

- Disconnect the microphone plug from the motherboard.
- Use the tweezers to gently pull the white plug from the motherboard.

Step 7

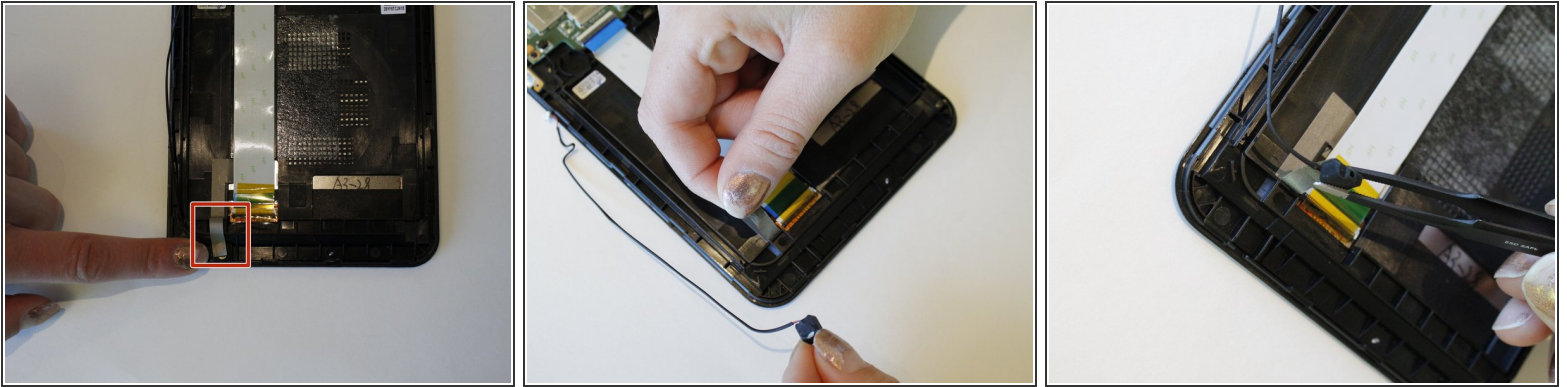

- Using the tweezers, peel back the silver adhesive, exposing the microphone.
- ☑ Make sure you leave the tape adhered to the device for reassembly.
- Gently remove the microphone with tweezers.

To reassemble your device, follow these instructions in reverse order.