




Fender Frontman 15r Speaker Replacement

This guide shows how to remove the old speaker and replace it with a new one.

Written By: Stephen Figueira

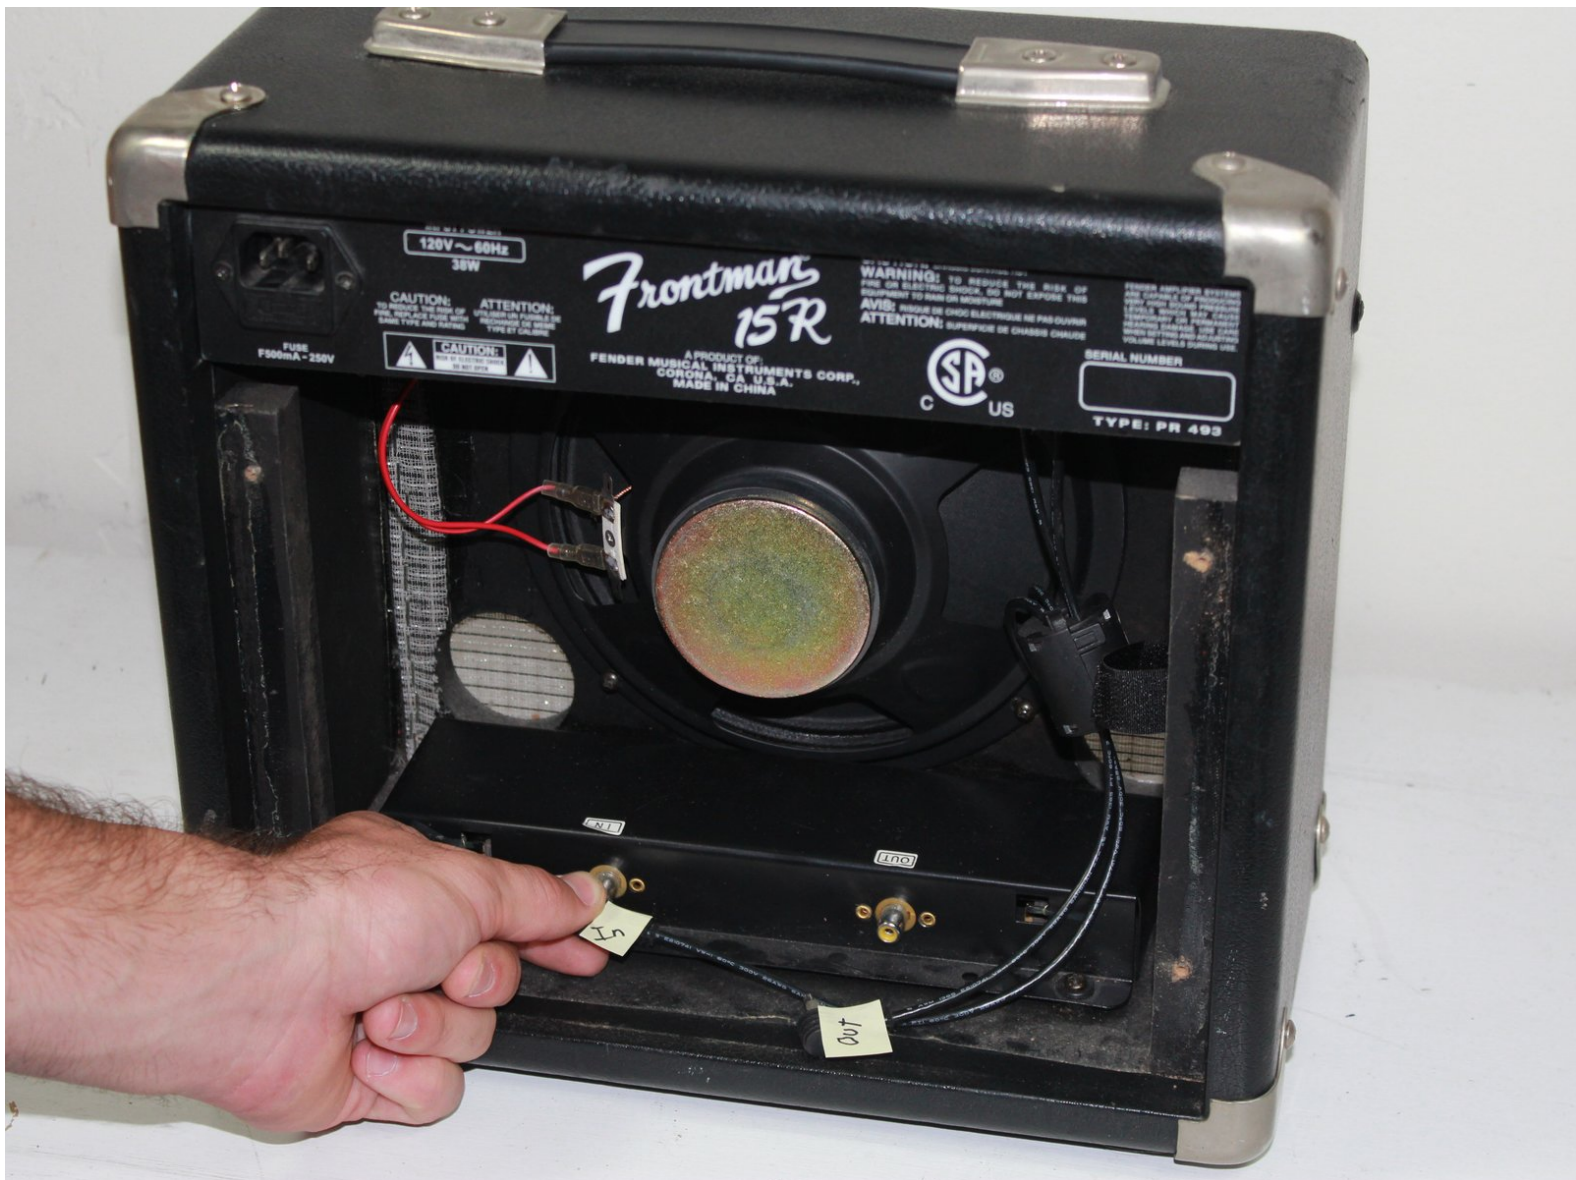

INTRODUCTION

If the speaker is dead or blown, install a new one.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back panel



- ⚠ Be sure to unplug the device before proceeding.
- Use a Phillips #0 screwdriver to remove the four 21.7mm screws holding the back panel to the frame.

Step 2




- Once the screws are out, use a plastic opening tool or spudger to pry the top of the back panel open. There may be some resistance, but it will eventually pry loose.

Step 3




- Once the top is separated, use your hand to remove the back panel from the unit.

Step 4 — Speaker

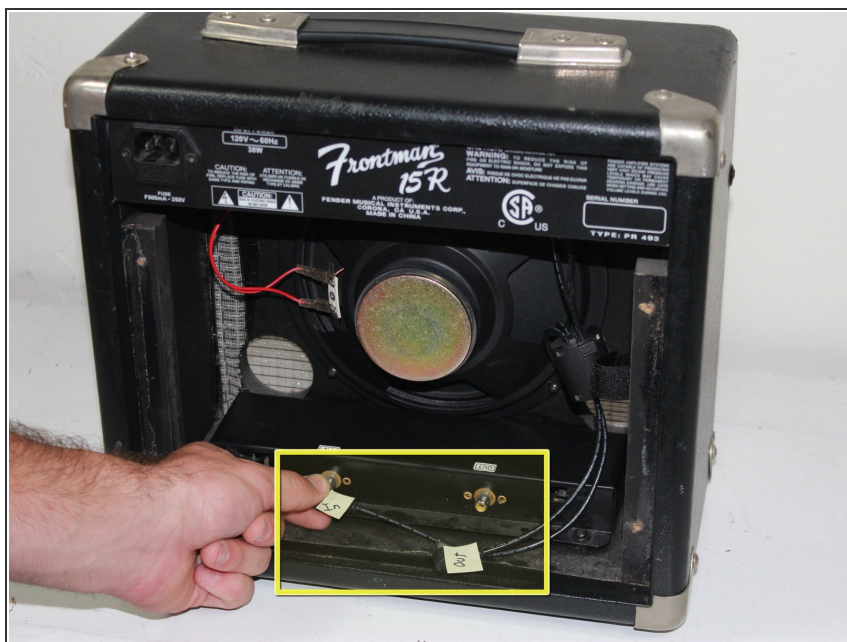


- Using tape or a post-it, label the input and output wires on the reverb. Remove these wires from the box.

Step 5

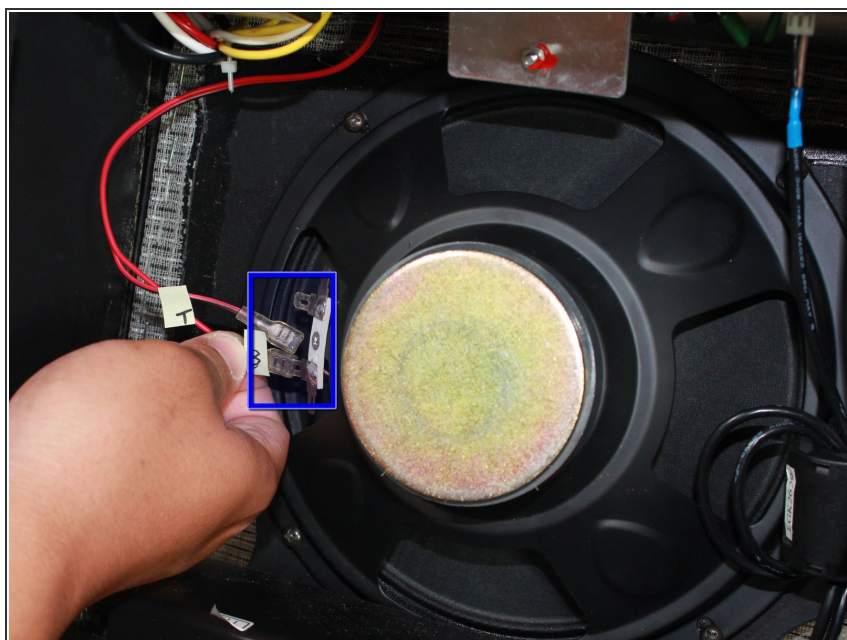

- Remove the two female connection terminals from the speaker terminals.

Step 6

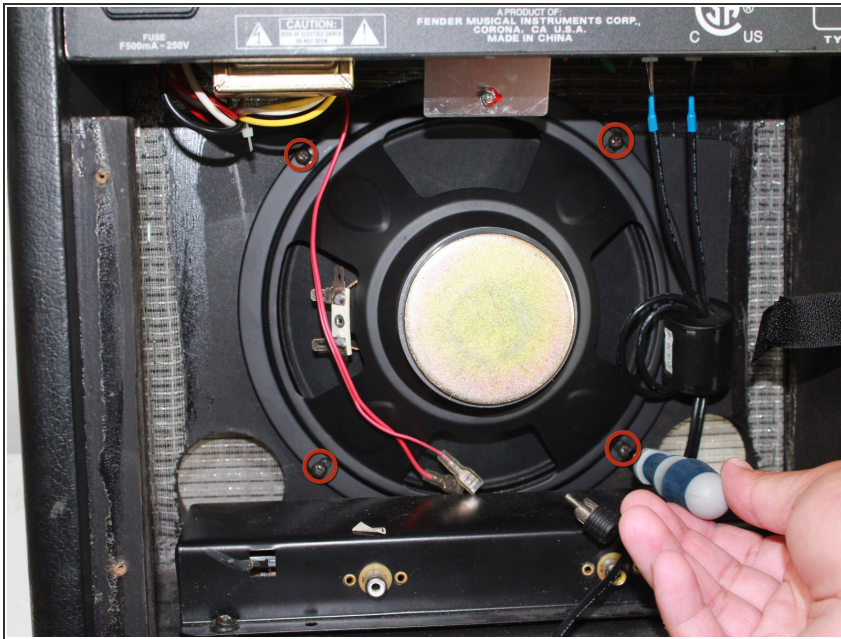

- Use a Phillips #1 screwdriver to remove the four 21.9 mm Phillips screws from the perimeter of the speaker.

Step 7



- Gently remove the speaker.

To install the new speaker, follow the instructions given in reverse.