



Mitsubishi WD57734 Lamp Replacement

Install a new lamp in your Mitsubishi WD-57734 DLP HDTV.

Written By: Herman Chai



INTRODUCTION

Accessing the lamp in this television is straightforward and requires minimal disassembly.

TOOLS:

- [Latex or nitrile gloves](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Lamp




- ⓘ Before disassembling your television, be sure it is powered off and unplugged.
- Remove the single 18 mm Phillips #1 screw on the lamp access panel.

Step 2



- Pull the lamp access panel off of the back panel of the television by pulling straight back on the left side of the panel near the screw then pulling to the left.

Step 3

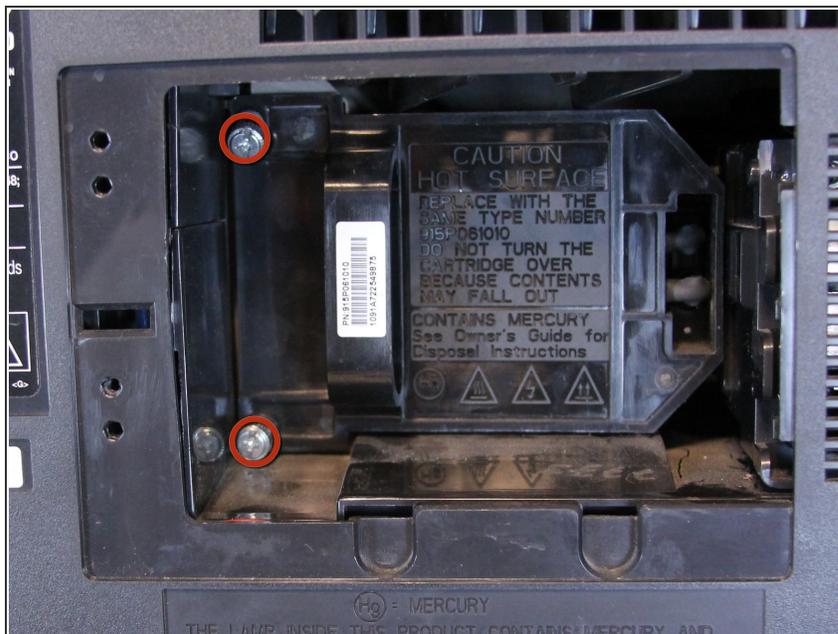

- Loosen the two Phillips #2 screws securing the lamp housing to the television until the screws will swivel vertically.
- ⓘ These two screws are permanently attached to the lamp housing and cannot be removed completely.

Step 4



- Using the handle, pull the lamp housing straight back out of the television.
- ⚠ Do not touch the glass of the lamp with your bare hands. The oil from your fingers can distort the TV image and lead to other issues.

To reassemble your device, follow these instructions in reverse order.