

World Dryer Airforce J4-973A3 Air Filter Replacement

Replace or clean an air filter within the World Dryer Airforce J4-973A3.

Written By: Blane Hirsh



This document was generated on 2020-11-28 06:54:46 AM (MST).

INTRODUCTION

Occasionally the dryer air may be muffled or too hot due to a clogged filter, and so cleaning or replacement may be necessary. Disassembly of the device requires a special bit for removal of tamper-proof screws.



TOOLS:

- Phillips #2 Screwdriver (1)
- Tamper Resistant TORX Plus TR Bit (1)
- Spudger (1)

Step 1 — Air Filter







- In order to change the air filter, start with the removal of the outer metal casing. Use the appropriate security bit.
- Using the special bit, remove the large screws at the bottom of the casing.
- To remove the case, lift the indicated spot with your hands.
- The direction for turning the screws is different than what was indicated on the small sticker above the hole.

Step 2








- To access both filters, unscrew all three 1/2" Ph2 screws.
- Gently pull the plate away from the black, coarse filter.

Step 3



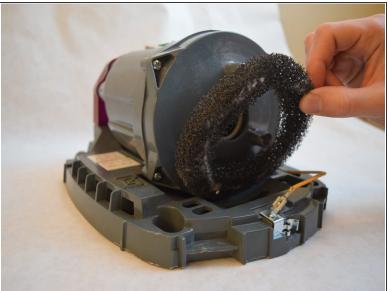

- After removing the small grey filter, pull on the black, ring-shaped filter to remove it.
- (i) We recommend either vacuuming the filters or washing them to remove the dust that has accumulated on the filter.
- Leave the filters out to dry for 24 hours before putting it back into use, in order to avoid water damage or electric shock!

To reassemble your device, follow these instructions in reverse order.