



# Blu Grand M Plastic Plate Replacement

How to replace the plastic plate that covers the camera in a Blu Grand M.

Written By: Cameron Retzlaff



# INTRODUCTION

Prerequisite-only guide for removing the plastic plate covering the camera.



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Remove the two plastic plates with a plastic opening tool.

## Step 2




- Using a Phillips #000 screwdriver, remove the 3mm screws. Be sure to do this for the top and bottom of the phone.

## Step 3



- Remove SIM card tray with paperclip or SIM card tray removal tool.
- Push down on the phone beside the camera and up on the backplate with your thumbs to remove the back plate. Remove adhesive if necessary.

## Step 4

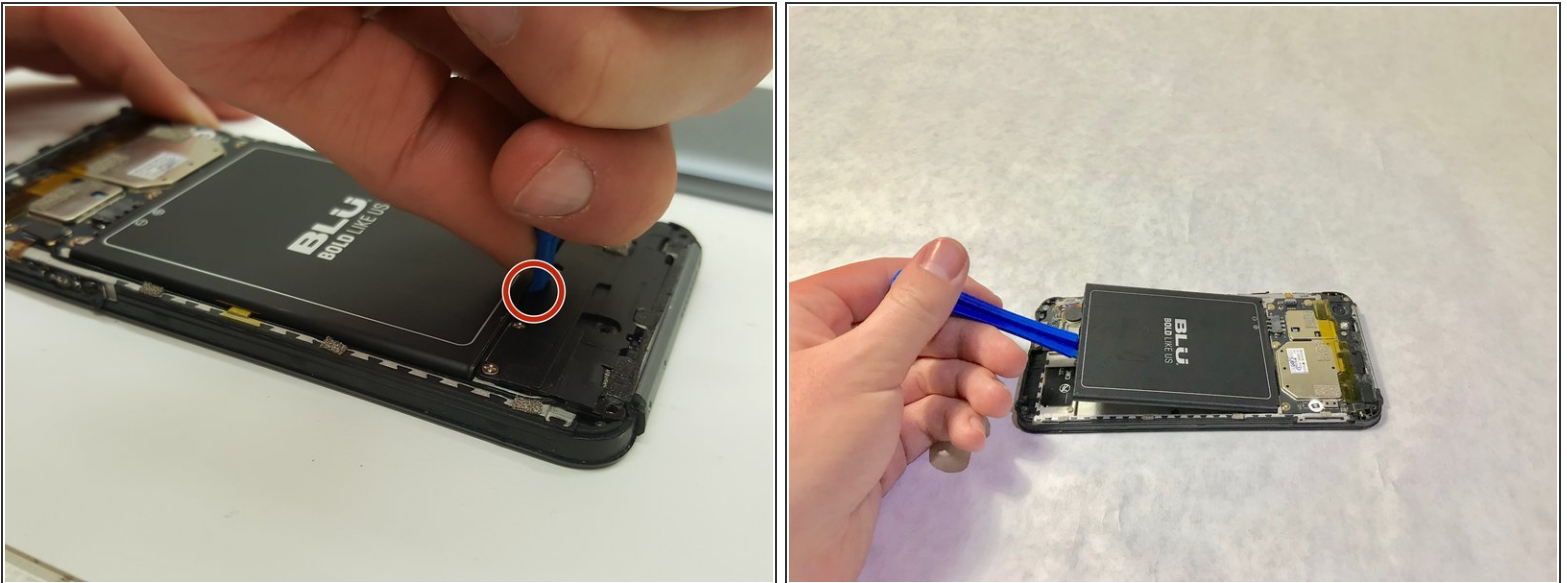

- ⓘ There is a patch of adhesive underneath the battery, which can make it difficult to remove.
- Place the plastic opening tool in the highlighted indent, and push up on the battery to remove it.





## Step 5 — Plastic Plate



- Remove the yellow plastic tape using a pair of tweezers.

## Step 6

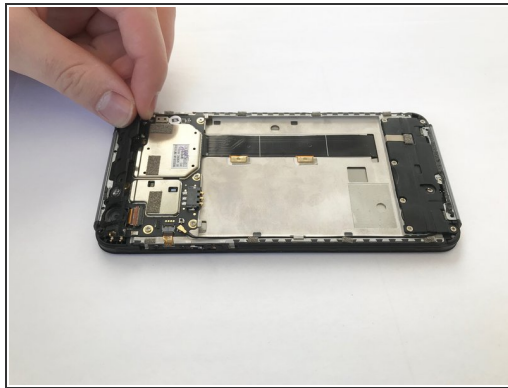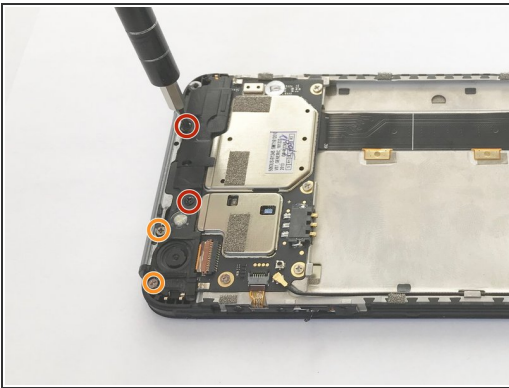

- Use a Phillips #000 screwdriver to remove two black 4.0mm screws.
- Use a Phillips #000 screwdriver to remove 2 silver 4.0mm screws
- Remove the plastic cover along the top by tugging on it on the corner as shown.

To reassemble your device, follow these instructions in reverse order.