



Casio CTK-501 Bottom Panel Replacement

Written By: Jimmy Winne



 **TOOLS:**

Phillips #2 Screwdriver (1)

Step 1 — Bottom Panel




- Flip the keyboard over so that the bottom is facing up.
- Remove the twenty-seven 12 mm screws from the dark-grey panel using a Phillips #2 screwdriver.

Step 2



- Remove the bottom panel by lifting and pulling it towards yourself.

Step 3

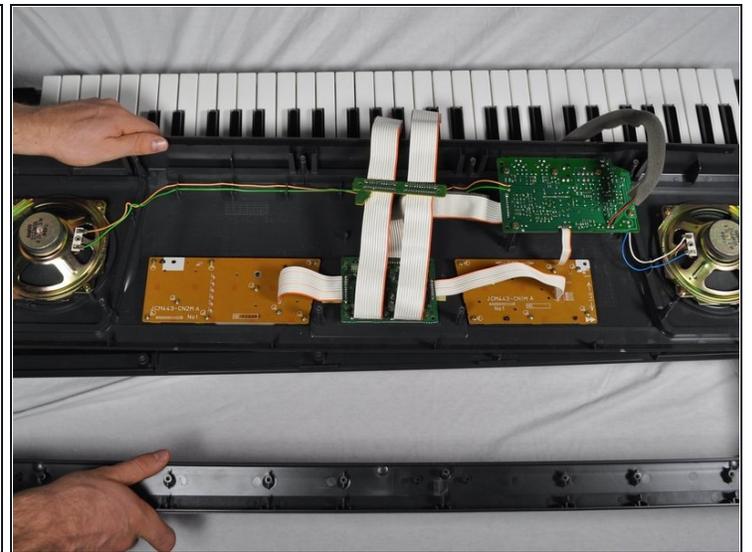

- Flip open the top half of the keyboard.
- Set the keyboard onto the bottom half with the internal parts facing up.

⚠ Be careful not to let the bottom drop.

To reassemble your device, follow these instructions in reverse order.

