




Kyocera Hydro Life SD Card Replacement

This guide will detail the process to replace the SD Card.

Written By: Rebecca Lamb

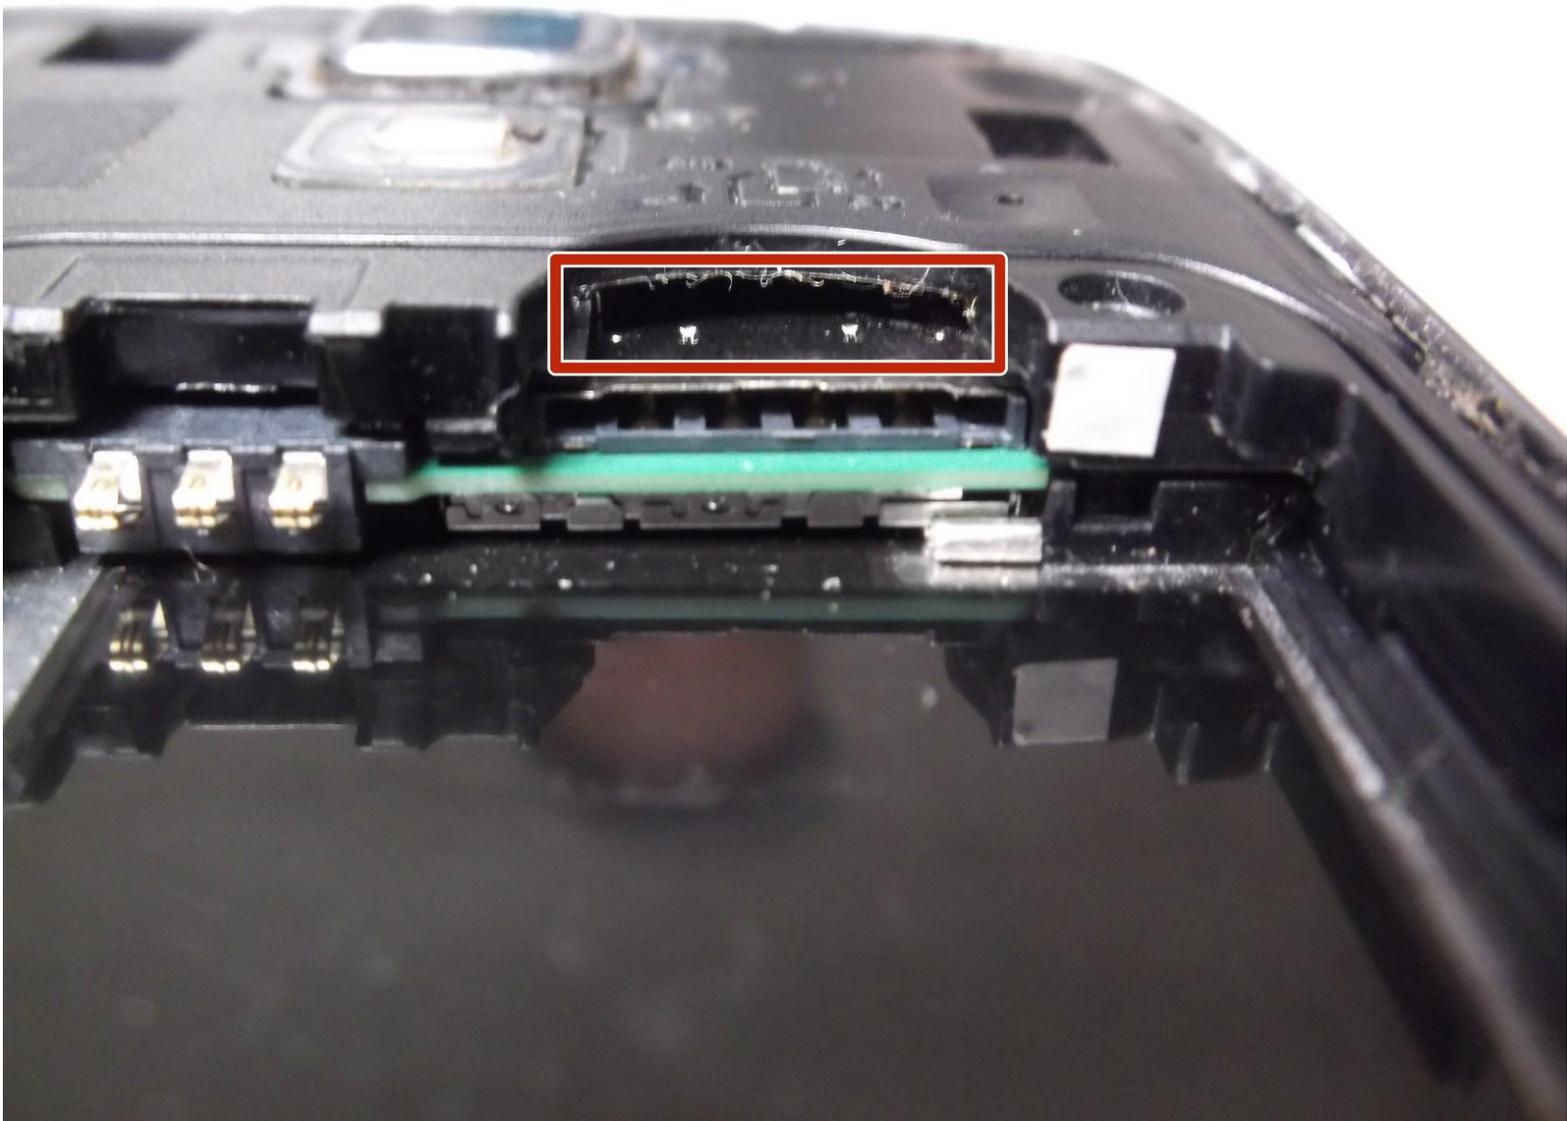

INTRODUCTION

This guide will detail the process to replace the SD Card.



TOOLS:

- [Fingers](#) (1)



PARTS:

- [16 GB SD Card](#) (1)

Step 1 — SD Card




- Open the back of the phone by prying the back cover off.

Step 2



- Remove the battery by pulling up on the end.

Step 3

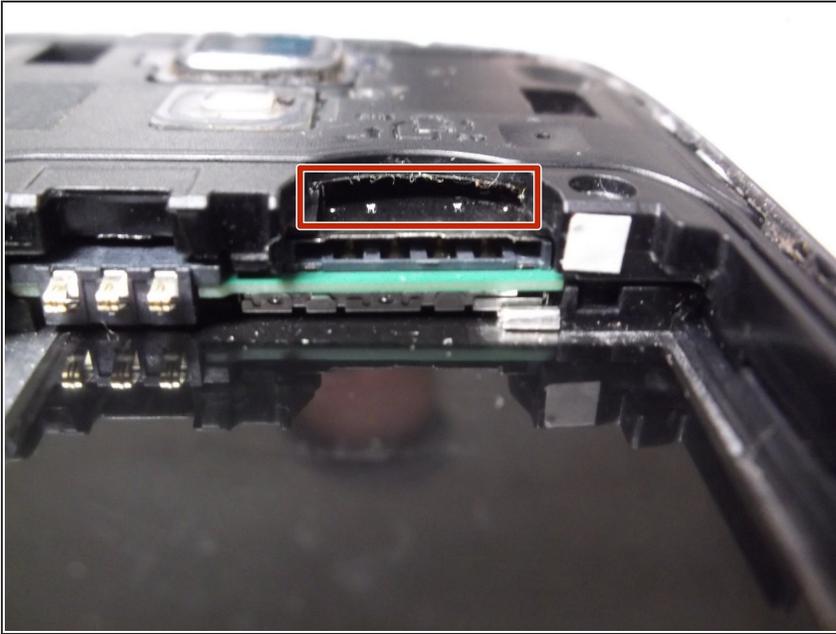

- Remove the SD Card by pushing in slightly and then releasing, allowing the card to slide out slightly and then removing it.
- ☑ Place a new SD Card into this slot, making sure to line up the metal prongs.

To reassemble your device, follow these instructions in reverse order.