




# Samsung Galaxy Y s5360 Home Button Replacement

This guide will explain how to replace the Home Button on the Samsung Galaxy Y.

Written By: Nico Sawyer

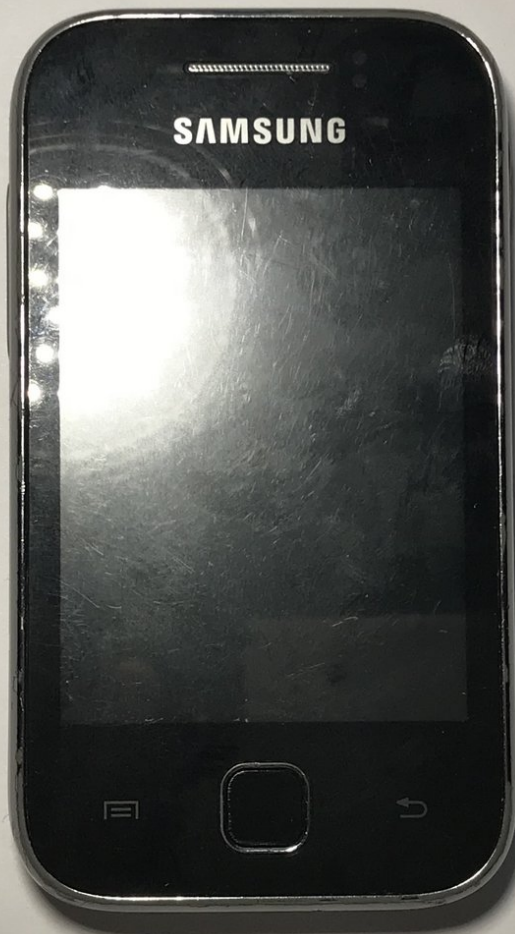

# INTRODUCTION

This guide shall detail and illustrate how to replace the home button for a Samsung Galaxy Y in the situation of the home button not being responsive or broken.



## TOOLS:


- [Tweezers](#) (1)
- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)



## PARTS:

- [Samsung Galaxy Y Home Button](#) (1)

## Step 1 — Back Panel

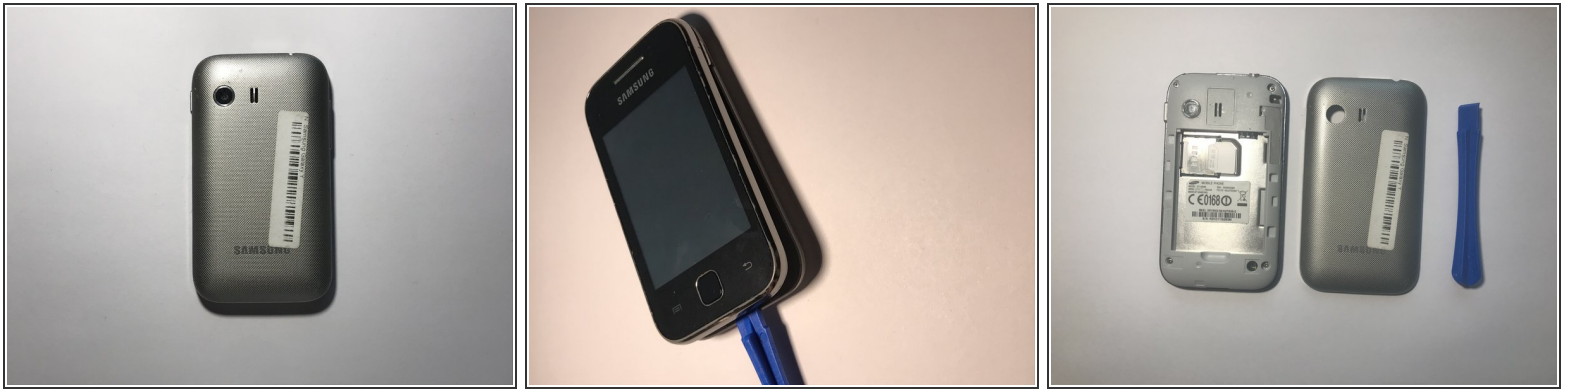


- Use the blue plastic opening tool to pry the back-panel off of the device.

## Step 2 — Touch Screen/Display



- Use the screwdriver with a Phillips #000 screwdriver head to remove the four 5mm screws located in the corner of the interior back panel.
- Remove the SD card as well by sliding the card out of it's slot.

## Step 3

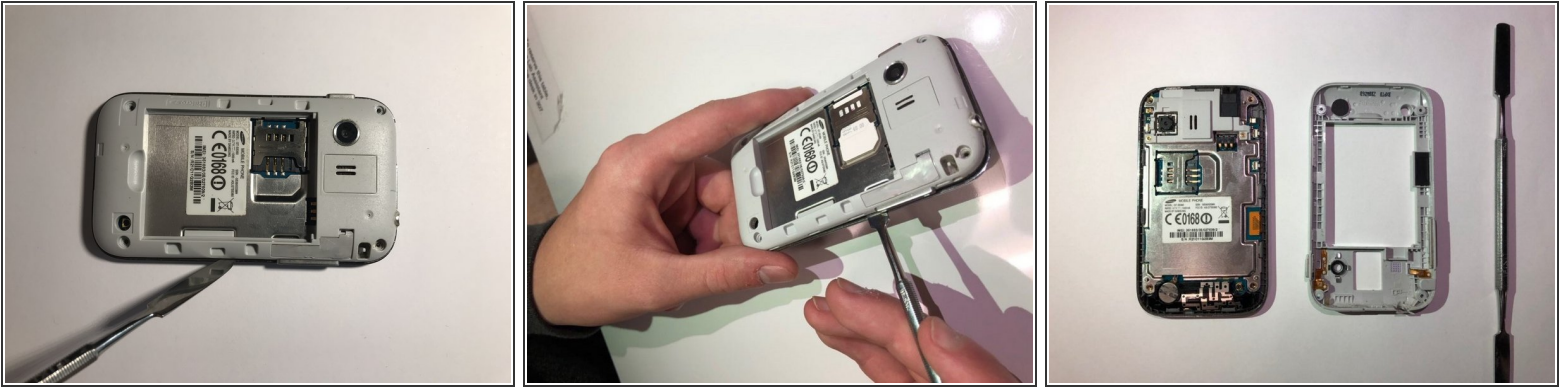

- Use the metal pry tool to separate the interior back panel from the interior hardware and screen.

⚠ Using a metal spudger may cause further damage to your device.

## Step 4



- Disconnect the orange motherboard connection, then remove the interior hardware from the front screen display.



## Step 5 — Home Button



- Remove the Home Button from the device.

To reassemble your device, follow these instructions in reverse order.