


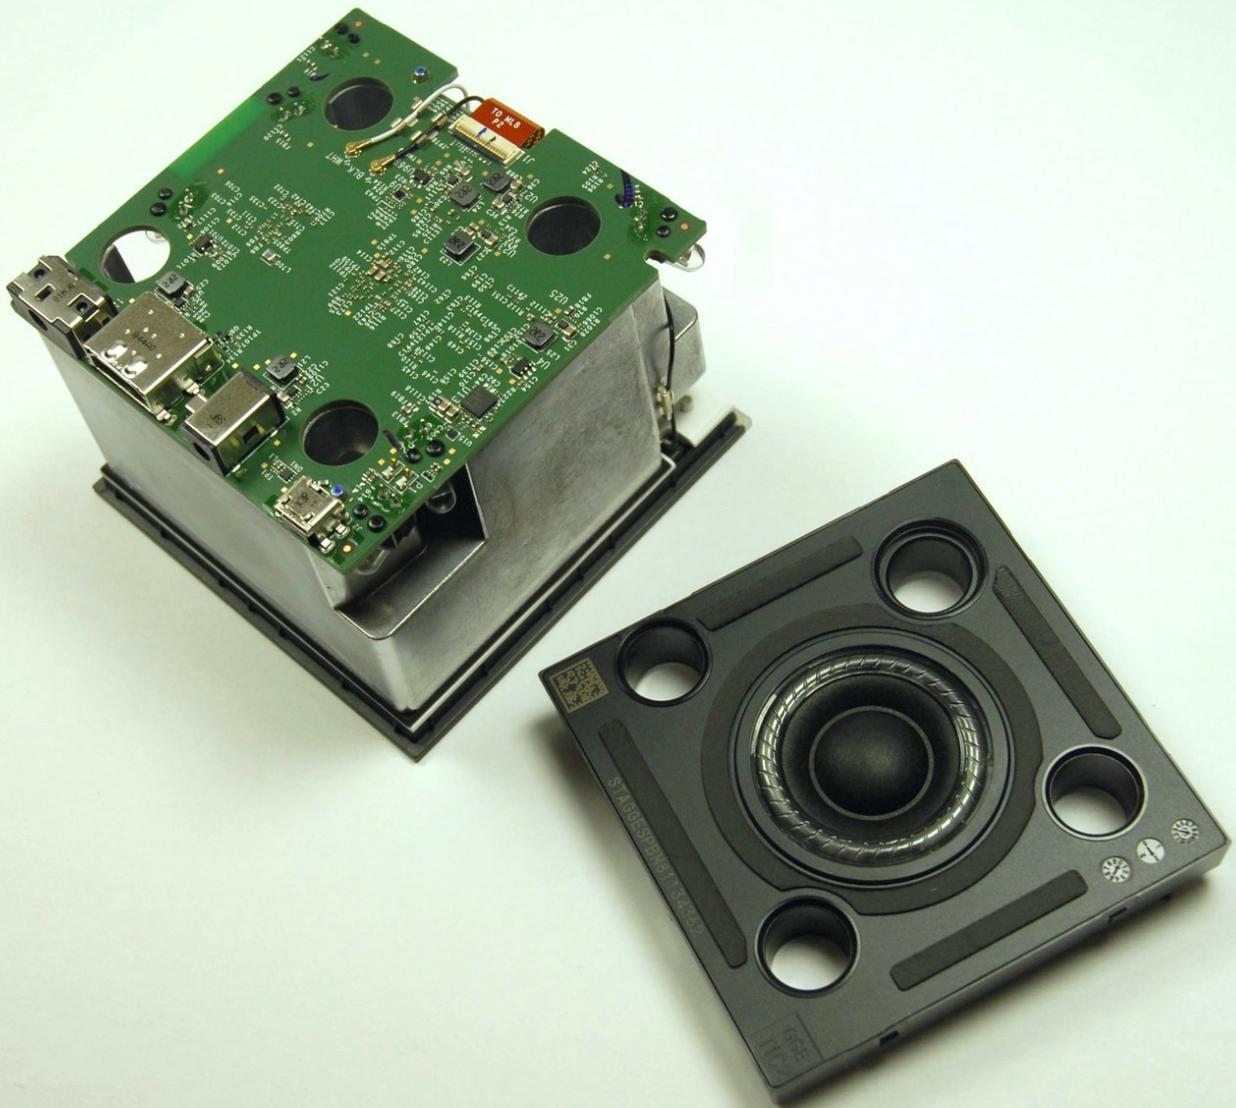

Amazon Fire TV Cube Speaker Replacement

Replace speaker to correct distorted audio issues.

Written By: Justice Davis




INTRODUCTION

This guide will walk you through the step-by-step procedures to remove and replace the speaker in your Amazon Fire TV Cube. These steps are simple, however some require considerable force. To complete this replacement you will need a small screwdriver and opening tool.

TOOLS:


- [Metal Spudger](#) (1)
 - [T10 Torx Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Speaker

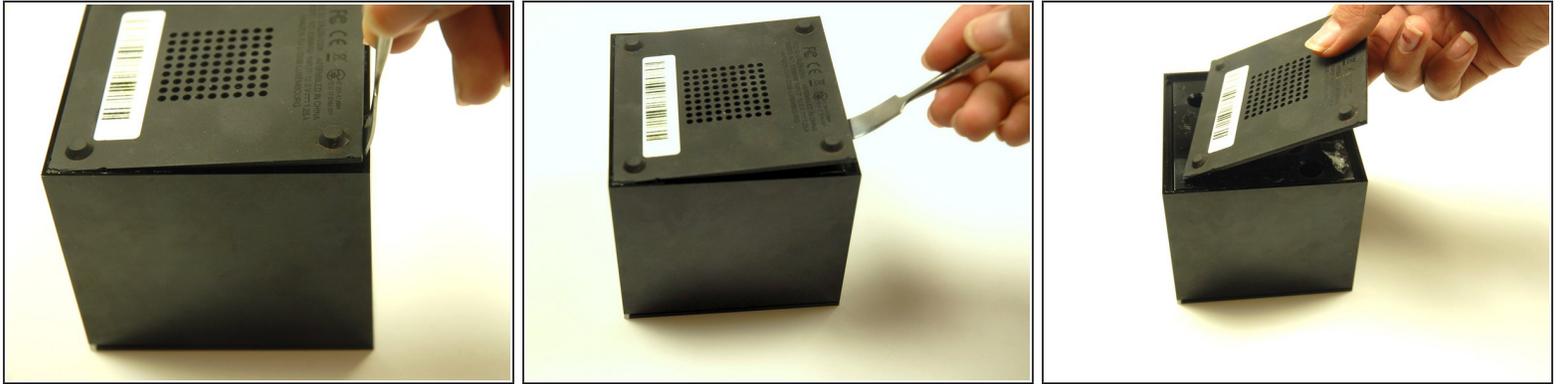


- Using a metal spudger, push down between the edge seals on the base and pry off the base.
- ⓘ Do not confuse the top thin layer of rubber with the thick palette that needs to be removed.
- ⓘ This may require substantial force.

Step 2

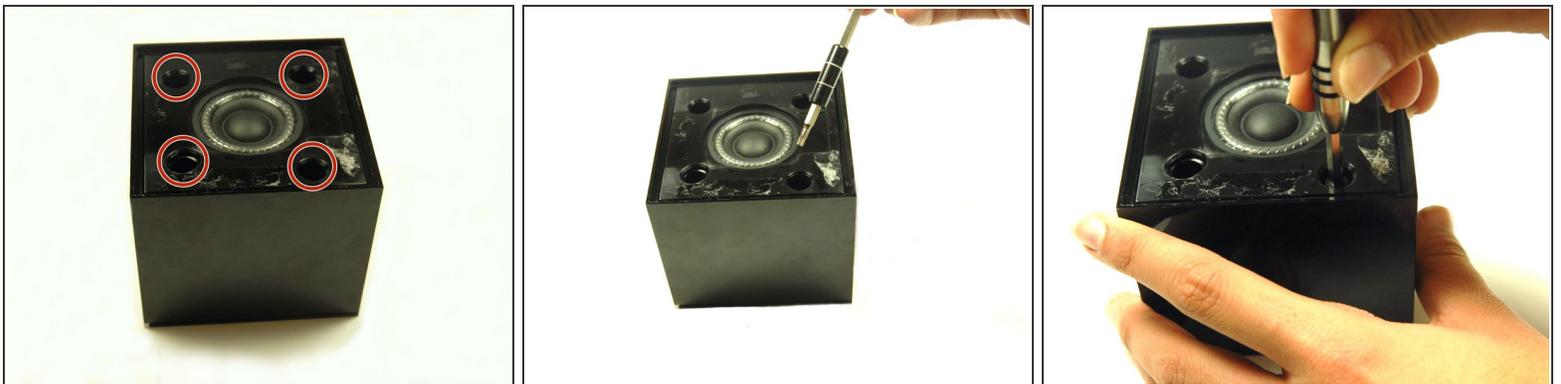



- Use the T-10 bit from the iFixit tool kit to unscrew the four 1.4 inch corner screws on top of the first layer.
- ⓘ There are 4 washers to go with each of the screws.

Step 3

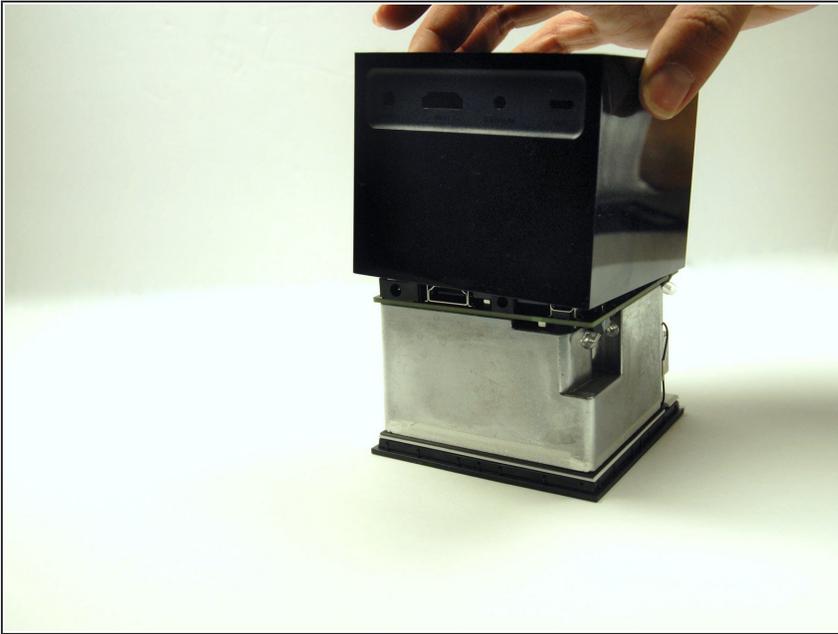

- Lift and remove the full frame.

Step 4

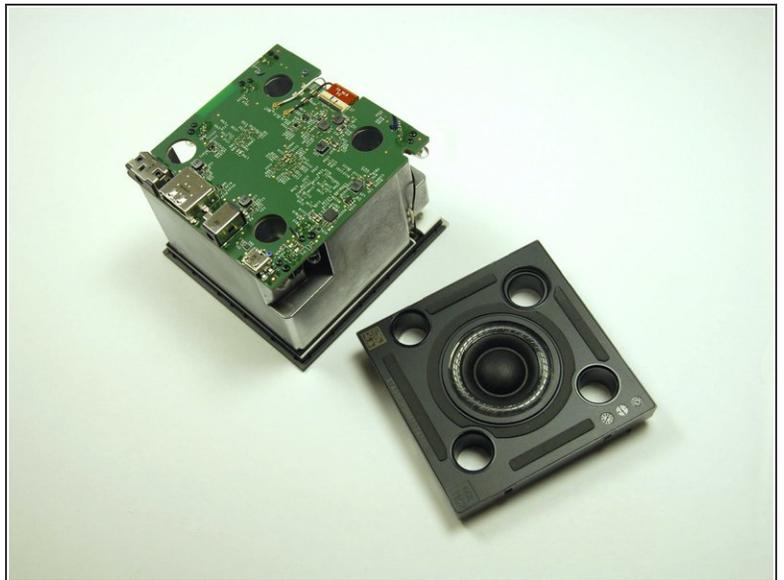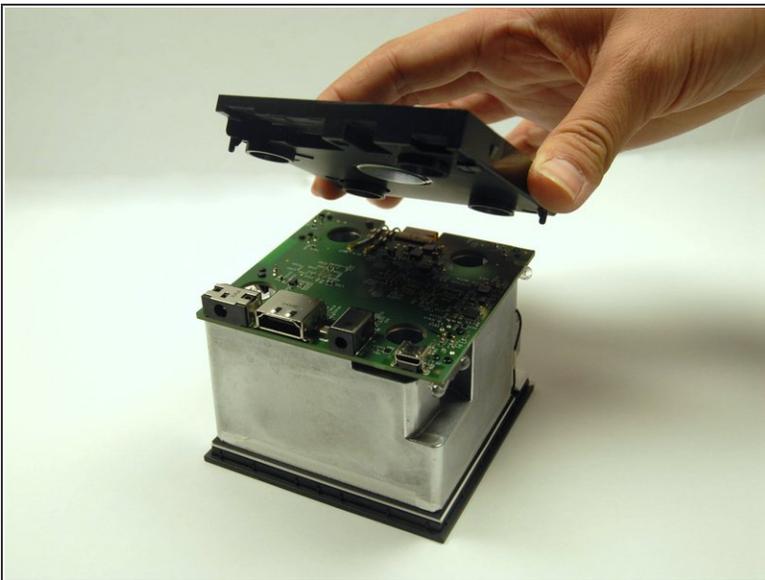

- Lift and remove the speaker.

- ☑ Carefully match the outlets on the speaker with the outlets on the motherboard.

To reassemble your device, follow these instructions in reverse order.