



Sony Vaio VPCEL17FX RAM Sticks Replacement

In this guide we will be taking out and...

Written By: Michael Miller



INTRODUCTION


In this guide we will be taking out and replacing the RAM Sticks.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — RAM Sticks

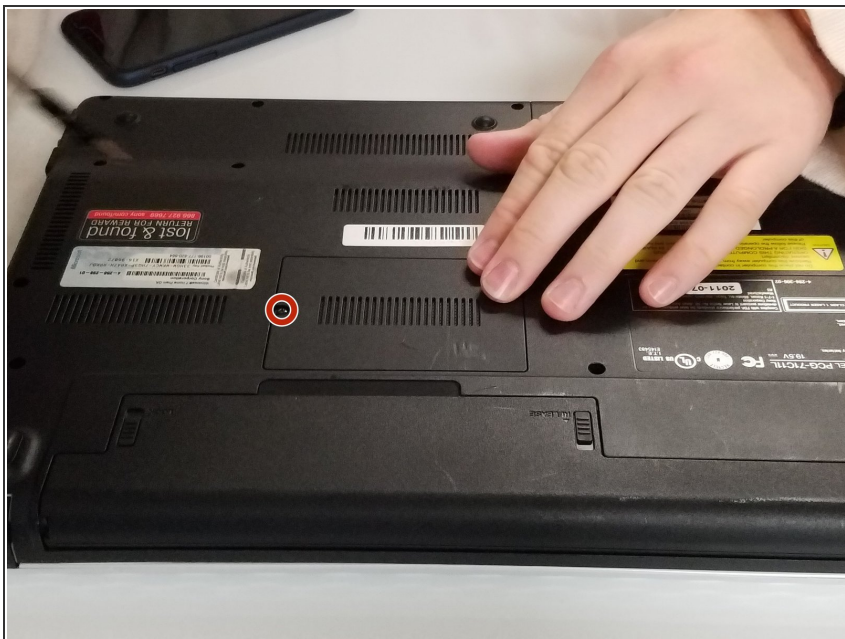


- Use a Phillips #00 screwdriver to unscrew the single RAM cover screw.

Step 2




- Pull the cover of the RAM sticks up.


Step 3

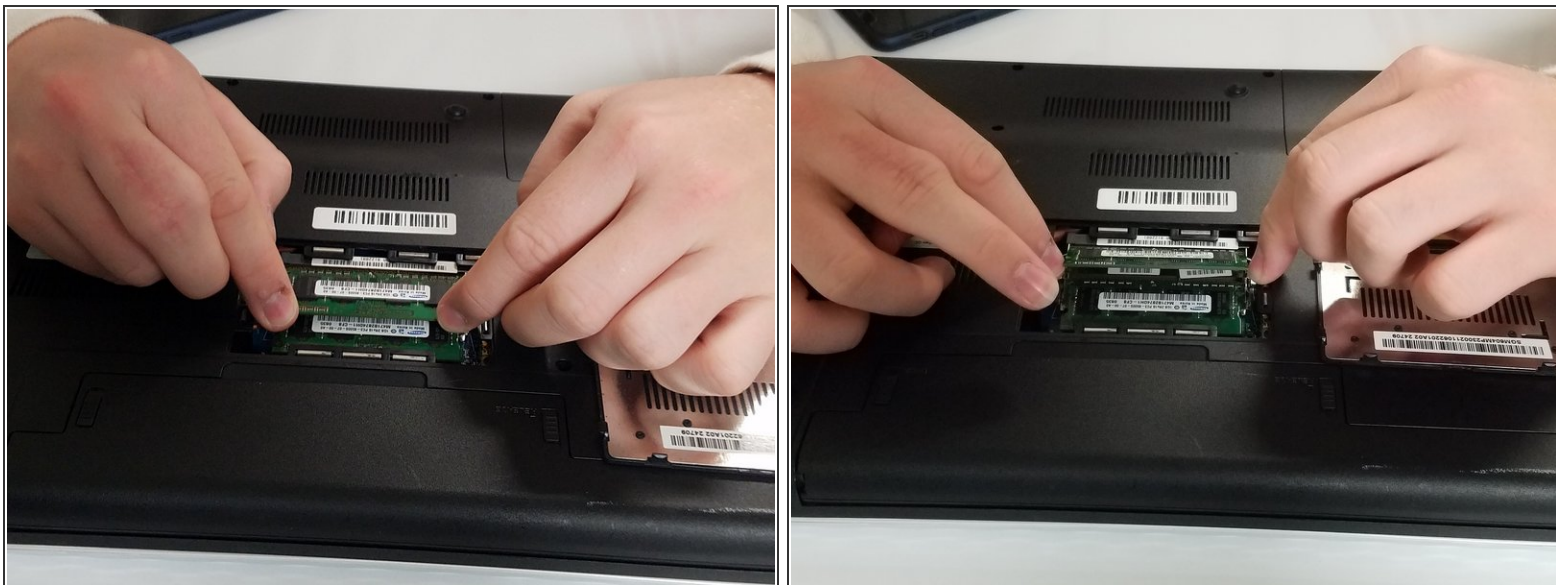

- Pull apart the metal sides on the sides of the top RAM stick to pop it up.
- Repeat that process with the bottom RAM stick.

Step 4

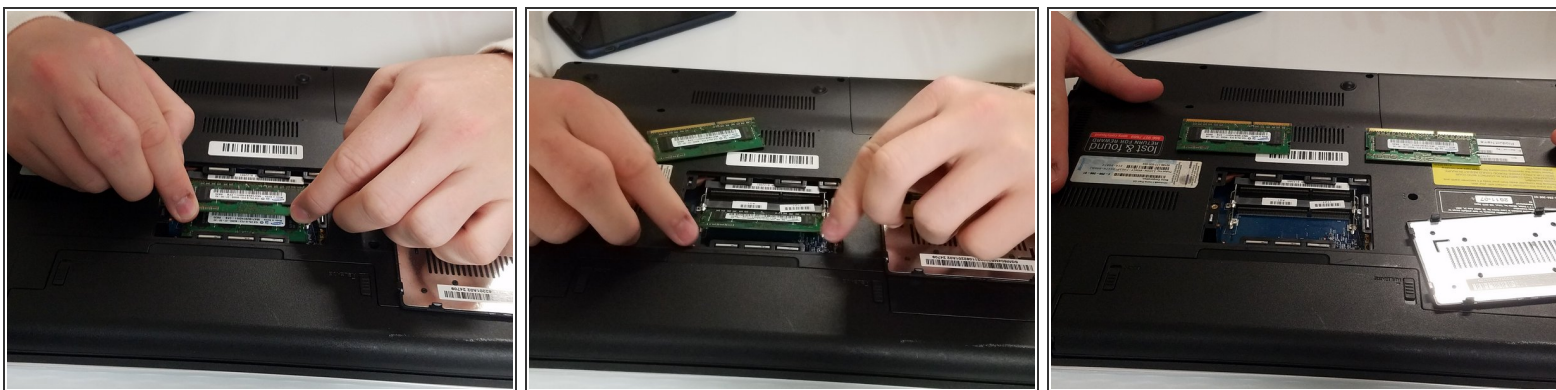

- Remove both RAM sticks.
 Take care removing the RAM sticks as they are fragile.

Congratulations!