



Asus ZenBook UX21e Speaker Module Replacement

This guide will assist in replacing either the left or right speaker module in the Asus ZenBook UX21e.

Written By: Landon Phillips



This document was generated on 2020-11-28 07:15:17 AM (MST).

INTRODUCTION

Removing the speaker module in the Asus ZenBook UX21e is relatively a simple process. By removing a few screws and prying off the housing, the speaker can be replaced in no time.



TOOLS:


- [T4 Torx Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Speaker Module




- Unscrew the bottom frame cover using the T4 Torx screwdriver by removing the eight 2mm screws around the frame.
- Unscrew the two 7 mm screws at the top of the frame using the T4 Torx screwdriver.

Step 2

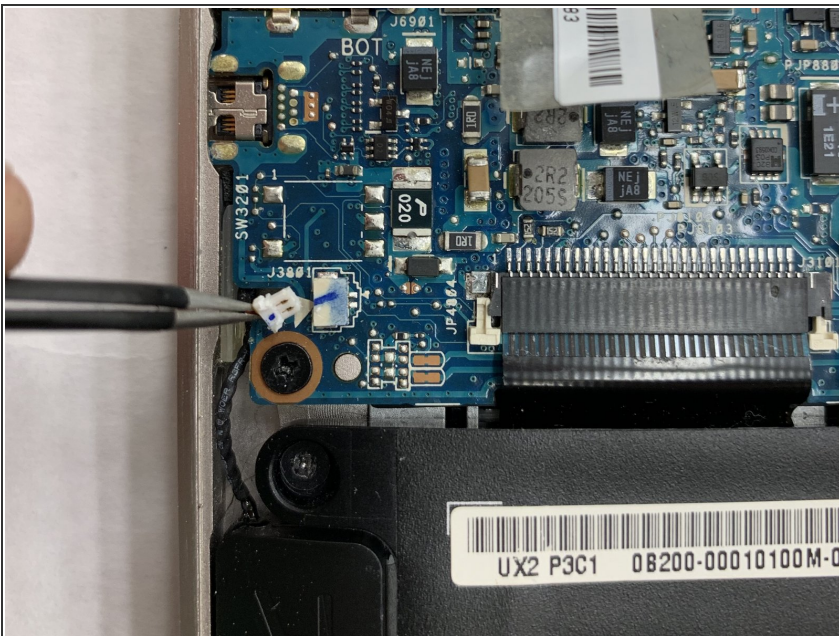

- Unplug the speaker wire from the motherboard with blunt or angled tweezers.

Step 3

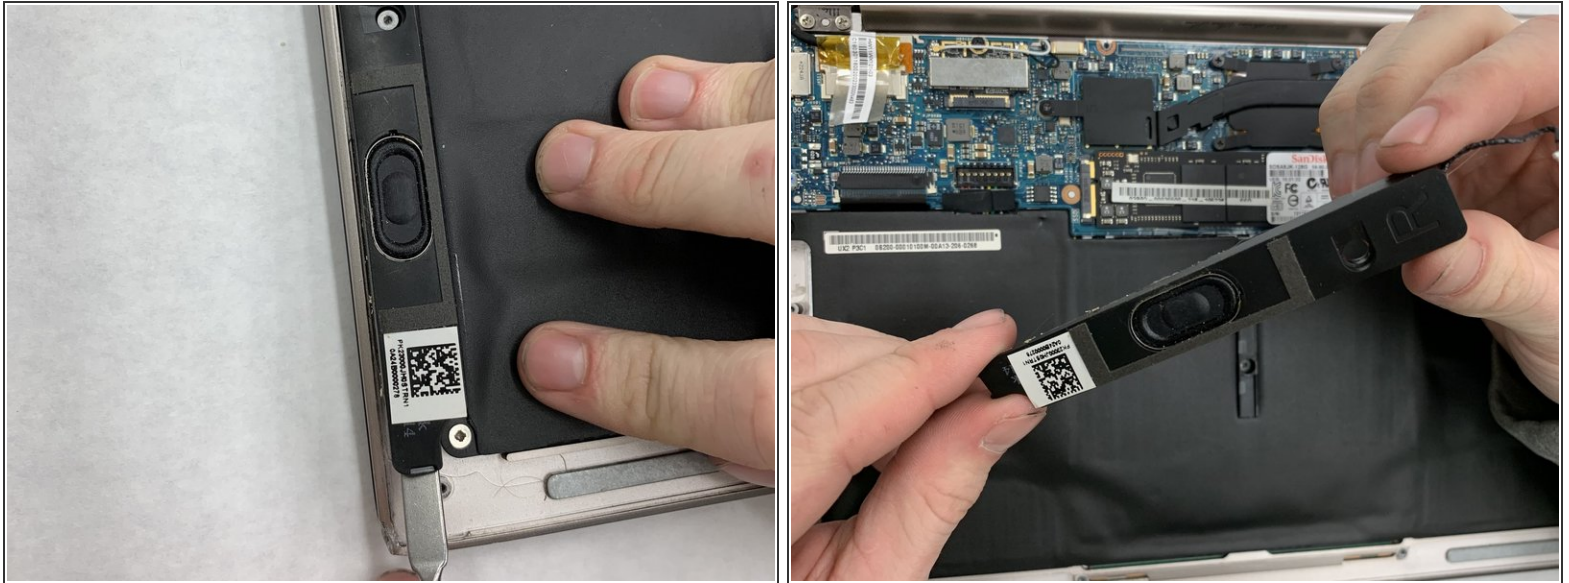

- Use a metal spudger or equivalent opening tool to pry and remove the speaker housing from the frame.

To reassemble your device, follow these instructions in reverse order.