



# Dell Latitude E6500 Battery Replacement

Written By: Anthony Sands





## Step 1 — Battery



- Place the laptop on a flat surface.
- Flip the laptop with the hinges facing outward.

## Step 2

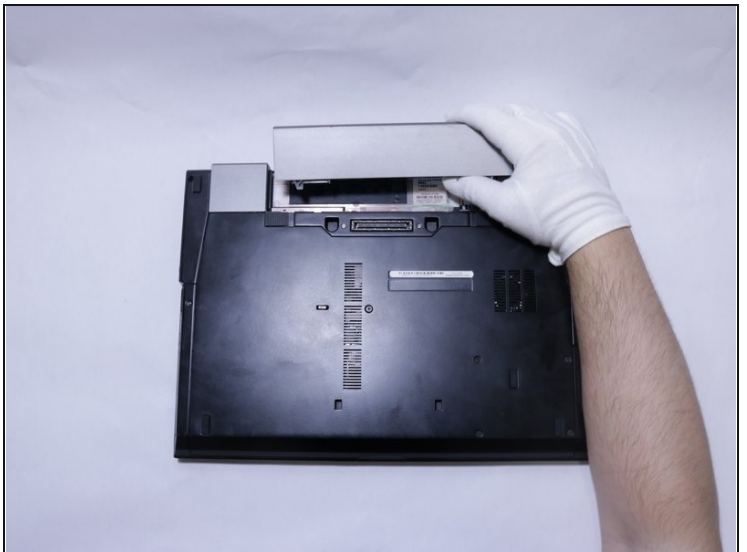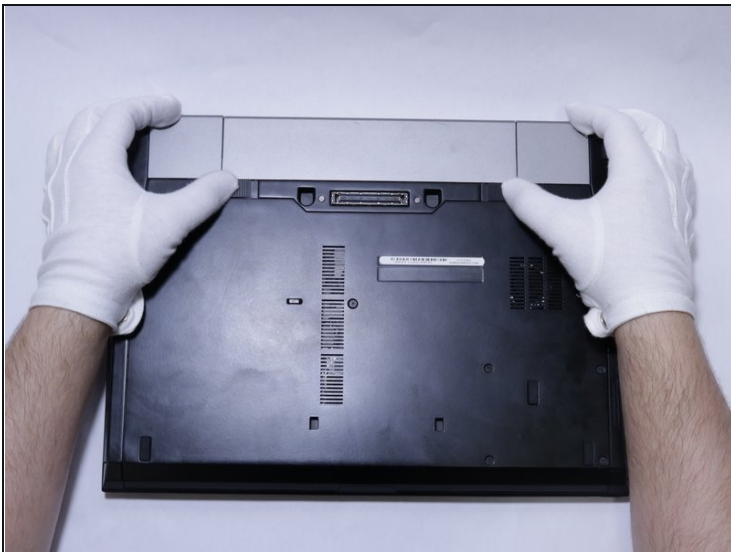

- Press the two buttons inward.
- Remove battery from its holster.

---

To reassemble your device, follow these instructions in reverse order.

