




# Acer Aspire 5742 Battery Replacement

Replace the battery in your Acer Aspire 5742.

Written By: Skylar MacDonald

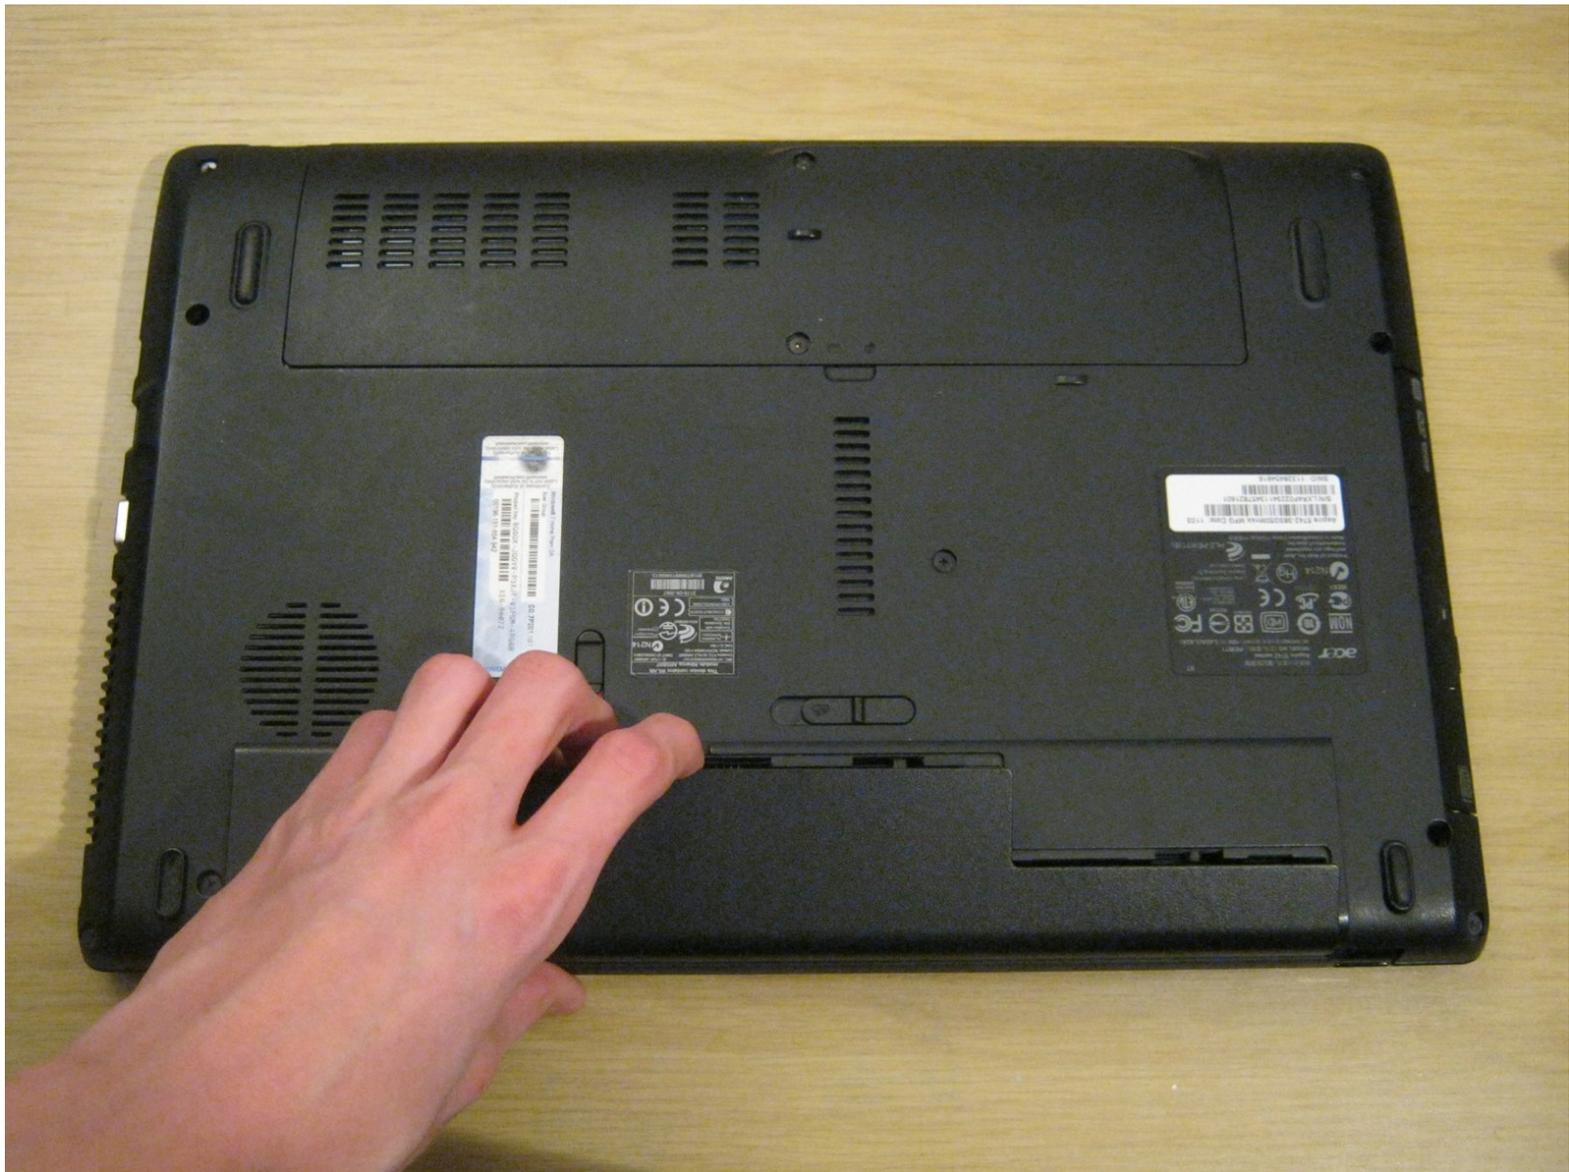

## INTRODUCTION

Replace or remove the battery in your Acer Aspire 5742 if it's not holding as much charge as it used to.

## Step 1 — Battery



- Move the battery catch to the "unlocked" position.
- Pull back the second spring-loaded battery catch until the battery pops up.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.