



HTC Desire 626s Battery Replacement

This is a device removal guide for your HTC...

Written By: Blake Bartlett



INTRODUCTION

This is a device removal guide for your HTC Desire 626s battery for replacement or hard reset.

TOOLS:

[T5 Torx Screwdriver](#) (1)
[JIS #000 Screwdriver](#) (1)
[iFixit Opening Tool](#) (1)

PARTS:

[35H00237-00M](#) (1)

Step 1 — Backplate




- Insert plastic opening tool in between the back cover and grey plastic.
- Gently work your way around the phone while sliding the tool.
- Gently pry on plastic cover as needed to release fasteners.

Step 2




- There are 7 screws you need to remove before prying the secondary cover off. You will need to use the JIS #000 screwdriver and the T5 Torx screwdriver to remove these screws.
- There is a screw under the "void" sticker.

Step 3

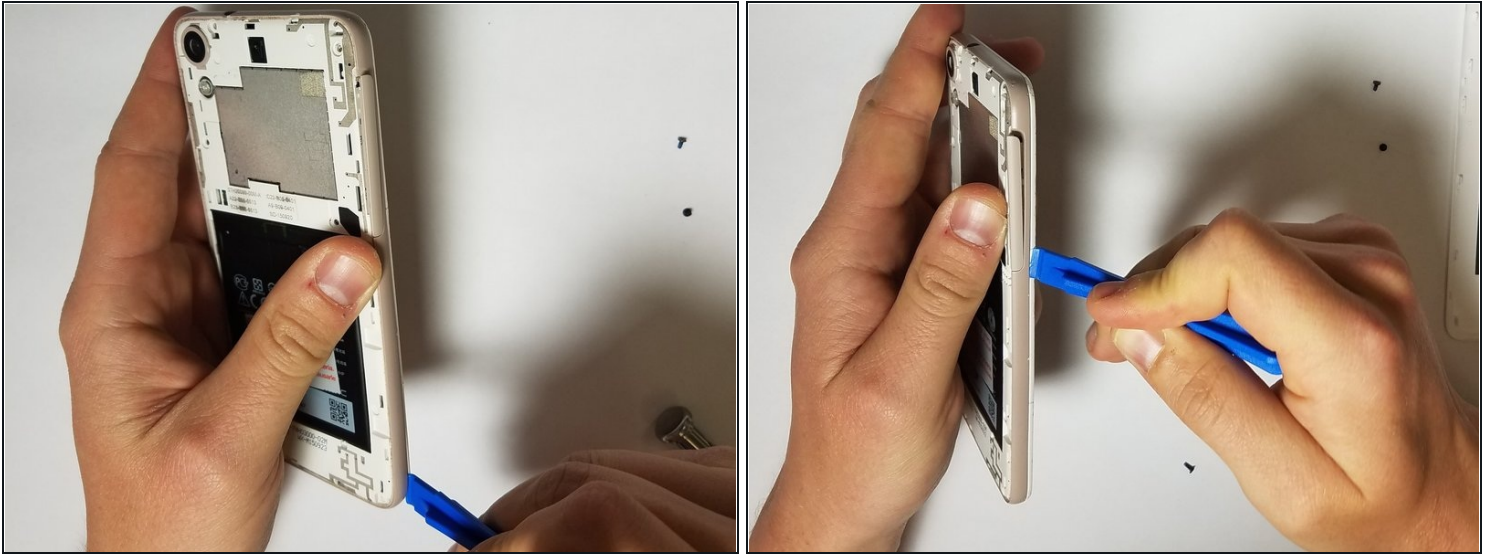

- Once the screws are removed, use the plastic opening tool to remove the remaining plastic cover.
- Start from the corners of the phone, and insert the plastic opening tool between the outer colored rim and the screen.
- This portion of the cover will be more difficult to remove than the initial back cover. Be patient and gentle around the button holes.

Step 4 — Battery

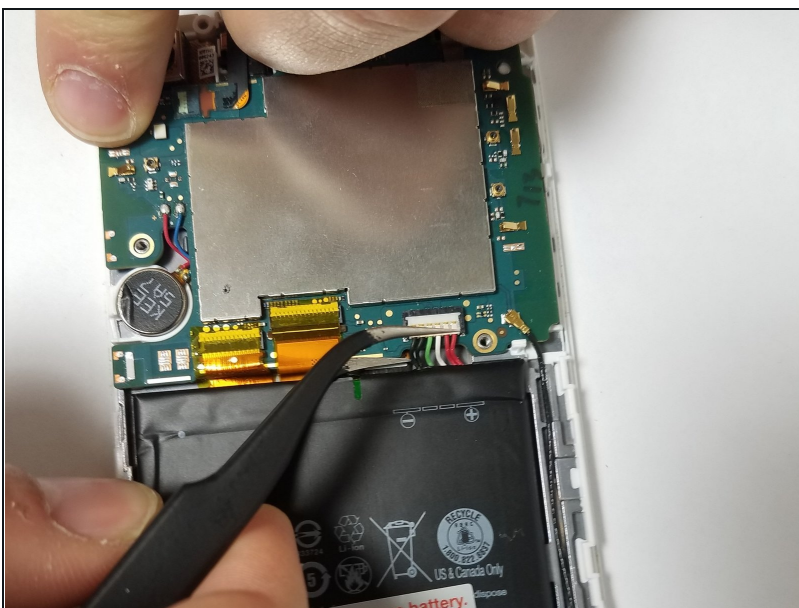

- By using the angled tweezers, you have to be careful when you try to remove the battery connection by start pulling the wires.

Step 5



- Using the plastic opening tool to separate the battery and remove it.

Step 6



- Pull the battery out

To reassemble your device, follow these instructions in reverse order.