




Asus ZenFone 5 MicroSD Card Replacement

This guide will show how to replace the MicroSD card for the Asus ZenFone 5.

Written By: Nathan Foster

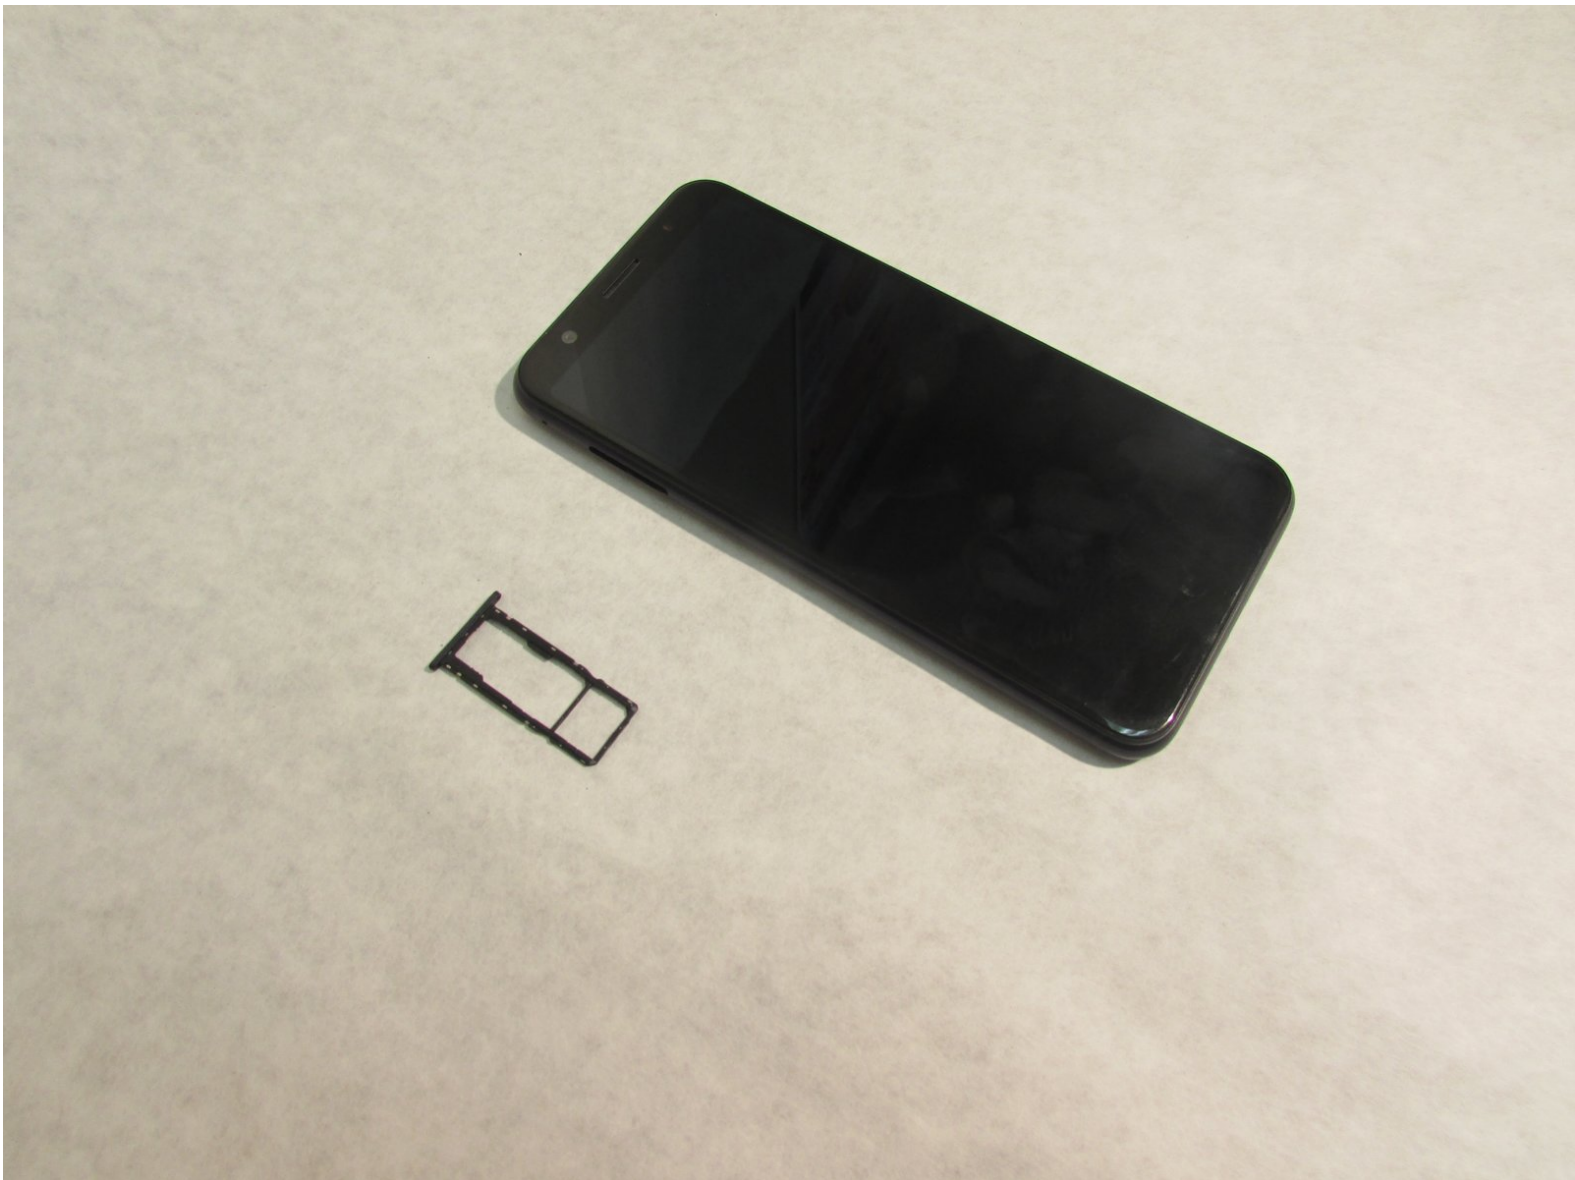

INTRODUCTION


The MicroSD card is one of the most common replacements for the ZenFone 5, and luckily, one of the easiest. The only tool required is a pin to fit in a small hole on the phone. If you do not have an advanced toolkit, some common household objects can also work, such as a thumbtack, needle, etc.



TOOLS:


- [Safety Pin](#) (1)
-

Step 1 — MicroSD Card

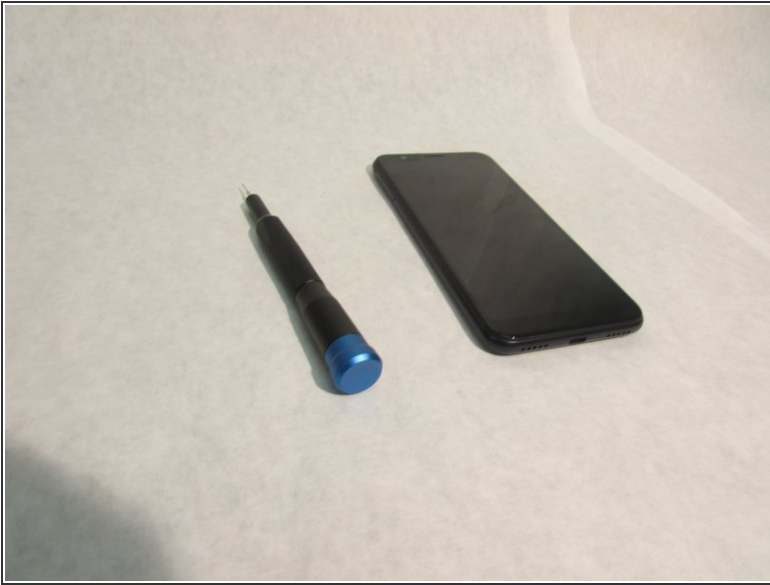

- If you have a case, remove it so you can see the sides of the phone.
- The slot for the MicroSD card, with the screen facing up, is on the left edge with a small hole.

Step 2

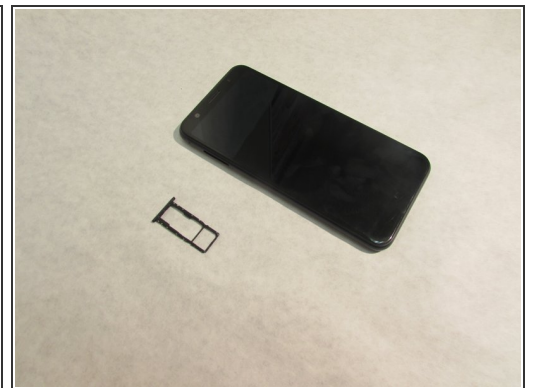

- Use your safety pin (or any tool with a small pin) to press into the hole until you feel a button being pressed.
- Pull the pin out of the slot and the cartridge will come with.
- Gently take out the MicroSD card.

To reassemble your device, follow these instructions in reverse order.