




# Verizon Ellipsis 8 Speaker Replacement

How to replace the speakers in a Verizon Ellipsis 8 tablet.

Written By: Sreedhar Kesari

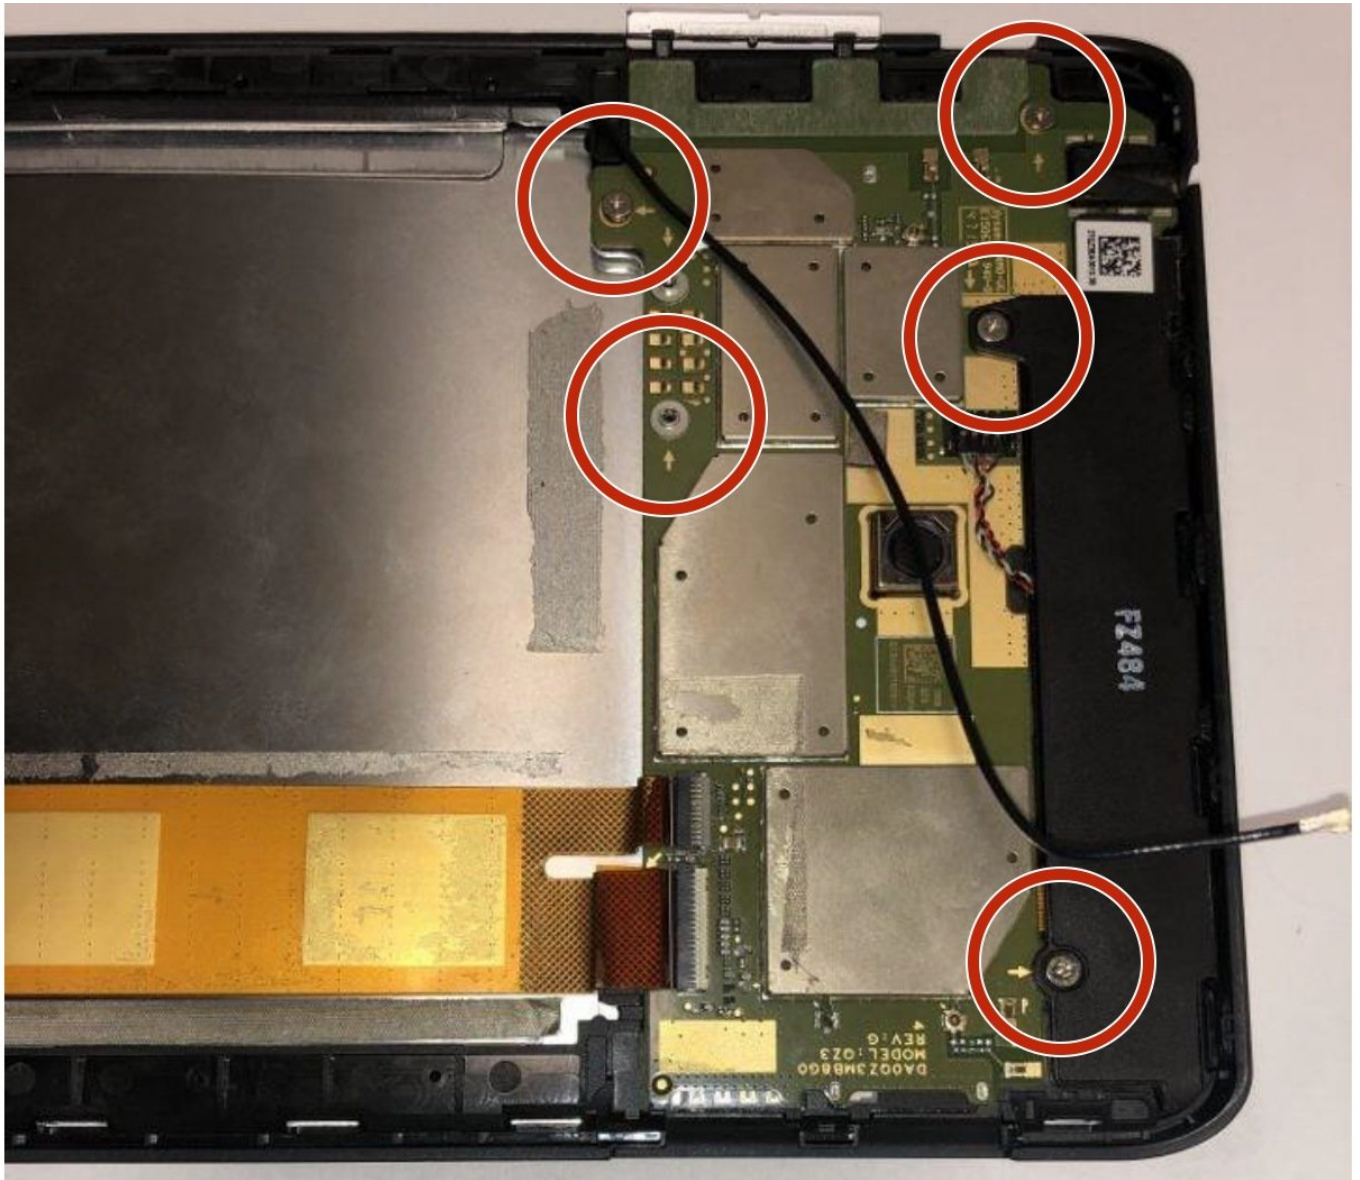

## INTRODUCTION

This guide details steps on replacing the motherboard and speaker system for the tablet.

The motherboard and speaker system are one unit, so replacing the speaker will require the replacement of the motherboard system as well.



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Battery



- Using a plastic opening tool, slowly pry along the seam running along the edge of the device until the back case snaps free.
- Remove the back case.

## Step 2

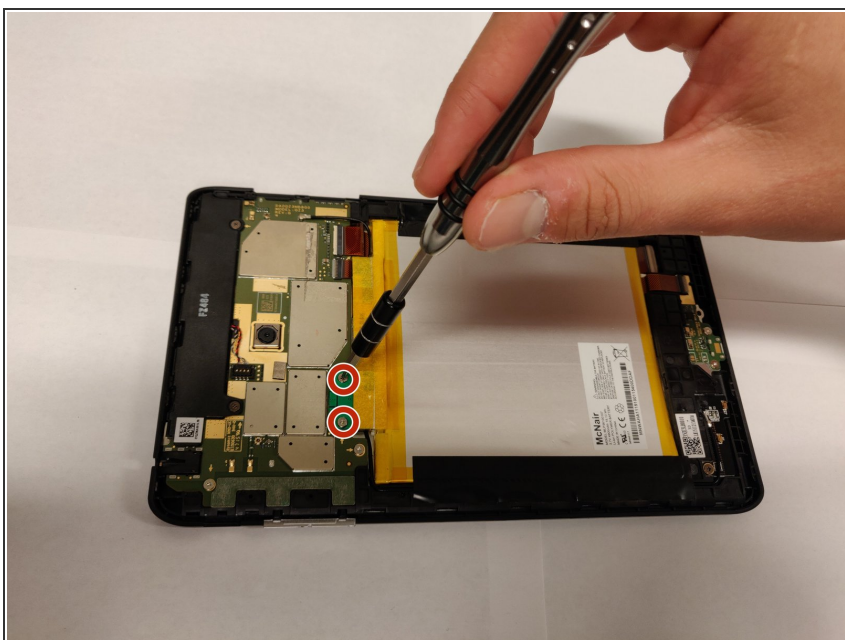

- Using a Phillips #00 screwdriver, remove the two 0.1 mm screws on the green bracket.

## Step 3



- Once you remove the backing of the Verizon Ellipsis 8, gently use the spudger to lift one side of the tape. Once you have lifted the tape, slowly remove it until it is completely off the battery.

## Step 4



- Lift and remove the battery from the device.



## Step 5 — Speaker



- Remove all 5 screws from their respective holes using the Phillips #00 screwdriver.
- Remove the speaker from the device.

To reassemble your device, follow these instructions in reverse order.