



Yuneec ST10 Plus Battery Replacement

How to replace the battery in the Yuneec ST10 Plus .

Written By: Justin Vega



INTRODUCTION

If you own a Yuneec ST10 Plus, there is a chance your battery will stop holding its charging capacity over time. The main causes of this issue are battery overheating, and the end of your battery charge/discharge cycles. Follow this step-by-step guide on how to replace your battery. No tools required and a quick replacement.

Step 1 — Battery




- Flip the controller upside down to access the battery compartment.
- Grab the compartment door and pull down.

Step 2



- Gently lift the blue tab connected to the battery in order to remove the battery from its housing.

Step 3

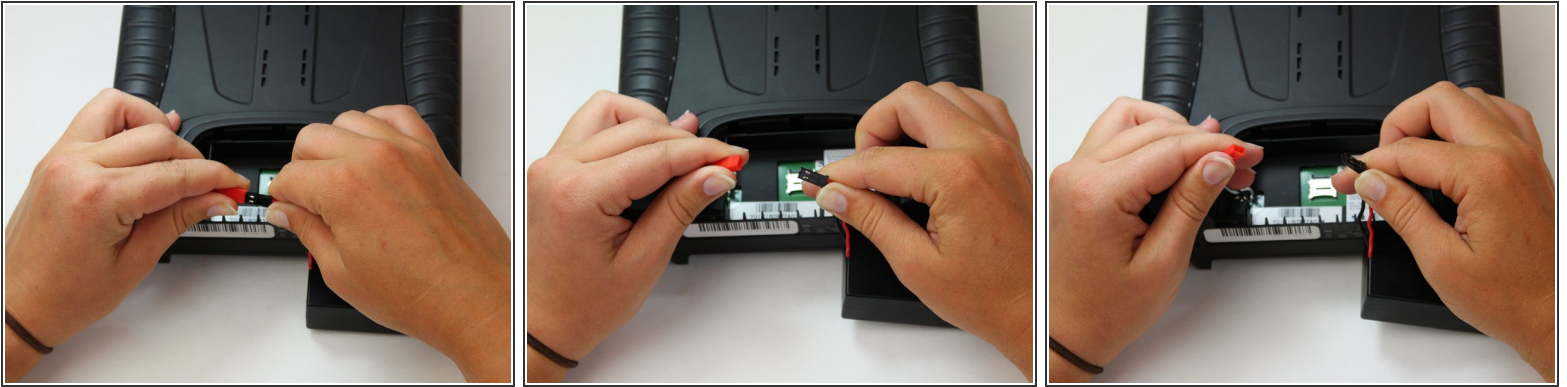

- To disconnect the battery from the remote, grab the red and black connectors.
- Pull gently on connectors until they disconnect.

To reassemble your device, follow these instructions in reverse order.