



Acer TravelMate P653-V-6882 ODD Module Replacement

Quick guide on removing the Optical Disk Drive (ODD) Module for the Acer TravelMate P653-V-6882.

Written By: Daniel Popovic



INTRODUCTION

If you need to swap out a faulty Optical Disc Drive (ODD) Module on the Acer TravelMate P653-V-6882, or if you're simply disassembling the TravelMate, you must remove the ODD module.

Here is a guide on how to replace the Acer TravelMate P653-V-6882 ODD module.

Step 1 — Battery Pack




- Turn the computer over so the base is facing up.
- Slide the battery lock to unlock position.

Step 2



- Slide the battery release latch to the right.
- ⓘ The battery pack will pop out.

Step 3

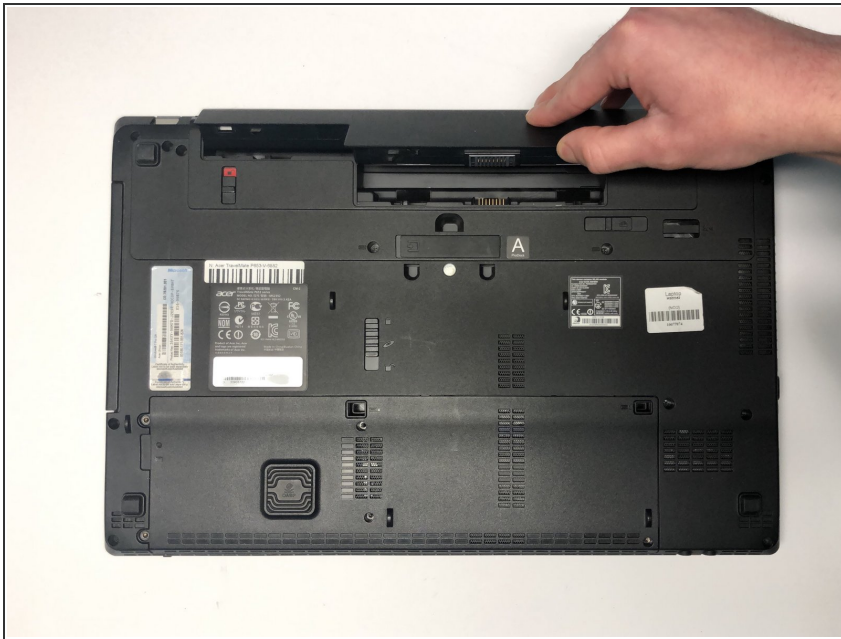

- Lift the battery up.
- Pull out the battery.

Step 4 — ODD Module



- Slide the ODD module latch down.
- ① The ODD module will pop out.

Step 5



- Remove the ODD module.

To reassemble your device, follow these instructions in reverse order.