



HP Pavilion 14-bk061st Hard Drive Replacement

This guide is to remove a hard drive on an HP...

Written By: Mehrab Daemi



INTRODUCTION

This guide is to remove a hard drive on an HP Pavilion 14-bk061st.

A hard drive is the component of a laptop or PC that stores data for a system, such as critical operating system data to everyday files users may store. If you're having trouble with your laptop refer to this [troubleshooting guide](#) to diagnose and repair issues.

If this is your first time removing a hard drive or even if you are an expert it is always recommended that you [back up the data](#) on your hard drive semi-regularly especially if you are opening up the laptop.



TOOLS:



- [iFixit Opening Tool](#) (1)
- [JIS #1](#) (1)



PARTS:


- [1 TB SSD](#) (1)
- [250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Back Panel

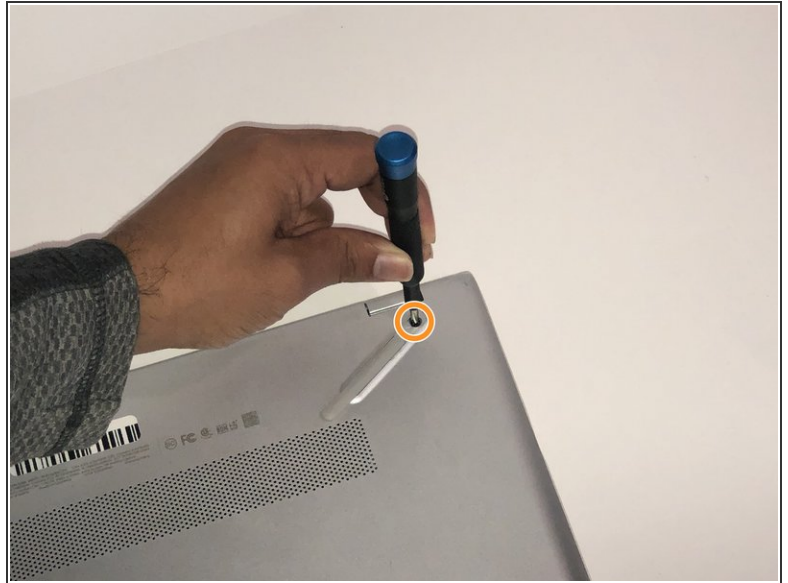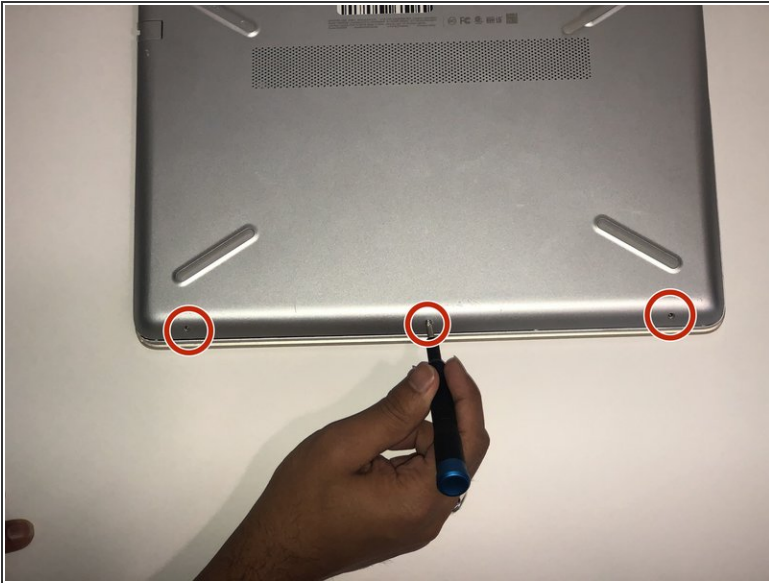

- Remove the three 5.7 JIS #1 screws from the bottom of the laptop.
- Remove the two 6.7mm JIS #1 screws from underneath the feet of the laptop close to the exhaust vent.

Step 2

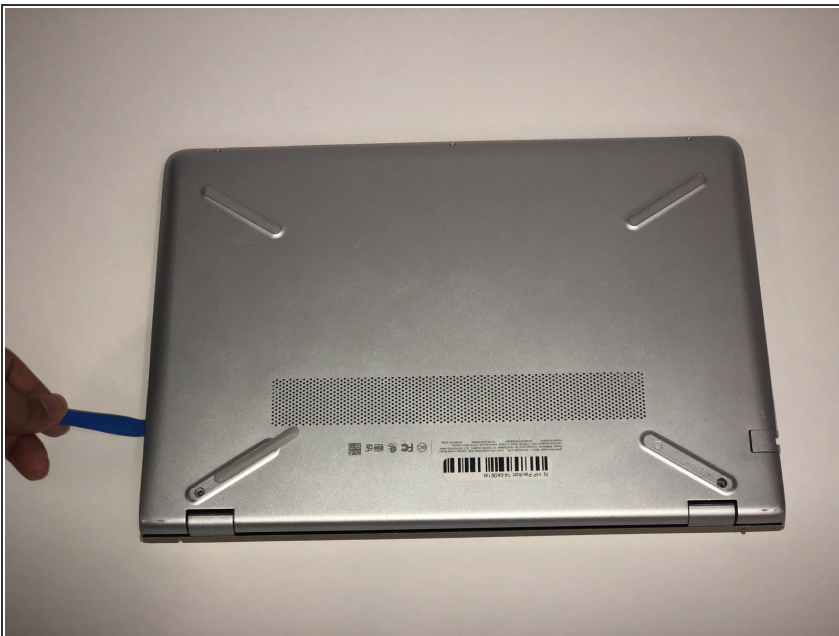


- Unclip the back plate using a plastic opening tool.

Step 3



- Carefully remove the back plate from the laptop.

Step 4 — Hard Drive

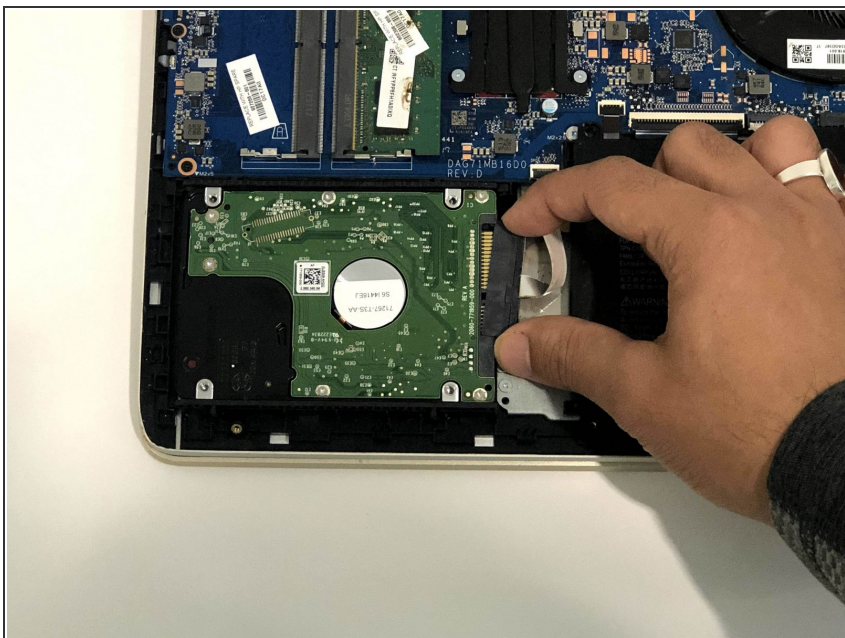

- Unplug the dual SATA/power cord from the hard drive.

Step 5



- Lift the hard drive out of its enclosure and take off the plastic/rubber siding used to secure the hard drive in place.

To reassemble your device, follow these instructions in reverse order.